

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny L-Shaped Raised Garden Bed (Model 845-904V00ND) Instruction Manual

Outsunny 845-904V00ND

Outsunny L-Shaped Raised Garden Bed

Model: 845-904V00ND

Brand: Outsunny

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Outsunny L-Shaped Raised Garden Bed, Model 845-904V00ND. This wooden elevated planter is designed for outdoor use, providing a dedicated space for growing vegetables, flowers, and herbs. Its L-shaped design allows for efficient use of corner spaces in your garden or patio.

The raised bed features a natural fir wood frame, which can be painted to match your aesthetic preferences. An inner liner is included to prevent soil erosion and assist with drainage, promoting healthy plant growth.

2. SAFETY INFORMATION

- Read all instructions carefully before beginning assembly and use.
- Ensure all fasteners are securely tightened during assembly. Periodically check and retighten as needed.
- Do not overload the planter with excessive soil or plant weight beyond the specified capacity.
- Keep children and pets away from the assembly area to prevent injury.
- Place the raised garden bed on a level, stable surface to prevent tipping.
- Inspect the wooden frame regularly for signs of wear, damage, or rot. Address any issues promptly to maintain structural integrity.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or defective, contact customer support.



Image: A brown cardboard box with the Outsunny logo, indicating '1x PACKAGE'. This represents the typical packaging for the raised garden bed.

Typical package contents include:

- Wooden side panels (various lengths for L-shape)
- Wooden corner posts and support beams
- Fasteners (screws, bolts)
- Inner non-woven fabric liner
- Assembly instructions (this manual)

4. SETUP AND ASSEMBLY

Assembly requires careful attention to detail. It is recommended to have two people for easier assembly. A power drill with appropriate bits will expedite the process.

Step-by-Step Assembly:

1. **Unpack and Identify Parts:** Lay out all wooden panels, posts, and hardware. Refer to the included parts list (if separate) to identify each component. Note that some pieces may appear similar but have slight length differences or specific labels for their position.
2. **Assemble Side Panels:** Begin by connecting the side panels to the corner posts using the provided fasteners. Ensure the panels are oriented correctly to form the L-shape. It may be easier to assemble the unit upside down initially, then flip it over.
3. **Attach Bottom Supports:** Secure the internal support beams that will hold the bottom planks or the soil directly. Ensure these are level and properly aligned.
4. **Install Inner Liner:** Carefully place the non-woven fabric liner inside the assembled wooden frame. Ensure it covers the bottom and sides, allowing for proper drainage while preventing soil loss.
5. **Secure Top Trim (if applicable):** Attach any decorative or structural top trim pieces. Verify that these pieces fit correctly and are securely fastened. If pieces do not align, double-check the orientation of the main panels.
6. **Final Placement:** Once assembled, carefully move the raised garden bed to its desired outdoor

location. Ensure the ground is level and stable.



Image: An assembled Outsunny L-Shaped Raised Garden Bed, filled with various plants, positioned on a green artificial turf.



Image: A close-up view of a corner joint of the wooden raised garden bed, showing the secure fastening of the panels.

5. OPERATING INSTRUCTIONS

Filling the Planter:

- Ensure the inner liner is properly installed to prevent soil from escaping and to aid drainage.
- Fill the raised bed with a suitable soil mix for your chosen plants. The total soil capacity is approximately 9.5 cubic feet (268.9 litres).
- Avoid compacting the soil too densely, as this can hinder root growth and drainage.

PLANTING SPACE

It can hold up to 9.5 cubic feet/ 268.9 litres of soil, ideal for planting herbs, flowers, vegetables and more



Image: A person watering plants in an Outsunny Raised Garden Bed, demonstrating the planting space.

Planting and Watering:

- Plant your desired vegetables, flowers, or herbs according to their specific spacing and depth requirements.
- Water plants regularly. The inner liner helps manage moisture, allowing excess water to drain while retaining necessary soil.

MORE SUFFICIENT PLANTING



Non-woven Fabric

Built-in breathable while preventing soil loss

Image: A close-up view of the black non-woven fabric liner installed inside the wooden raised garden bed, designed to prevent soil loss.

6. MAINTENANCE

- **Cleaning:** Periodically clean the exterior of the raised bed with a damp cloth to remove dirt and debris. Avoid harsh chemicals that could damage the wood.
- **Wood Care:** The natural fir wood is weather-resistant. To prolong its lifespan and maintain its appearance, you may consider applying a wood sealant or paint annually, especially if exposed to harsh weather conditions.
- **Inspection:** Regularly inspect all joints and fasteners to ensure they remain tight. Retighten any loose screws to maintain the structural integrity of the planter.
- **Liner Care:** Check the inner liner for tears or damage. Replace if necessary to continue effective soil retention and drainage.

7. TROUBLESHOOTING

- **Difficulty with Assembly / Misaligned Parts:**
If pieces do not fit or pre-drilled holes do not align, carefully review the assembly instructions. Ensure

you are using the correct parts for each step, as some panels may appear similar but have slight variations. Try reversing the orientation of panels if they are symmetrical. Do not force parts together, as this can cause damage.

- **Wobbly or Unstable Structure:**
Ensure all fasteners are fully tightened. Verify that the raised bed is placed on a completely level and stable surface. Uneven ground can cause instability.
- **Poor Drainage:**
Check that the inner liner is installed correctly and that there are no obstructions at the bottom preventing water from draining. Ensure the soil mix used allows for good drainage.
- **Missing or Damaged Parts:**
If you discover any missing or damaged components upon unpacking, do not proceed with assembly. Contact Outsunny customer support immediately for assistance.

8. SPECIFICATIONS

Model Number	845-904V00ND
Brand	Outsunny
Material	Fir Wood
Colour	Natural
Overall Dimensions	47.2" L x 47.2" W x 19.7" H (120 x 120 x 50 cm)
Long Planting Area	41.7" L x 16.9" W x 14.6" H (106 x 43 x 37 cm)
Short Planting Area	24.8" L x 16.9" W x 14.6" H (63 x 43 x 37 cm)
Soil Capacity	9.5 cubic feet / 268.9 litres
Weight Capacity	99 lbs (45 kg)
Special Feature	Weather Resistant



Image: A diagram illustrating the overall dimensions of the L-Shaped Raised Garden Bed, including length, width, and height.

9. WARRANTY AND SUPPORT

Warranty Information:

This Outsunny Raised Garden Bed comes with a **90-day warranty against manufacturer defects**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, neglect, improper assembly, or normal wear and tear.

Customer Support:

For any questions regarding assembly, missing parts, or warranty claims, please contact Outsunny customer support:

- **Manufacturer:** Aosom Canada
- **Contact Information:** Markham, Ontario, CA
- **Telephone:** 1-416-792-6088