

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Eureka Forbes](#) /
- › [Eureka Forbes Stellar Dry Vacuum Cleaner User Manual](#)

## Eureka Forbes GFCDSTER00000

# Eureka Forbes Stellar Dry Vacuum Cleaner User Manual

Model: GFCDSTER00000

## INTRODUCTION

---

Thank you for choosing the Eureka Forbes Stellar Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The Eureka Forbes Stellar Dry Vacuum Cleaner, showcasing its main unit, flexible hose, and floor cleaning attachment. The unit is grey and orange.

## IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Read all instructions before using this vacuum cleaner.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.

Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

## PRODUCT COMPONENTS

---

The Eureka Forbes Stellar Dry Vacuum Cleaner comes with a comprehensive accessory kit to facilitate various cleaning tasks.

- Main Vacuum Unit
- Flexible Hose
- Extension Pipes (Telescopic Wand)
- Floor Brush
- Crevice Nozzle
- Upholstery Brush
- Dusting Brush
- Dust Bag (2.5 Liters capacity)
- HEPA Filter
- Power Cord with Auto Cord Winder
- Blower Nozzle
- User Manual

## SETUP AND ASSEMBLY

---

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attaching the Flexible Hose:** Insert the larger end of the flexible hose into the suction inlet on the main vacuum unit until it clicks securely into place. For blower function, attach the hose to the blower outlet.
3. **Assembling the Extension Pipes and Floor Brush:** Connect the telescopic extension pipe to the handle end of the flexible hose. Adjust the length of the telescopic pipe by pressing the release button and extending or retracting. Attach the desired cleaning accessory, such as the floor brush, to the end of the extension pipe.
4. **Checking the Dust Bag and Filter:** Ensure the 2.5-liter dust bag is correctly installed inside the vacuum cleaner. Verify that the HEPA filter is also properly seated. Refer to the 'Maintenance' section for details on dust bag and filter installation.

5. **Power Connection:** Extend the power cord from the auto cord winder. Plug the power cord into a suitable electrical outlet.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

- To turn on the vacuum cleaner, press the Power button (usually marked with an 'I' or power symbol) located on the main unit.
- To turn off, press the Power button again.

### 2. Adjusting Suction Power (LED Vario Power)

The vacuum cleaner features LED Vario Power, allowing you to adjust suction strength for different cleaning needs.

- Use the power control buttons or dial on the main unit to increase or decrease suction. The LED display will indicate the current power level.
- Lower suction is suitable for delicate fabrics or light dusting.
- Higher suction is ideal for carpets, rugs, and heavily soiled areas.

# LED Vario Power

Full control to adjust the power as per the cleaning requirements



Image: A detailed view of the vacuum cleaner's control panel, highlighting the LED Vario Power display for adjusting suction levels.

## 3. Using Accessories

Select the appropriate accessory for the cleaning task:

- **Floor Brush:** For general cleaning of hard floors and carpets.
- **Crevice Nozzle:** For narrow gaps, corners, and edges.
- **Upholstery Brush:** For cleaning sofas, chairs, and other fabric surfaces.
- **Dusting Brush:** For delicate surfaces like shelves, blinds, and electronics.

## 4. Blower Function

The vacuum cleaner also features a powerful blower function.

1. Disconnect the flexible hose from the suction inlet.
2. Attach the flexible hose to the blower outlet, typically located at the rear or side of the main unit.

3. Turn on the vacuum cleaner. The blower will expel air, useful for clearing dust from hard-to-reach areas like window channels or computer keyboards.



Image: A user demonstrating the blower function, directing air to clear debris from a window channel.

## 5. Auto Cord Winder

To retract the power cord, gently pull the cord slightly and then press the auto cord winder button. The cord will automatically retract into the unit. Guide the cord to prevent tangling.

# Auto Cord Winder

Protects you from tripping on the cord and prevents cord damage as well



Image: The vacuum cleaner with its power cord extended, ready for use, highlighting the convenience of the auto cord winder.

## MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 1. Emptying and Replacing the Dust Bag

- The vacuum cleaner is equipped with a dust bag full indicator. When this indicator illuminates or changes color, the dust bag needs to be emptied or replaced.
- Unplug the vacuum cleaner from the power outlet.
- Open the dust bag compartment cover.
- Carefully remove the full dust bag. Dispose of the contents responsibly.
- Insert a new dust bag, ensuring it is properly seated and sealed.
- Close the dust bag compartment cover securely.

# Large Dust Bag

2.5 Liters large dust bag that aids with uninterrupted cleaning



Image: The vacuum cleaner with its dust bag compartment open, showing the large 2.5-liter dust bag ready for removal or insertion.

## 2. Cleaning the HEPA Filter

- The HEPA filter should be cleaned periodically, depending on usage.
- Unplug the vacuum cleaner.
- Locate and remove the HEPA filter (refer to your specific model's diagram if unsure).
- Gently tap the filter to dislodge loose dust. If washable, rinse under cool running water until water runs clear. Do not use detergents.
- Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a hairdryer or other heating devices.
- Reinsert the dry HEPA filter into its compartment.

## 3. Cleaning the Exterior

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Ensure no water enters the motor housing.

## 4. Storing the Vacuum Cleaner

- After use, retract the power cord using the auto cord winder.
- Store the accessories in their designated holders on the unit or in a separate storage bag.
- The vacuum cleaner has a twin parking position for convenient storage of the floor brush and extension pipe.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in. Power outlet malfunction. Power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Press the Power button firmly.
Low suction power.	Dust bag is full. Filter is clogged. Hose or attachment is blocked. Suction power setting is too low.	Empty or replace the dust bag. Clean or replace the HEPA filter. Check hose and attachments for obstructions and remove them. Increase the suction power using the Vario Power controls.
Unusual noise during operation.	Obstruction in the hose or brush. Motor issue (less common).	Turn off and unplug the unit. Check hose and brush for foreign objects and remove. If noise persists after checking for obstructions, contact customer service.
Dust escaping from the vacuum cleaner.	Dust bag not installed correctly or damaged. Filter not properly seated or damaged.	Ensure the dust bag is correctly installed and not torn. Replace if damaged. Check that the HEPA filter is properly seated.

## TECHNICAL SPECIFICATIONS

<b>Brand</b>	Eureka Forbes
<b>Model Name</b>	Forbes Stellar Vacuum Cleaner
<b>Model Number</b>	GFCDSTER00000
<b>Motor Horsepower</b>	1600 Watts
<b>Maximum Suction</b>	23 KPA (2300 Millimetres)

<b>Dust Bag Capacity</b>	2.5 Liters
<b>Filter Type</b>	HEPA Filter
<b>Special Features</b>	Automatic Cord Rewind, Bag, Portable, Spotless Cleaning, Wheels, Powerful Blower, LED Vario Power, 360° Swivel Wheels, Dust Bag Full Indicator
<b>Form Factor</b>	Canister
<b>Color</b>	Grey & Orange
<b>Product Dimensions (L x W x H)</b>	30.9L x 23W x 42.8H Centimeters
<b>Item Weight</b>	6 kg 260 g
<b>Noise Level</b>	82 dB
<b>Included Components</b>	Accessory Kit (13 items)
<b>Country of Origin</b>	China

## WARRANTY AND CUSTOMER SUPPORT

---

Eureka Forbes products are designed for durability and performance. For any service, support, or warranty-related queries, please contact Eureka Forbes customer service.

- **Manufacturer:** Eureka Forbes Limited
- **Address:** B1/B2, 701, 7th Floor, Marathon Innova, Off. Ganpatrao Kadam Marg, Lower Parel (West), Mumbai, Maharashtra – 400013.
- **Extended Warranty:** Extended warranty plans may be available from authorized providers. Please refer to your purchase documentation for details.
- For the most current contact information and service center locations, please visit the official Eureka Forbes website or refer to the contact details provided with your product packaging.



© 2025 Eureka Forbes Limited. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.