

EASYmaxx 12040

EASYmaxx Insect Protect Telescopic Window Screen User Manual

Brand: EASYmaxx | **Model:** 12040

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your EASYmaxx Insect Protect Telescopic Window Screen. Please read these instructions carefully before use and retain them for future reference.

The EASYmaxx Insect Protect is designed to provide effective protection against insects such as mosquitoes, wasps, flies, and spiders, allowing for ventilation without unwanted pests. Its telescopic design and pre-assembled net ensure quick and easy installation without the need for tools, drilling, or screws.



Image: EASYmaxx Insect Protect Telescopic Window Screen, anthracite color.



UNE PROTECTION FIABLE CONTRE LES INSECTES

contre les moustiques, les
guêpes, les araignées & Co.

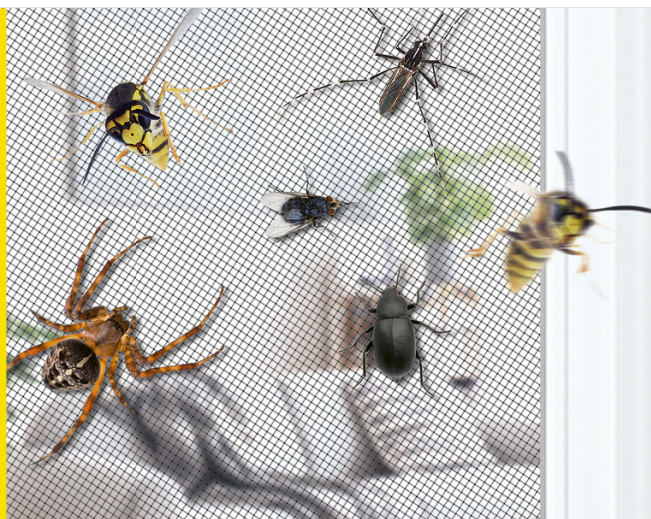


Image: Visual representation of reliable insect protection against various pests.

2. SAFETY INFORMATION

To ensure safe and proper use of your window screen, please observe the following safety guidelines:

- Ensure the window screen is securely installed to prevent accidental dislodgement.
- Do not lean on the screen or use it as a support. It is designed for insect protection, not as a safety barrier.
- Keep out of reach of small children to prevent tampering or accidental damage.
- Regularly inspect the screen for any damage or wear that might compromise its effectiveness.
- Do not attempt to modify the product. Use only as intended.

3. PACKAGE CONTENTS

The package includes the following components:

- 1 x Pre-assembled aluminum frame with integrated insect net.



Image: Diagram showing the pre-assembled frame with integrated net, highlighting no cutting or waste.

4. INSTALLATION INSTRUCTIONS

The EASYmaxx Insect Protect window screen is designed for quick and easy installation, typically within 3 minutes, without the need for drilling or screws.

4.1. Window Compatibility Check

Before installation, ensure your window meets the following requirements:

- **Interior Dimensions:** The screen is adjustable for interior window dimensions between 70 cm and 115 cm in width, and 80 cm and 135 cm in height.
- **Exterior Support Surface:** A minimum support surface of 25 mm is required on the exterior of the window frame.
- **Roller Shutter Clearance:** A minimum space of 30 mm is necessary between the window frame and any roller shutter.
- **Interior Clip Space:** A minimum space of 16 mm is required for the spring clips on the interior frame.

COMPATIBLE CADRE DE FENÊTRE

EASYmaxx
INSECT PROTECT



Image: Diagram illustrating window compatibility requirements, including minimum dimensions for exterior support, roller shutter clearance, and interior clip space.

The screen is compatible with plastic (PVC), aluminum, and wooden window frames.

SANS INSECTES EN 3 MIN !



* Dimensions intérieures des fenêtres

Image: Visual representation of compatibility with plastic, aluminum, and wooden window frames.

4.2. Step-by-Step Installation

1. **Assemble the Frame:** The frame comes pre-assembled. If corners are folded for packaging, simply connect them.
2. **Position in Window Frame:** Place the telescopic screen into the open window frame.
3. **Engage Spring Clips:** Secure the screen by engaging the lower spring clips into the corners of the window frame.
4. **Adjust Size:** Slide the telescopic frame to adjust it to the desired size until it fits snugly and securely within the window opening. The integrated net will adapt to the frame's expansion.

RAPIDEMENT INSTALLÉE - PLUS SIMPLE QUE JAMAIS :



Image: Four-panel illustration showing the installation steps: assembling corners, positioning in window, engaging clips, and sliding to adjust size.



Image: Diagram illustrating the telescopic frame and how the net adapts during adjustment, emphasizing no drilling, cutting, or gluing.

5. OPERATION

Once installed, the EASYmaxx Insect Protect window screen provides a reliable barrier against insects while allowing fresh air to circulate. The special black fabric offers optimal visibility and does not significantly darken rooms.

- The screen allows you to keep your windows open for ventilation without worrying about insects entering your home.
- Its breathable design ensures good airflow, making it ideal for sleeping with open windows.
- Enjoy undisturbed meals and cooking with open windows.

EASYmaxx
INSECT PROTECT



PROTÉGÉ !


**Les piqûres d'insectes avec une
éviter une bonne prévention.**

Image: Comparison showing reliable airflow through the EASYmaxx screen versus reduced airflow with standard fabric.

EASYMAXX INSECT PROTECT



Passage d'air fiable

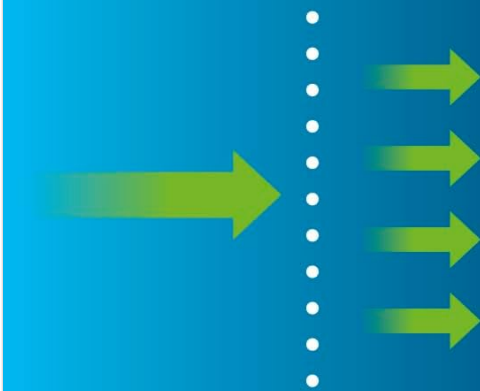

TISSU STANDARD



Moins d'air frais

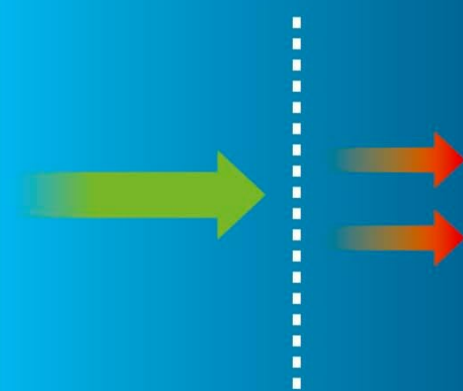


Image: Depiction of a family enjoying their home, protected from insects, with benefits like preventing insect bites, undisturbed meals, and sleeping with open windows.

6. MAINTENANCE AND CARE

To ensure the longevity and effectiveness of your window screen, follow these maintenance guidelines:

- **Cleaning:** The insect net can be gently cleaned with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check the net and frame for any tears, holes, or damage. The weather-resistant fabric is designed to be durable, but regular inspection helps maintain its integrity.
- **Storage:** For seasonal use, the screen can be easily removed, collapsed, and stored in a dry place during colder months.

7. TROUBLESHOOTING

If you encounter issues with your EASYmaxx Insect Protect window screen, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Screen does not fit the window opening.	Incorrect adjustment or window dimensions outside specified range.	Ensure window dimensions are within 70-115 cm width and 80-135 cm height. Re-adjust the telescopic frame to fit snugly.
Screen is loose or falls out.	Improper installation of spring clips or insufficient tension.	Verify that the spring clips are correctly engaged in the window frame corners. Ensure the frame is fully extended to create sufficient tension.
Insects are still entering.	Gaps around the screen or damage to the net.	Check for any gaps between the screen frame and the window frame. Ensure the net is free from tears or holes.

8. SPECIFICATIONS

Brand	EASYmaxx
Model Number	12040
Product Dimensions (L x W x H)	120 x 140 x 3 cm (for 1 piece)
Weight	1.6 kilograms
Color	Anthracite
Material	ABS, Aluminum, Nylon, Elastane, Steel
Installation Method	Clamps
Shape	Rectangular
Special Features	Telescopic Mosquito Net, Pre-assembled, No Cutting Required
Adjustable Width	70 cm - 115 cm
Adjustable Height	80 cm - 135 cm

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased the EASYmaxx

Insect Protect Telescopic Window Screen or visit the official EASYmaxx website. Please have your model number (12040) and purchase details available when contacting support.