

Philips HD3064/62

Philips 3000 Series Mini Rice Cooker HD3064/62 User Manual

Model: HD3064/62

1. INTRODUCTION

Thank you for choosing the Philips 3000 Series Mini Rice Cooker. This appliance is designed for efficient and versatile cooking, ideal for small families or individuals. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your rice cooker.

2. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using the appliance and save it for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Always unplug the appliance from the power outlet after use and before cleaning.
- Do not operate the appliance if the cord, plug, or other parts are damaged.
- Use only accessories recommended by Philips.
- Avoid touching hot surfaces. Use oven mitts or handles.
- Ensure the inner pot is properly placed before cooking.

3. PRODUCT OVERVIEW

The Philips 3000 Series Mini Rice Cooker is designed for convenience and performance. It features a compact design, multiple cooking functions, and a durable inner pot.



A front-angled view of the Philips 3000 Series Mini Rice Cooker, showcasing its compact white design with a subtle pink trim and digital display.

Key Components:

- **Main Unit:** The outer casing housing the heating element and control panel.
- **Inner Pot:** Features a 6-layer Bakuhanseki coating for even heating and durability.
- **Detachable Inner Lid:** For easy cleaning and maintenance.
- **Control Panel:** Digital display with buttons for 'Preset time/time', 'Start', and 'Menu/Cancel'.
- **Measuring Cup & Spatula:** Included accessories for precise measurements and serving.

PHILIPS




**0.54 L
compact size**

**6-layer
ceramic pot**

**Cooks in
just 30 mins**

The Philips Mini Rice Cooker from a frontal perspective, highlighting its digital timer display and intuitive control buttons for 'Preset time/time', 'Start', and 'Menu/Cancel'.

PHILIPS

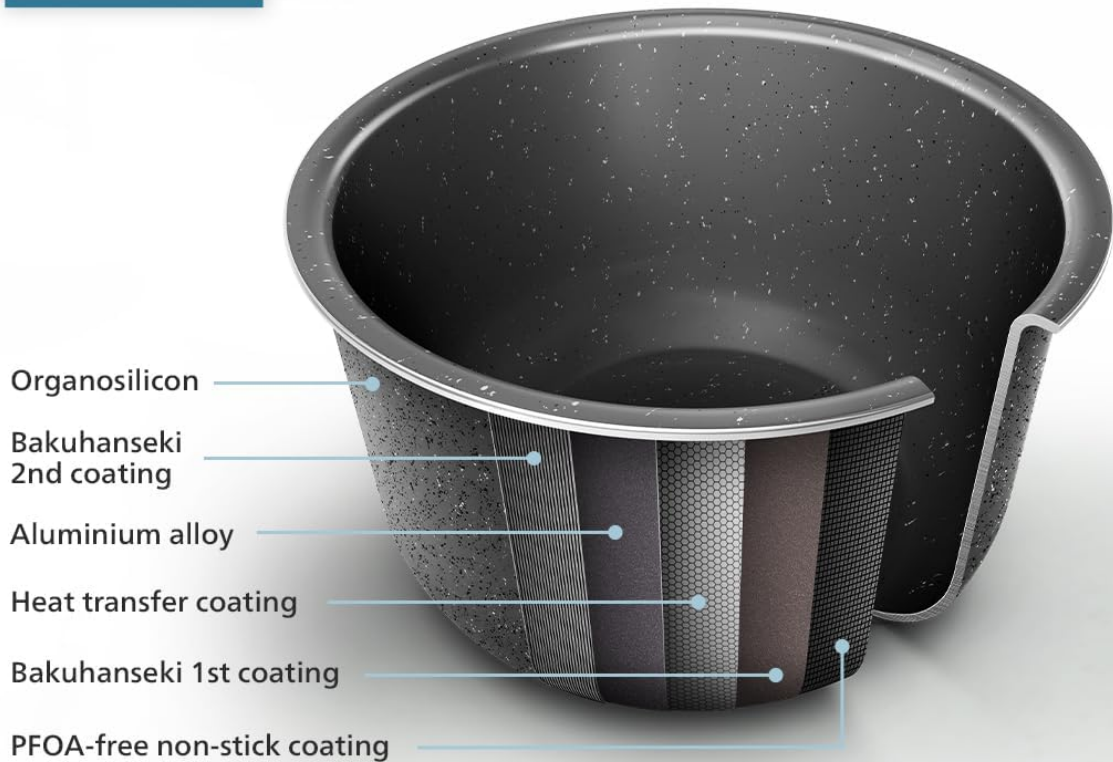

6-layer Bakuhanseki inner pot

For perfectly cooked rice, every time

A cross-section diagram of the inner pot, detailing its six layers, including Organosilicon, Bakuhanseki 2nd coating, Aluminium alloy, Heat transfer coating, Bakuhanseki 1st coating, and PFOA-free non-stick coating.

4. SETUP

Before first use, follow these steps to prepare your rice cooker:

1. **Unpacking:** Remove all packaging materials and stickers.
2. **Initial Cleaning:** Wash the inner pot, detachable inner lid, measuring cup, and spatula with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, level, and heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

This section guides you through the basic operation and various cooking functions of your Philips Mini Rice Cooker.

5.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly under running water until the water runs clear.
3. **Add to Inner Pot:** Place the washed rice into the inner pot.
4. **Add Water:** Add water according to the markings inside the inner pot or your preference. For optimal results, refer to the rice-to-water ratio guidelines in the full user manual.
5. **Close Lid:** Ensure the inner pot is correctly seated and close the lid securely.
6. **Select Menu:** Press the 'Menu/Cancel' button to cycle through the available cooking programs (e.g., Rice, Porridge, Soup, Steam, Cake).
7. **Start Cooking:** Press the 'Start' button. The indicator light will illuminate, and the cooking process will begin.
8. **Keep Warm:** Once cooking is complete, the appliance will automatically switch to 'Keep Warm' mode.



The rice cooker with its lid open, revealing perfectly cooked white rice in the Bakuhanseki coated inner pot, ready for serving.

5.2 Cooking Programs

The Philips Mini Rice Cooker offers 5 auto menus for diverse cooking needs:

- **Rice:** For cooking various types of rice to perfection.
- **Porridge:** Prepares creamy and delicious porridge.

- **Soup:** Ideal for simmering soups and stews.
- **Steam:** For steaming vegetables, fish, or other foods.
- **Cake:** Allows for baking simple cakes.

The appliance also features a **Fast Cooking** mode to save time and a **Dual Temperature Sensor** to prevent overflow and ensure consistent results.



The Philips Mini Rice Cooker positioned on a kitchen counter, demonstrating its versatility by being surrounded by different meals it can prepare, including rice, soup, and dessert.

PHILIPS



Non-stick & anti-scratch coating

Convenience & durability at its finest

A person using a spatula to serve fluffy white rice from the Philips Mini Rice Cooker into a small serving bowl, illustrating ease of use.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your rice cooker.

1. **Unplug:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Inner Pot:** The Bakuhanseki coated inner pot should be hand washed with a soft sponge and mild dish soap. Avoid abrasive cleaners or metal scouring pads to protect the non-stick coating.
3. **Detachable Inner Lid:** Remove the inner lid and wash it with warm soapy water. Rinse and dry thoroughly.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
5. **Accessories:** Wash the measuring cup and spatula with warm soapy water.
6. **Storage:** Ensure all parts are dry before reassembling and storing the appliance.

PHILIPS

Domestic Appliances

A close-up view of the Philips Mini Rice Cooker with its lid open, highlighting the easily detachable inner lid, designed for convenient cleaning and maintenance.

7. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is undercooked/hard	Insufficient water; incorrect cooking program selected.	Add more water next time; ensure 'Rice' program is selected.
Rice is overcooked/mushy	Too much water; rice not rinsed properly.	Reduce water next time; rinse rice thoroughly before cooking.
Appliance does not turn on	Power cord not properly plugged in; power outage.	Check power connection; verify power supply.
Lid does not close properly	Inner pot not seated correctly; food debris obstructing.	Ensure inner pot is fully inserted; clean lid and rim.

If the problem persists, please contact Philips customer support.

8. SPECIFICATIONS

- **Model:** HD3064/62
- **Capacity:** 0.54 Liters
- **Voltage:** 220 Volts
- **Power Source:** Electric
- **Material:** Ceramic, Non-stick Coated (Inner Pot)
- **Item Weight:** 2.2 Kilograms
- **Product Dimensions:** 28.8D x 26.5W x 22.8H centimetres
- **Special Features:** Automatic Cooking, Dual Temperature Sensor, Fast Cooking Mode
- **Mounting Hardware:** Measuring Cup, Spatula

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Philips website. For technical support, spare parts, or service, please contact Philips customer support in your region.

You can also download the official user manual in PDF format for more comprehensive details:[Download User Manual \(PDF\)](#)