

[Manuals.plus](#) /

› [Smeg](#) /

› SMEG Stovetop Whistling Kettle CKLW2001BL User Manual

Smeg CKLW2001BL

SMEG Stovetop Whistling Kettle CKLW2001BL User Manual

Model: CKLW2001BL

INTRODUCTION

Thank you for choosing the SMEG Stovetop Whistling Kettle. This kettle combines iconic 50s retro style with modern functionality, designed to enhance your tea and coffee brewing experience. Crafted from premium stainless steel with a durable enamel finish, it is built for lasting performance and aesthetic appeal. This manual provides essential information for the safe and efficient use and maintenance of your new kettle.

SAFETY INSTRUCTIONS

- Always ensure the kettle is placed on a stable, level surface.
- Do not fill the kettle beyond the maximum fill line to prevent boiling over.
- Use caution when handling the hot kettle. The body of the kettle will be hot. Always use the cool-touch handle.
- Keep children and pets away from the stovetop and hot kettle.
- Do not leave the kettle unattended while heating.
- Ensure the spout cap is properly closed before heating to allow the whistle to function.
- Always remove the kettle from the heat source immediately after it whistles.

SETUP

1. **Unpacking:** Carefully remove the kettle and all packaging materials. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the kettle thoroughly with warm, soapy water. Rinse well and dry completely.
3. **First Boil:** Fill the kettle with fresh water to the MAX line. Bring the water to a boil, then discard it. Repeat this

process 2-3 times to ensure cleanliness.

4. **Placement:** Place the kettle centrally on your stovetop burner. Ensure the kettle base is fully supported by the burner grates.



Image: The SMEG Stovetop Whistling Kettle placed on a gas stove, ready for heating. A hand is shown holding the ergonomic, cool-touch handle.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Remove the lid by lifting the knob. Fill the kettle with fresh water, ensuring it is between the MIN and MAX fill lines marked inside the kettle. Replace the lid securely.
2. **Placing on Heat Source:** Position the kettle on your gas, electric, or ceramic cooktop. Ensure the flame (for gas) does not extend beyond the base of the kettle.
3. **Heating Water:** Turn on the heat. The kettle will emit a loud whistle when the water reaches a rolling boil.
4. **Pouring:** Once the kettle whistles, turn off the heat. Using the cool-touch handle, carefully lift the kettle. Press the

lever on the spout cap to open it, then pour the hot water slowly and steadily.



Image: A view inside the kettle, clearly showing the 'MIN' and 'MAX' water level indicators for safe and optimal filling.



Image: A detailed shot of the kettle's spout, highlighting the lever mechanism that allows for easy opening and closing for pouring.

Video: Official SMEG video demonstrating the whistling kettle in use, showcasing its design and functionality.

MAINTENANCE AND CLEANING

Proper care will ensure the longevity and appearance of your SMEG kettle.

- **Daily Cleaning:** After each use, allow the kettle to cool completely. Wash the interior and exterior with warm, soapy water and a soft sponge or cloth. Rinse thoroughly and dry immediately to prevent water spots.
- **Lid and Spout Cap:** The lid is removable for easy cleaning of the interior. The spout cap can also be cleaned separately.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts white vinegar and water. Bring to a boil, then let it sit for 30 minutes to an hour (or longer for heavy buildup). Discard the solution, rinse thoroughly several times, and boil fresh water before use.
- **Dishwasher Safety:** This kettle is **NOT** dishwasher safe. Hand wash only.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the enamel finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle not whistling	Spout cap not fully closed or damaged.	Ensure the spout cap is securely closed. Inspect for damage.
Water not heating evenly/slowly	Incorrect burner size or heat setting. Limescale buildup.	Use a burner that matches the kettle's base size. Adjust heat. Descale the kettle.
Water has an unusual taste/odor	New kettle residue or mineral deposits.	Perform initial cleaning and several test boils. Descale if necessary.
Exterior stains or discoloration	Food splatters, high heat, or improper cleaning.	Clean immediately with mild soap and soft cloth. Avoid excessive heat on the exterior.

SPECIFICATIONS

- **Model Number:** CKLW2001BL
- **Brand:** Smeg
- **Color:** Pastel Green
- **Material:** Stainless Steel with Enamel Finish (Handle: Silicone)
- **Capacity:** 2.4 Quarts (2.3 Liters / 10 Cups)
- **Product Dimensions:** 11"D x 8"W x 10.5"H (including handle)
- **Item Weight:** 2.9 Pounds
- **Whistling Feature:** Yes
- **Stovetop Compatibility:** Gas, Electric, Ceramic (Induction compatible)
- **Dishwasher Safe:** No
- **UPC:** 812895025446



Image: A visual representation of the kettle's dimensions, including height, depth, and width.

WARRANTY AND SUPPORT

SMEG products are designed for quality and durability. For any questions, concerns, or warranty claims, please refer to the official SMEG website or contact their customer support. US-based SMEG experts are available to assist you

throughout the lifespan of your machine.
For more information, visit the official [Smeg Store on Amazon](#).

ADDITIONAL RESOURCES

Video: An official SMEG video demonstrating the kettle's features and use, including the whistling function.

© 2026 Smeg. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZY4M1J9>

More documents and user manuals: <https://manuals.plus/>