

[Manuals.plus](#) /

› [Smeg](#) /

› SMEG CKLW2001PB Retro Stovetop Whistling Kettle User Manual

Smeg CKLW2001PB

SMEG CKLW2001PB Retro Stovetop Whistling Kettle User Manual

Model: CKLW2001PB | Brand: Smeg

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your SMEG Retro Stovetop Whistling Kettle. Please read this manual thoroughly before first use and retain it for future reference. The kettle is designed for boiling water on various stovetop types, including induction.



Image: The SMEG Retro Stovetop Whistling Kettle in Pastel Blue, showcasing its design.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Do not fill the kettle beyond the maximum fill line to prevent boiling water from overflowing.
- Always ensure the lid is securely closed before heating.

- The kettle body and handle will become hot during and after use. Use oven mitts or a cloth when handling the hot kettle.
- Keep children and pets away from the kettle during operation.
- Do not place the kettle on an unstable surface or near the edge of a stovetop where it could be knocked over.
- Never heat an empty kettle, as this can damage the kettle and the stovetop.
- Ensure the whistle is properly seated on the spout before heating to ensure it functions correctly.
- Allow the kettle to cool before cleaning or storing.

PRODUCT OVERVIEW

Familiarize yourself with the components of your SMEG Stovetop Whistling Kettle:

- **Kettle Body:** Stainless steel construction with enamel finish.
- **Lid:** Removable for easy filling and cleaning.
- **Handle:** Ergonomic, anti-slip design for comfortable pouring.
- **Spout with Whistle:** Fixed, single-tone whistle with a drip-free design. Features an easy-open, flip-up spout cap.
- **Base:** Thick base for even heat distribution.
- **Water Fill Level Marker:** Located inside the kettle to indicate maximum fill.



Image: Interior view of the kettle, highlighting the maximum fill line for safe operation.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the kettle from its packaging. Retain packaging for future transport or storage.

2. **Initial Cleaning:** Before first use, wash the inside of the kettle with warm soapy water. Rinse thoroughly with clean water.
3. **Test Boil:** Fill the kettle with clean water up to the maximum fill line. Bring the water to a boil, then discard it. This cleans any manufacturing residues. Repeat this process 2-3 times.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Remove the lid and fill the kettle with fresh, cold water. Do not exceed the "MAX" fill line indicated inside the kettle. Ensure the lid is securely replaced.
2. **Placing on Stovetop:** Place the kettle centrally on a stovetop burner. The kettle is compatible with various stovetops, including induction. Ensure the burner size is appropriate for the kettle's base to ensure efficient heating and prevent handle overheating.
3. **Heating Water:** Turn on the stovetop to a medium-high heat setting. Avoid using excessively high heat, which can damage the kettle's finish or cause water to boil over rapidly.
4. **Whistling Indication:** As the water boils, the fixed, single-tone whistle will sound, indicating the water is ready.
5. **Pouring:** Using oven mitts or a heat-resistant cloth, carefully remove the kettle from the heat source. Use the ergonomic handle and flip up the spout cap to pour the hot water.
6. **Cooling:** Allow the kettle to cool down completely before refilling or cleaning.



Image: The kettle positioned on a stovetop burner, ready for heating.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild detergent and rinse thoroughly. Dry immediately to prevent water spots.
- **Interior Cleaning:** The removable lid allows for easy access to the interior. Wash with warm soapy water and a soft sponge. Rinse thoroughly.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a solution of equal parts white vinegar and water, or use a commercial descaling product according to its instructions. Bring the solution to a boil, then let it sit for 30-60 minutes (or as directed by descaler). Empty and rinse the kettle several times with fresh water.
- **Dishwasher Safety:** The kettle is dishwasher safe. However, hand washing is recommended to preserve the finish and extend the product's lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle not whistling.	Spout cap not fully closed or whistle not properly seated.	Ensure the spout cap is fully closed and the whistle is securely in place.
Water boiling over.	Kettle overfilled.	Do not fill past the maximum fill line.
Kettle taking too long to boil.	Low heat setting or limescale buildup.	Increase heat setting (avoiding excessively high heat). Descale the kettle if necessary.
Handle or lid knob too hot to touch.	Normal operation, especially with high heat.	Always use oven mitts or a heat-resistant cloth when handling the hot kettle.

SPECIFICATIONS

Model Number: CKLW2001PB

Capacity: 2.4 Quarts

Material: Stainless Steel (Kettle Body, Lid), Plastic or Silicone (Handle)

Color: Pastel Blue

Dimensions (L x W x H): 11"D x 8"W x 10.5"H

Item Weight: 2.9 Pounds

Whistling Feature: Yes

Dishwasher Safe: Yes (Hand washing recommended)

UPC: 812895025460, 812895025439



Image: Diagram showing the dimensions of the SMEG Stovetop Whistling Kettle.

WARRANTY AND SUPPORT

SMEG products are manufactured to high standards and come with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official SMEG website.

For technical assistance, troubleshooting, or any product-related inquiries, US-based SMEG experts are available to provide support throughout the lifespan of your machine. Please refer to the contact information provided in your product packaging or on the official SMEG website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question