

[Manuals.plus](#) /

› [Dtirszxy](#) /

› Dtirszxy Replacement Remote Control for Pioneer VSX-529 Series AV Receivers User Manual

Dtirszxy Replacement Remote Control for Pioneer VSX-529 Series

Dtirszxy Replacement Remote Control User Manual

For Pioneer VSX-529-K, VSX-529-S, VSX-80, VSX-529 AV A/V Receivers

1. INTRODUCTION

This manual provides instructions for the Dtirszxy replacement remote control, designed for use with Pioneer VSX-529-K, VSX-529-S, VSX-80, and VSX-529 AV A/V Receivers. This remote offers direct functionality without requiring programming.



Figure 1.1: Front view of the replacement remote control, showing all buttons and layout.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Figure 2.1: Back view of the remote control with the battery cover open, illustrating battery insertion.

3. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. For optimal performance, ensure a clear line of sight between the remote's emitter and the receiver's IR sensor.

3.1 Basic Operation

- **Power On/Off:** Press the **POWER** button to turn the receiver on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the audio level.
- **Input Selection:** Press the dedicated input buttons (e.g., **BD**, **DVD**, **SAT**, **HDMI**, **TUNER**) to switch between different audio/video sources connected to your receiver.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Navigation:** Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the **ENTER** button for menu navigation.

Point the remote control directly towards the signal receiving window of your Pioneer AV receiver for all operations.

4. SPECIFICATIONS

Brand	Dtirszxy
Compatible Devices	Pioneer VSX-529-K, VSX-529-S, VSX-80, VSX-529 AV A/V Receivers
Connectivity Technology	Infrared (IR)
Controller Type	Audio / Video Players
Maximum Range	10 Meters (approx. 33 feet)
Color	Black
Power Source	2 x AAA Batteries (not included)

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new ones.
- **Line of Sight:** Verify there is a clear path between the remote control and the IR sensor on your Pioneer receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the operational range of 10 meters (approx. 33 feet) from the receiver.
- **Receiver Power:** Confirm that your Pioneer receiver is powered on and functioning correctly.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if it stops responding. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Dtirszxy replacement remote control comes with a**90-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, troubleshooting assistance, or warranty inquiries, please contact your retailer or the Dtirszxy customer support channel where you purchased the product. Please have your product model and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D11VP8PD>

More documents and user manuals: <https://manuals.plus/>