

[Manuals.plus](#) /

› [ENWShop](#) /

› ENWShop Replacement Remote Control User Manual

ENWShop B0D1238LTN

ENWShop Replacement Remote Control User Manual

Model: B0D1238LTN

INTRODUCTION

This manual provides instructions for the ENWShop Replacement Remote Control, designed for use with most Hitachi TVs and Hitachi Smart TVs. This remote requires no programming and is ready to use with compatible models directly out of the package.





Image: Front view of the ENWShop Replacement Remote Control. This image displays the layout of all buttons, including power, number pad, navigation, volume, channel, and dedicated streaming service buttons like YouTube, VUDU, Pandora, and Netflix.

COMPATIBILITY

This replacement remote is compatible with a wide range of Hitachi TV models. To ensure compatibility, please compare your original remote control with the images provided below. If your original remote matches one of the designs shown, this replacement remote should function correctly with your Hitachi TV.



Image: A collection of various Hitachi remote control models. This image helps users identify if their existing remote's design matches one of the compatible models for this replacement remote.



Image: An additional collection of Hitachi remote control models. This image provides further visual references for users to confirm compatibility with their specific Hitachi TV remote.

SETUP

The ENWSop Replacement Remote Control is designed for immediate use without any complex programming. Follow these simple steps to begin operation:

1. **Install Batteries:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or outwards to open.

2. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
3. Close the battery compartment cover securely.
4. **Ready to Use:** The remote is now ready to operate your compatible Hitachi TV. No additional pairing or code entry is required.

OPERATING INSTRUCTIONS

Familiarize yourself with the primary functions of your new remote control:

- **Power Button (●):** Located at the top left, press to turn your TV on or off.
- **Number Pad (0-9):** Use these buttons to directly enter channel numbers.
- **Volume Up/Down (VOL +/-):** Adjust the audio volume.
- **Channel Up/Down (CH +/-):** Change TV channels sequentially.
- **Navigation Pad (Arrows & OK):** Use the arrow buttons to navigate menus and select options. The **OK** button confirms selections.
- **MENU:** Access the TV's main menu.
- **SOURCE:** Cycle through input sources (HDMI, AV, etc.).
- **RETURN/EXIT:** Go back to the previous screen or exit a menu.
- **Dedicated Streaming Buttons:** Buttons for YouTube, VUDU, Pandora, and Netflix provide quick access to these streaming services.
- **MTS (Multi-channel Television Sound):** This button may control language or audio tracks on some TV models.
- **Globe Button:** This button, if present, may also control language settings on some TV models.
- **Sleep Button:** Note that on some TV models, this button may default to a specific channel (e.g., channel 5-0) instead of activating a sleep timer.

Note: While most functions are universal, some specific buttons like MTS, the blue Globe button, and the OK button may have varied or limited functionality depending on your specific Hitachi TV model.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that your TV is a compatible Hitachi model by checking the compatibility section and images.

- **Certain Buttons Not Working:**
 - Some advanced functions or specific buttons (e.g., MTS, Globe, Sleep) may not be fully supported by all Hitachi TV models, especially older ones, or may have different functions than expected. This is due to variations in TV firmware and original remote designs.
 - Ensure the remote is pointed directly at the TV's IR receiver.

SPECIFICATIONS

Feature	Detail
Model Number	B0D1238LTN
Brand	ENWShop
Compatible Devices	Most Hitachi Televisions
Special Feature	No Programming Required
Color	Black
Batteries Required	2 x AAA (not included)
Item Weight	3.13 ounces
Package Dimensions	7.91 x 2.8 x 0.91 inches

WARRANTY AND SUPPORT

This product is typically covered by a 30-day return policy from the date of purchase. For specific return or replacement inquiries, please refer to the retailer's policy where the product was purchased.

For further assistance or technical support, please contact the seller, ENWShop L.L.C., through the platform where you made your purchase. Provide your order details for efficient support.

Please note that this remote is a replacement unit and may not offer all the exact functionalities of every original Hitachi remote, especially for very specific or advanced features of certain TV models.

© 2024 ENWShop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D1238LTN>

More documents and user manuals: <https://manuals.plus/>