

AYEASY AYEASY-CH-001

AYEASY Rocking Chair Nursery Glider Chair with Foot Rest

MODEL: AYEASY-CH-001

Introduction

Thank you for choosing the AYEASY Rocking Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read all instructions carefully before use and retain this manual for future reference.

Safety Information

- **Maximum Weight Recommendation:** This product has a maximum weight recommendation of 300 pounds. Do not exceed this limit.
- **Stability:** The chair is constructed with a sturdy wooden bar in the middle of the frame for excellent stability. Always ensure the chair is on a stable, level surface to prevent tipping.
- **Assembly:** Follow all assembly instructions precisely. Incorrect assembly can lead to instability and potential injury.
- **Footrest:** When extending or retracting the footrest, ensure hands and fingers are clear of moving parts to prevent pinching.
- **Children:** Keep children away from the chair during assembly. Supervise children when they are near or using the chair.
- **Maintenance:** Regularly inspect all bolts and connections to ensure they remain tight. Tighten as necessary.

Package Contents

Before beginning assembly, verify that all components are present. Refer to the included parts list in your

physical manual for detailed identification. Typically, the package includes:

- Chair Backrest
- Chair Seat with integrated footrest mechanism
- Armrests (Left and Right)
- Rocking Base (Left and Right Runners, Crossbars)
- Lumbar Pillow
- Assembly Hardware (bolts, Allen wrench)

Assembly Instructions

Assembly of the AYEASY Rocking Chair is designed to be straightforward. It is recommended to have two people for certain steps to ensure ease and safety.

Step 1: Attach Metal Connectors to Chair Backrest

Attach the metal connectors to each side of the chair backrest (Part B) using the provided bolts and Allen wrench. Ensure these are securely fastened.

Step 2: Connect Backrest to Seat

Align the metal connectors on the backrest with the corresponding slots on the chair seat (Part A). Gently slide the backrest down until it locks securely into place. You should hear a click or feel it firmly engage.

Step 3: Attach Armrests

Align the metal connectors on the armrests (Part E) with the corresponding slots on the sides of the chair seat (Part A). Slide each armrest down until it locks into place. Gently tap the armrest to ensure a secure snap lock.

Step 4: Assemble Rocking Base

Connect the crossbars (Part C) to the left and right runners (Parts L & R) of the rocking base using the provided bolts and Allen wrench. Attach the middle crossbar first for easier alignment. Do not fully tighten the bolts until all of them are in the correct holes. This allows for slight adjustments during assembly.

Step 5: Attach Rocking Base to Chair

Carefully flip the assembled chair upside down. Align the pre-drilled holes on the bottom of the chair seat with the holes on the rocking base. Secure the base to the chair using the remaining bolts and Allen wrench. Fully tighten all bolts once aligned.

Assembly Visual Aid

For a visual guide on the assembly process, please refer to the video below:

Video: AYEASY Rocking Chair Installation Guide. This video demonstrates the step-by-step assembly of the rocking chair, including attaching the backrest, armrests, and the rocking base.

Additional visual reference for components and assembly steps:



Image: The AYEASY Rocking Chair in a living room setting, showcasing its design with the footrest extended.



Image: Front view of the AYEASY Rocking Chair with the footrest extended, highlighting the comfortable seating and design.

Multifunctional Rocking Chair



Reading



Watching



Sleeping

Image: The AYEASY Rocking Chair with the footrest retracted, showing its compact form for general seating.

Operating Instructions

Rocking Motion

The chair provides a smooth, gentle rocking motion. To rock, simply apply slight pressure with your feet against the floor. The wooden runners are designed for quiet operation.

Adjustable Footrest

The footrest is integrated under the seat and can be extended or retracted as needed.

- **To Extend:** Locate the pull tab or handle under the front edge of the seat. Pull it outwards to extend the footrest.
- **To Retract:** Push the footrest back under the seat until it is fully stowed.

Observe the footrest in action:



Extra Lumbar Pillow

"Provides effective support when reading or holding baby"

Large side pocket

"Large pockets conveniently store magazines and baby products"



Supporting feet

"Comfortable footrest supports calf area, like a footstool"

Image: A close-up view of the retractable footrest mechanism, showing how it extends from beneath the seat. For a demonstration of the chair's features, including the footrest, please watch the video below:

Video: AYEASY Rocking Chair for Living Room. This video illustrates the chair's functionality, including the rocking motion and the use of the retractable footrest in a living room setting.

Side Pocket

A large pocket is located on the side of the chair for convenient storage of small items such as magazines, remote controls, or baby essentials.



Image: A detailed view of the convenient side storage pocket on the armrest of the rocking chair.

Maintenance

- **Cleaning Fabric:** The linen fabric is wrinkle-resistant. For minor spills, blot immediately with a clean, dry cloth. For deeper cleaning, use a mild fabric cleaner according to the product instructions, testing on an inconspicuous area first.
- **Frame Care:** Wipe the wooden frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all screws and bolts to ensure they are tight. Re-tighten as needed to maintain stability.
- **Felt Pads:** The two felt pads at the bottom of the rocking base help prevent sliding, scratching floors, and reducing noise. Inspect these periodically for wear and replace if necessary.

Troubleshooting

- **Chair feels wobbly:** Ensure all assembly bolts are fully tightened. Check that the chair is on a flat, level surface.
- **Footrest is difficult to extend/retract:** Ensure no obstructions are blocking the mechanism. Check

that the pull tab/handle is functioning correctly.

- **Squeaking during rocking:** Inspect the rocking base for any loose connections. Apply a small amount of silicone lubricant to metal-on-metal contact points if necessary, avoiding contact with fabric.

Specifications

Feature	Detail
Brand	AYEASY
Model Name	Charles (AYEASY-CH-001)
Color	Grey
Product Dimensions	35.04"D x 25.1"W x 37.4"H
Weight Capacity	Up to 300 pounds
Back Style	High Back (24.8 Inches width)
Special Features	Arm Rest, Cushion Availability, Retractable Footrest, Side Pocket
Material	Linen Fabric, Foam Fill, Rubber Wood Legs
Room Type	Bedroom, Living Room, Nursery



Image: Diagram illustrating the dimensions of the AYEASY Rocking Chair, including height, width, and depth.

Warranty and Support

AYEASY is committed to product quality and customer satisfaction. For any questions, concerns, or issues regarding your rocking chair, please contact AYEASY customer support via email. Products with quality problems within one year of purchase are eligible for free repair or replacement.

For further assistance, please visit the [AYEASY Store on Amazon](#).