



[Manuals.plus](#) /

> [Devoko](#) /

> [Devoko L-Shaped Gaming Desk with Removable Monitor Stand, White \(Model 21L\) User Manual](#)

Devoko 21L

Devoko L-Shaped Gaming Desk User Manual

Model: 21L

[Overview](#) [Safety Information](#) [Parts List](#) [Setup Instructions](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. PRODUCT OVERVIEW

The Devoko L-Shaped Gaming Desk (Model 21L) is designed to maximize workspace efficiency for various home office activities, including studying, computer work, and PC gaming. Its L-shaped design provides an expansive surface area, accommodating multiple monitors, printers, and audio systems. The desk features a removable monitor stand for ergonomic positioning and reinforced Z-shaped legs for enhanced stability and durability.




Image 1.1: The Devoko L-Shaped Gaming Desk in a typical gaming setup, showcasing its spacious design and monitor stand.

2. SAFETY INFORMATION

- Assemble the desk with caution, ensuring all components are securely fastened.
- Verify the desk's stability after assembly and periodically check all connections.
- Do not overload the desk. The maximum recommended load capacity is 60 kg (132 lbs).
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid placing hot items directly on the desk surface without protective padding.
- Do not stand or sit on the desk.

3. PARTS LIST

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

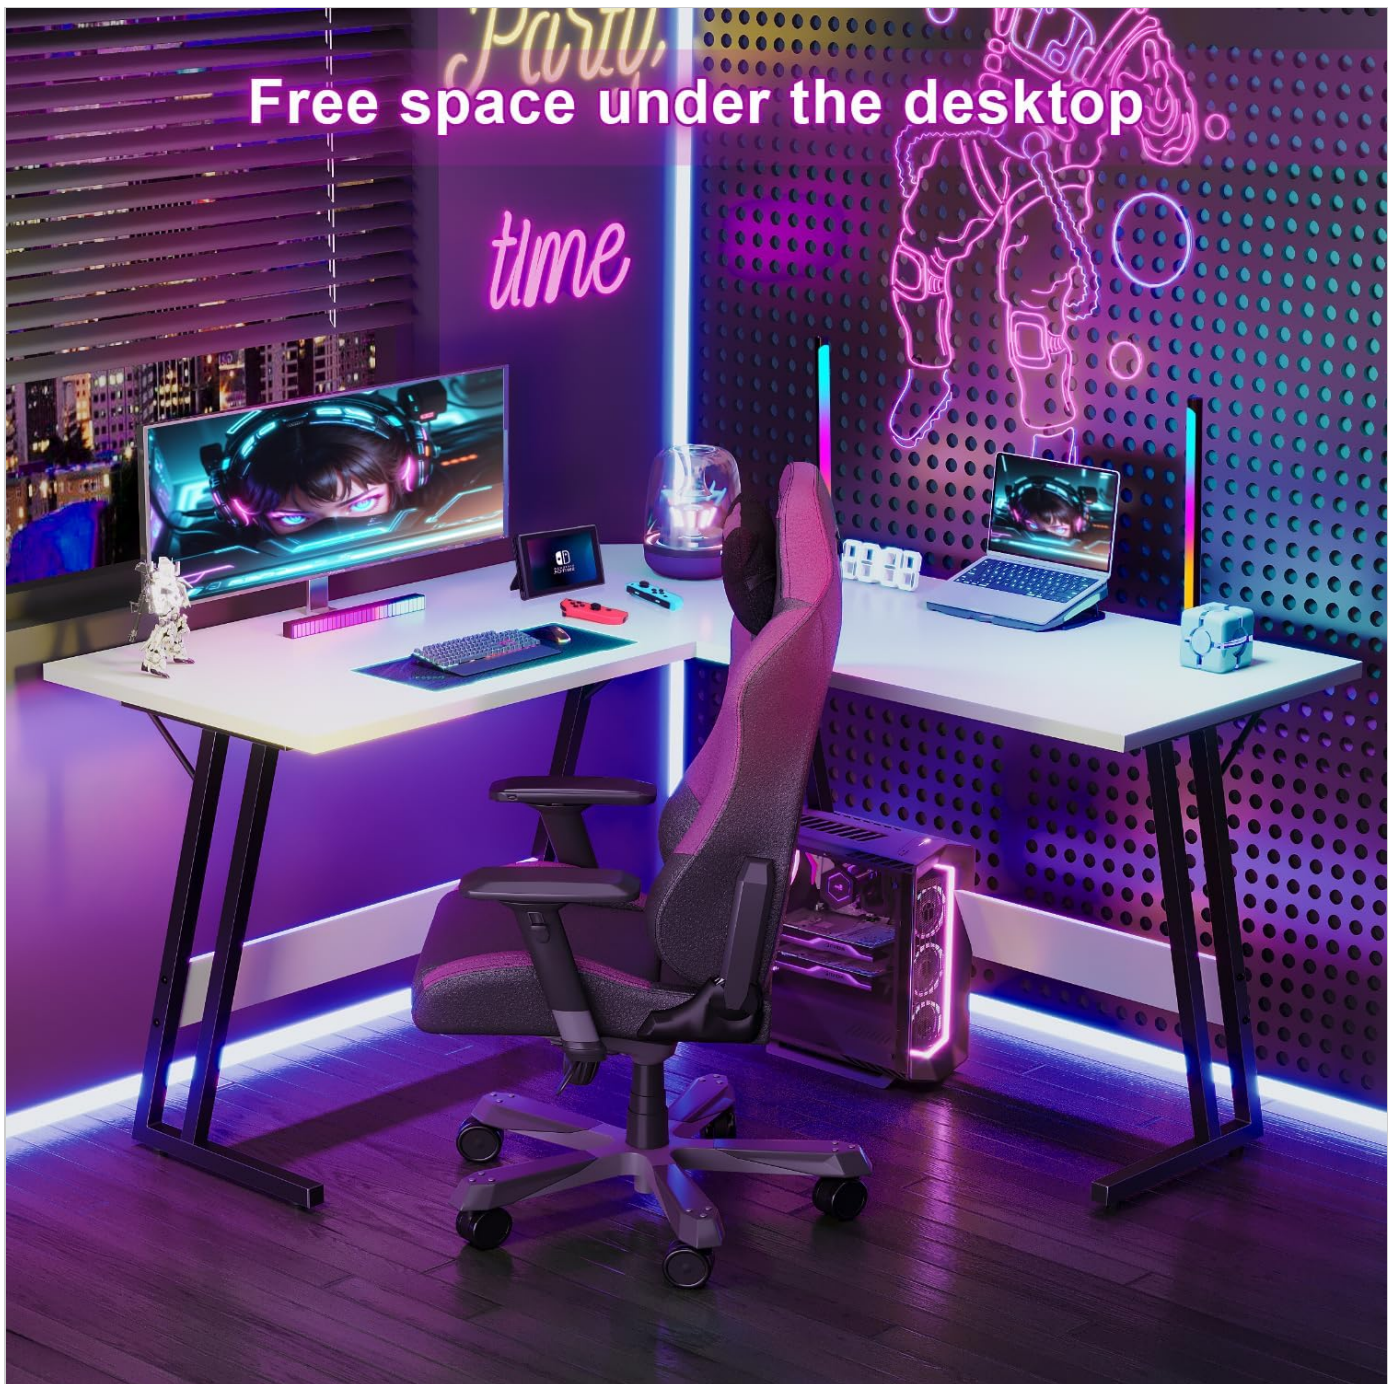

Free space under the desktop

Image 3.1: An exploded diagram showing all individual components of the Devoko L-Shaped Gaming Desk, including the desktop panels, frame pieces, monitor stand, and hardware.

Components:

- Desktop Panels (L-shaped sections)
- Monitor Stand Shelf
- Z-shaped Leg Frames
- Crossbars/Support Beams
- Adjustable Foot Pads
- Headphone Hook

Hardware (typically included in a separate bag):

- Screws (various sizes)
- Allen Wrench (Hex Key)
- Washers

- Nuts

Note: While assembly tools are generally included, a Phillips head screwdriver may be required for some steps (not provided).

4. SETUP INSTRUCTIONS

Assembly typically takes one person approximately 30 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface (e.g., a carpet or blanket) to prevent scratches.
2. **Attach Foot Pads:** Screw the adjustable foot pads into the bottom of the Z-shaped leg frames. These help stabilize the desk on uneven floors.
3. **Assemble Leg Frames:** Connect the Z-shaped leg frames using the provided crossbars and screws. Ensure all connections are finger-tight at this stage.
4. **Attach Desktop Panels:** Place the desktop panels onto the assembled leg frames. Align the pre-drilled holes on the desktop with the holes on the frame. Secure the desktop panels to the frame using the appropriate screws.
5. **Install Monitor Stand:** Position the removable monitor stand on the desired section of the desk. Secure it using the designated bolts. The monitor stand can be adjusted or removed based on user preference.
6. **Install Headphone Hook:** Attach the headphone hook to the side of the desk frame as desired.
7. **Tighten All Screws:** Once all components are in place, systematically tighten all screws with the provided Allen wrench. Do not overtighten.
8. **Final Stability Check:** Gently shake the desk to ensure it is stable. Adjust the foot pads if necessary to eliminate any wobbling.



Image 4.1: Close-up of the Z-shaped leg design, highlighting the sturdy steel structure and crossbars that provide stability to the desk.



Image 4.2: This image shows the matte texture of the desktop surface and the adjustable foot pads, which are crucial for leveling the desk on uneven floors.

5. OPERATING INSTRUCTIONS

The Devoko L-Shaped Gaming Desk is designed for versatile use in home or office environments. Here are some guidelines for optimal use:

- **Workspace Utilization:** Arrange your monitors, keyboard, mouse, and other peripherals on the spacious L-shaped surface. The design allows for efficient multi-monitor setups.
- **Monitor Stand:** Use the removable monitor stand to elevate your screen(s) to an ergonomic height, promoting better posture and reducing neck strain. Adjust its position as needed.
- **Leg Room:** The desk provides ample legroom. Ensure you have enough space to stretch your legs comfortably during long periods of use.
- **Headphone Hook:** Utilize the integrated headphone hook to keep your headphones organized and easily accessible, preventing clutter on the desk surface.

- **Cable Management:** While not explicitly included, consider using cable ties or adhesive cable clips (not provided) to manage wires and maintain a tidy workspace.



Image 5.1: The L-shaped desk setup with a gaming chair, illustrating the generous legroom and spacious desktop for multiple devices.

6. MAINTENANCE

Proper care and maintenance will extend the life of your Devoko L-Shaped Gaming Desk.

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the desktop material.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration of the desk surface.
- **Weight Distribution:** Distribute weight evenly across the desk surface. Avoid concentrating heavy items in one

small area.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly/unstable.	Uneven floor; loose screws; incorrect assembly.	Adjust the foot pads on the bottom of the legs. Ensure all screws are tightened securely. Review assembly instructions.
Parts do not align during assembly.	Incorrect orientation of parts; screws overtightened prematurely.	Double-check part orientation against the manual's diagrams. Loosen all screws slightly, align parts, then retighten.
Monitor stand feels loose.	Securing bolts not fully tightened.	Ensure the bolts securing the monitor stand are fully tightened.
Scratches on desktop surface.	Sharp objects dragged across surface; abrasive cleaning.	Use coasters or desk mats. Clean with soft cloths and non-abrasive cleaners. Minor scratches may be repairable with furniture polish (test in an inconspicuous area first).

8. SPECIFICATIONS

Model Number:	21L
Brand:	Devoko
Dimensions (L x W x H):	120 x 120 x 75 cm (47.2 x 47.2 x 29.5 inches)
Weight:	18.98 kg (41.84 lbs)
Material:	Engineered Wood (Desktop), Metal (Frame)
Color:	White
Shape:	L-shaped
Maximum Load Capacity:	60 kg (132 lbs)
Assembly Required:	Yes (Approx. 30 minutes for 1 person)
Special Features:	Removable Monitor Stand, Ergonomic Design, Reinforced Z-shaped Legs, Headphone Hook

9. WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please contact Devoko customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can often find support information on the official Devoko website or through the retailer where the product was purchased.



© 2023 Devoko. All rights reserved.