

[Manuals.plus](#) /

› [VersLife](#) /

› VersLife S6-3 Cordless Vacuum Cleaner User Manual

VersLife S6-3

VersLife S6-3 Cordless Vacuum Cleaner User Manual

Model: S6-3

1. INTRODUCTION

Thank you for purchasing the VersLife S6-3 Cordless Vacuum Cleaner. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INSTRUCTIONS

WARNING:

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to play with the vacuum cleaner. Close supervision is necessary when used by or near children.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- **CHOKING HAZARD: Small parts. Not for children under 3 years old.**

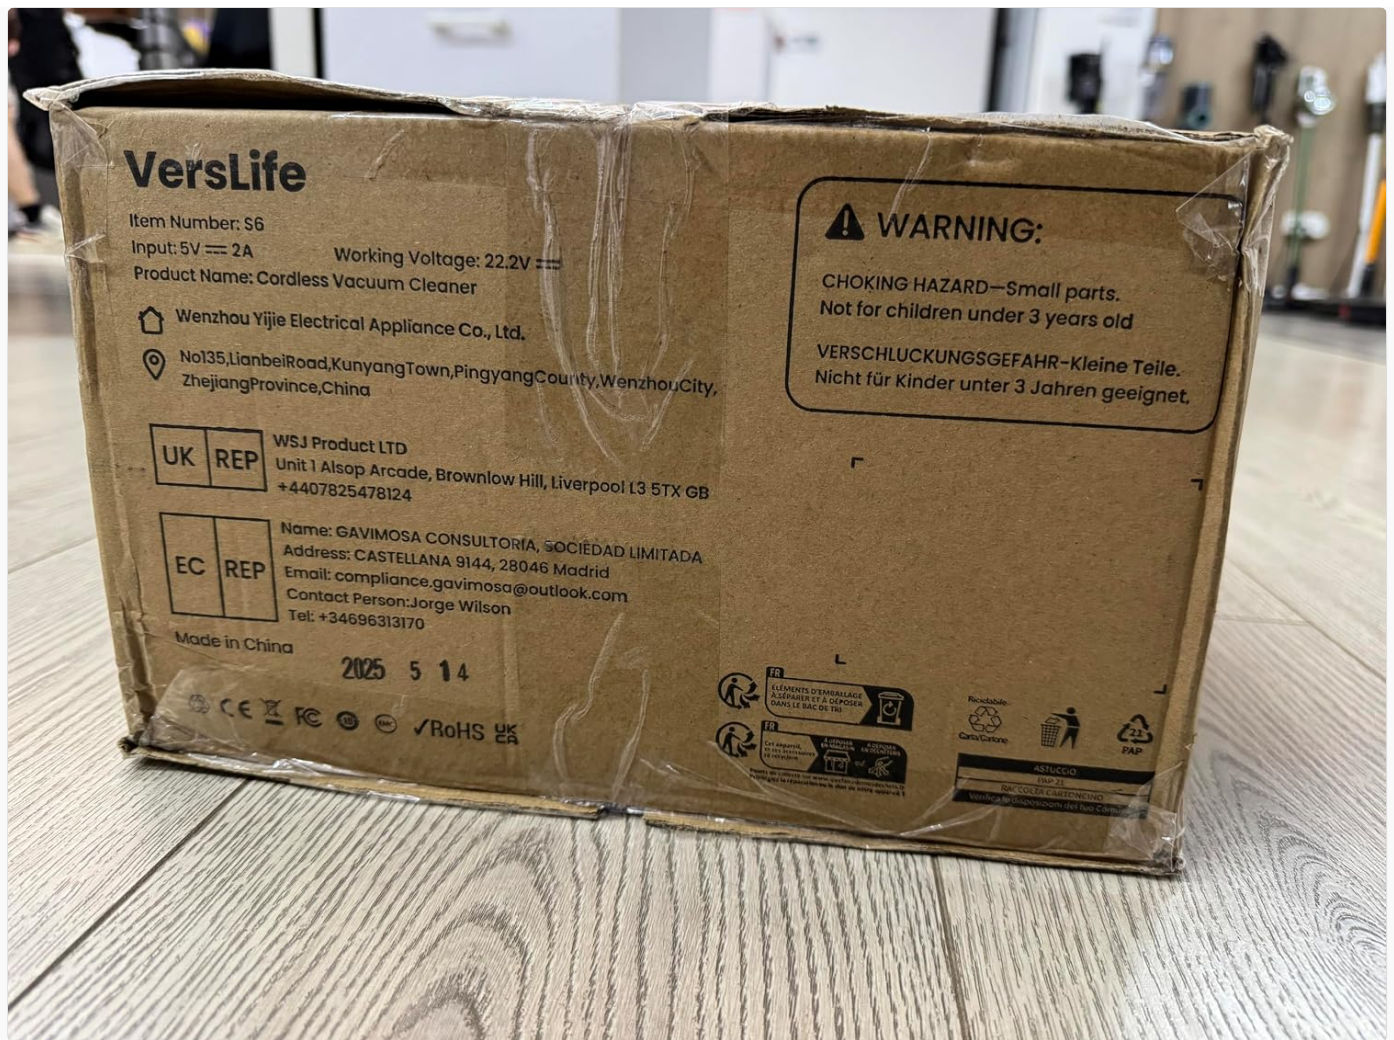


Image: Back of the product box, highlighting safety warnings including a choking hazard notice for small parts.

3. PACKAGE CONTENTS

Carefully unpack your VersLife S6-3 Cordless Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Vacuum Unit (with motor and dustbin)
- Extension Wand
- Floor Brush Head
- Crevice Tool
- Brush Attachment
- HEPA Filter (pre-installed or separate)
- Charging Adapter
- User Manual (this document)



Image: All components included with the VersLife S6-3 Cordless Vacuum Cleaner.

4. SETUP

4.1 Charging the Battery

1. Locate the charging port on the main vacuum unit.
2. Connect the charging adapter to the charging port.
3. Plug the charging adapter into a wall outlet.
4. The indicator lights will show charging status. Charge fully before first use.

4.2 Assembling the Vacuum Cleaner

1. Insert the extension wand into the main vacuum unit until it clicks into place.
2. Attach the desired cleaning accessory (floor brush head, crevice tool, or brush attachment) to the end of the extension wand or directly to the main unit for handheld use. Ensure it clicks securely.
3. Verify that the HEPA filter is correctly installed in the dust cup.



Image: Assembly steps for the vacuum cleaner, illustrating how components fit together.

5. OPERATING THE VACUUM CLEANER

5.1 Power On/Off

The VersLife S6-3 features a push-button controller.

- To turn on the vacuum, press the power button located on the handle.
- Press the power button again to turn off the vacuum.

5.2 Using Attachments

- **Floor Brush Head:** Ideal for cleaning hard floors and carpets.
- **Crevice Tool:** Use for narrow gaps, corners, and hard-to-reach areas.
- **Brush Attachment:** Suitable for upholstery, curtains, and delicate surfaces.

For handheld cleaning, detach the extension wand and attach the desired accessory directly to the main unit.

6. MAINTENANCE

6.1 Emptying the Dust Cup

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button and press it to detach the dust cup from the main unit.
3. Hold the dust cup over a trash bin and open the bottom flap to empty the contents.
4. Close the flap and reattach the dust cup to the main unit until it clicks.

6.2 Cleaning the HEPA Filter

The HEPA filter is crucial for maintaining suction performance and air quality. Clean regularly, especially when suction power decreases.

1. Remove the dust cup as described above.
2. Twist or pull to remove the HEPA filter from the dust cup.
3. Tap the filter gently over a trash bin to remove loose dust.
4. Rinse the filter under cool running water until the water runs clear. **Do not use detergent.**
5. Allow the filter to air dry completely for at least 24 hours before reinserting. **Do not use the vacuum with a wet filter.**



Image: Illustration of the HEPA filter, indicating it can be rinsed for cleaning.

6.3 Cleaning the Brush Roll

1. Turn off the vacuum and detach the floor brush head.

- 2. Locate the brush roll access cover (usually on the bottom of the head) and open it.
- 3. Remove the brush roll. Use scissors to cut away any tangled hair or debris.
- 4. Clean the brush roll and its housing.
- 5. Reinsert the brush roll and close the access cover securely.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dust cup is full.	Empty the dust cup.
	HEPA filter is clogged.	Clean or replace the HEPA filter. Ensure it is completely dry before reinserting.
	Brush roll is tangled.	Clean the brush roll of hair and debris.
	Hose or nozzle is blocked.	Check for and remove any blockages in the extension wand or brush head.
Vacuum makes unusual noise.	Blockage in the air path.	Check dust cup, filters, and brush roll for obstructions.

8. SPECIFICATIONS

Feature	Detail
Brand	VersLife
Model Name	S6-3
Item Model Number	S6
Special Feature	Cordless
Included Components	HEPA Filter
Capacity (Dustbin)	0.6 Pounds
Wattage	80 watts
Form Factor	Stick
Color	Beige
Product Dimensions	16"L x 7.5"W x 11.6"H

Feature	Detail
Noise Level	70 dB
Controller Type	Push Button
Item Weight	5.06 pounds
Battery Type	1 Lithium Ion (included)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact VersLife customer service. Details can often be found on the product packaging or the official VersLife website.

Manufacturer: VersLife

For support, visit: [VersLife Store on Amazon](#)

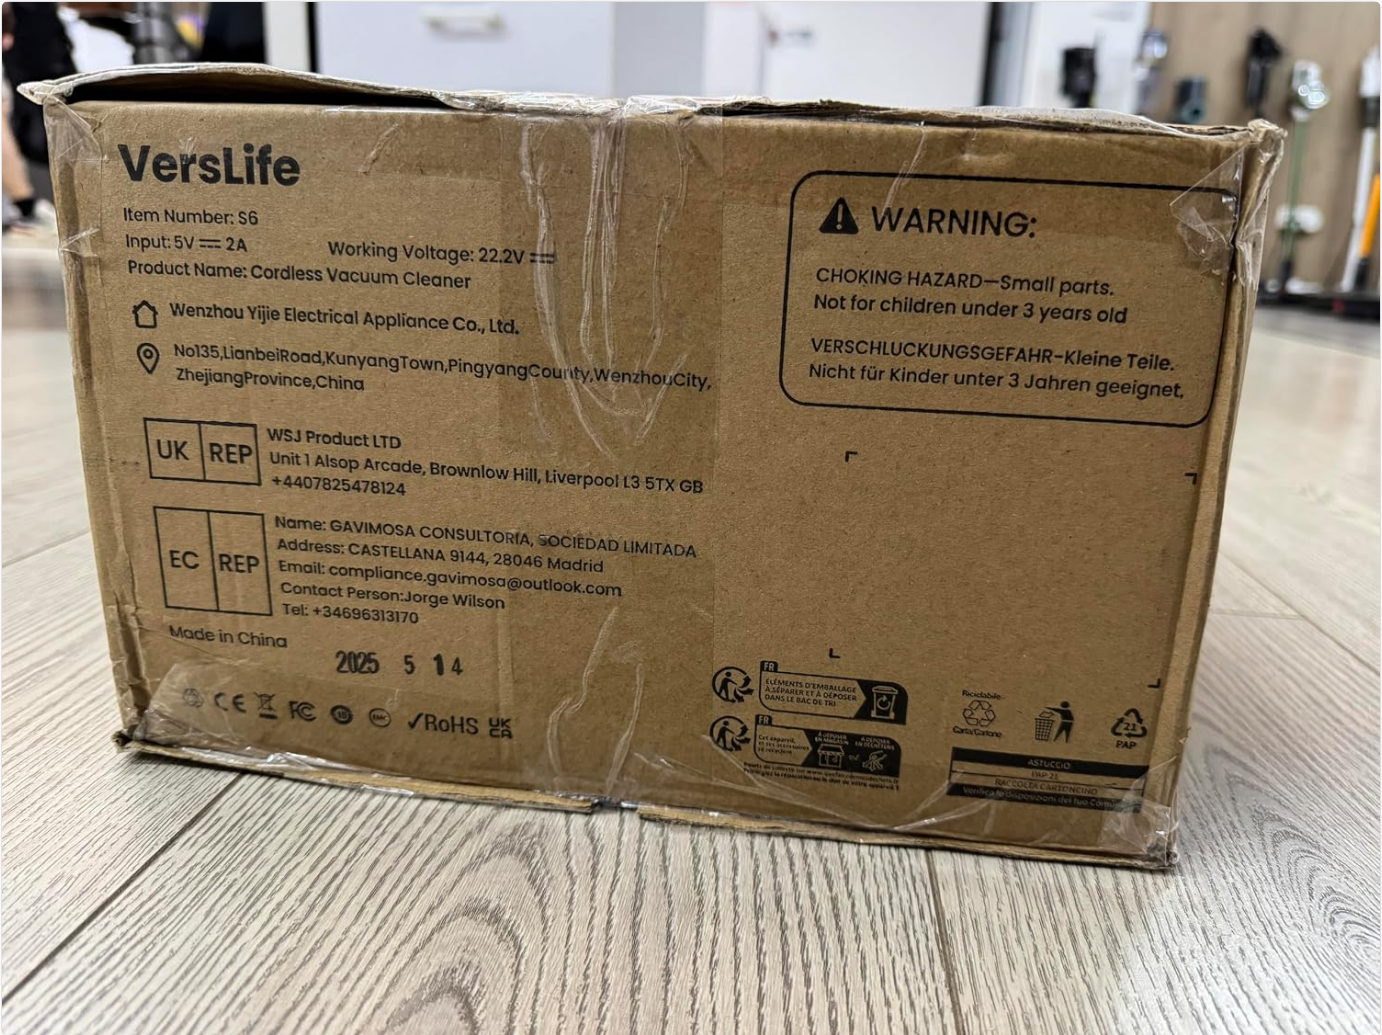


Image: Back of the product box, displaying manufacturer and representative contact details.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D12R83F2>

More documents and user manuals: <https://manuals.plus/>