



Manuals.plus /

› Nictemaw /

› Nictemaw Portable Washing Machine 20Lbs (Model NIC-5573-1103-8) Instruction Manual

Nictemaw NIC-5573-1103-8

Nictemaw Portable Washing Machine

MODEL: NIC-5573-1103-8 | INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Nictemaw Portable Washing Machine. This compact and efficient appliance is designed to simplify your laundry routine, offering convenience for apartments, homes, dorms, and RVs. With a 20Lbs (2.8 Cu.ft) capacity, 10 washing programs, and 8 water level selections, it provides versatile cleaning options while being energy-efficient and quiet.

This manual provides essential information for the safe and effective operation, installation, and maintenance of your washing machine. Please read it thoroughly before use and keep it for future reference.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning, servicing, or performing any

maintenance.

- Ensure the drain hose is properly secured to prevent flooding.
- The water inlet temperature should not exceed 140°F (60°C) to avoid damage to internal components.

3. Product Overview

The Nictemaw Portable Washing Machine is designed for ease of use and efficient cleaning. Below are key features and components.



Figure 3.1: Main view of the Nictemaw Portable Washing Machine.



Figure 3.2: Detailed components of the washing machine.

- **Control Panel:** Intuitive interface for program and setting selection.
- **Transparent Top Cover:** Allows observation of the washing process.
- **Stainless Steel Inner Barrel:** Durable and designed for effective cleaning.
- **Built-in Filter:** Collects lint and debris during washing.
- **Side Handles:** For easy mobility of the unit.
- **Adjustable Bottom Feet:** For leveling the machine on uneven surfaces.
- **Extended Drainage Outlet:** Facilitates efficient water drainage.

4. Setup

4.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage that may have occurred during transit. Remove all packing materials, including any foam or protective films.

4.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. The product dimensions are approximately 20"D x 20"W x 34.6"H. Use the

adjustable leveling legs to ensure the machine is stable and balanced, which helps reduce noise and vibration during operation.

2-IN-1 COMPACT & SMART



25 Shirts/T-shirts



15 Jeans



4 Thick Coats



3 Sheets



- Water Intake Intelligent Control 
- Time Intelligent Control 
- Water Level Intelligent Control 
- Balance Intelligent Control 

DIMENSION

20*20*34.6inch/51*51*88cm
Height after opening: 47.6inch



WASH&SPIN DRY



20 LBS
20 LBS LARGE CAPACITY

Figure 4.1: Product dimensions and capacity.

4.3 Water Inlet Connection

Connect the water inlet hose to the designated inlet on the back of the machine and to your water faucet. The machine comes with a quick-connect adapter suitable for most faucets. Ensure all connections are tight to prevent leaks.

Alternatively, water can be manually poured into the tub if a direct faucet connection is not feasible.



Figure 4.2: Water inlet connection methods.

4.4 Drainage Setup

The machine features a built-in drain pump and an extended drain hose. Position the drain hose into a sink or drain pipe. Ensure the height of the drain pipe is less than 3.93 feet (1.2 meters) to prevent blocked drainage and ensure efficient water expulsion.



Figure 4.3: Drainage setup with extended drain hose.

For a visual guide on setup and operation, please refer to the official product video:

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the Nictemaw Portable Washing Machine's features and operation.

5. Operating Instructions

5.1 Loading Laundry

Open the transparent top cover and place your laundry evenly inside the stainless steel inner barrel. The machine has a 20Lbs capacity, allowing you to wash a significant amount of clothes in one go. Avoid overloading to ensure optimal washing performance.



Figure 5.1: Laundry capacity examples.

5.2 Adding Detergent

Add the appropriate amount of laundry detergent directly into the tub with the clothes. Refer to your detergent's instructions for recommended quantities based on load size and water hardness.

5.3 Control Panel Overview

The control panel allows you to select various settings and programs. Familiarize yourself with the buttons and display:

10 LAUNDRY PROGRAMS

Meet daily needs and make laundry easier!



NORMAL

wash regular clothes easily



QUICK

20 mins quick wash of small clothes



BLANKET

Strong decontamination of bulky clothes



SOAK

soak before washing, more clean



Figure 5.2: Control Panel.

- **Power Button:** Turns the machine on or off.
- **Water Level Button:** Selects one of the 8 available water levels (1-2L, 3-4L, 5-6L, 7-8L).
- **Program Button:** Cycles through the 10 washing programs.
- **Start/Pause Button:** Starts or pauses the selected washing cycle.
- **Digital Display:** Shows remaining time, water level, and program selection.

5.4 Selecting Water Level

Press the 'Water Level' button to choose the appropriate water volume for your laundry load. There are 8 levels, ranging from 1-2 liters up to 7-8 liters. The default level is 6.



Figure 5.3: Water level selections.

5.5 Selecting Program

Press the 'Program' button to cycle through the 10 available washing programs. Each program is designed for specific laundry needs:

- **01 Common:** Standard wash for regular clothes.
- **02 Normal:** General washing cycle.

- **03 Quick:** A 20-minute quick wash for small, lightly soiled items.
- **04 Blanket:** For bulky items like blankets, providing strong decontamination.
- **05 Air Dry:** Spin-drying function to remove excess water.
- **06 Soak:** Pre-soak cycle for heavily soiled clothes.
- **07 Wash:** Wash-only cycle.
- **08 Spin:** Spin-only cycle.
- **09 Wash and Rinses:** Combines washing and rinsing without spinning.
- **10 Rinses and Spin:** Combines rinsing and spinning.



Figure 5.4: Control panel with program details.

5.6 Child Lock Function

To activate the Child Lock, press and hold the 'Water Level' and 'Program' buttons simultaneously for 3 seconds. This prevents accidental changes to settings during operation. To deactivate, repeat the process.



Figure 5.5: Child Lock feature.

5.7 Delay Start Function

The 24-hour delay function allows you to set a delayed start time for your wash cycle. This is useful for

scheduling laundry to finish at a convenient time. Press the 'Program' button repeatedly to enter the reserve mode and adjust the delay time in hours.

24-HOUR INTELLIGENT SCHEDULING

Freely Control Laundry Time



Figure 5.6: 24-hour intelligent scheduling.

6. Maintenance

6.1 Cleaning the Lint Filter

The built-in lint filter effectively collects lint and debris. Regularly clean the filter to maintain optimal washing performance and prevent lint transfer to clothes. To clean, remove the filter from the tub, rinse it under running water, and remove any accumulated lint. Reinsert the filter securely.

6.2 Tub Self-Cleaning

The machine features a tub self-cleaning function. This uses high-pressure pulse jet water to scour the tub walls, preventing dirt and bacteria accumulation. Regularly use this function to keep the inner barrel clean and odor-free.

TUB AIR DRY SELF CLEANING

High-pressure pulse jet water scours the tub wall to prevent dirt from accumulating



Figure 6.1: Tub self-cleaning mechanism.

6.3 General Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents. Keep the control panel dry. Ensure the machine is unplugged before any cleaning.

7. Troubleshooting

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; power outage; lid not closed properly; Start/Pause not pressed.	Check power connection; ensure lid is fully closed; press Start/Pause.
Water does not fill	Water supply turned off; inlet hose kinked or blocked; water pressure too low.	Check water supply; straighten hose; ensure adequate water pressure.
Water does not drain	Drain hose kinked or blocked; drain hose positioned too high.	Straighten or clear drain hose; ensure drain hose height is below 3.93 feet.
Excessive vibration/noise	Machine not level; load unbalanced; shipping bolts not removed (if applicable).	Adjust leveling feet; redistribute laundry load; check for and remove any shipping bolts.
Leaking water	Loose inlet/drain hose connections; damaged hose; excessive detergent causing suds.	Tighten connections; inspect hoses for damage; use recommended amount of detergent.

Note: Each machine is tested before leaving the factory, and it is normal to find small water stains inside.

8. Specifications

Feature	Detail
Brand	Nictemaw
Model Number	NIC-5573-1103-8
Capacity	2.8 Cubic Feet (20 Lbs)
Product Dimensions (D x W x H)	20"D x 20"W x 34.6"H
Access Location	Top Load
Color	White Grey
Item Weight	20 Pounds
Material	Plastic
Controls Type	Push Button
Operation Mode	Fully Automatic
Number of Programs	10
Noise Level	50 Decibels
Installation Type	Portable
Included Components	Water Inlet Pipe, Adapter, Manual

9. Warranty and Support

The Nictemaw Portable Washing Machine comes with a 2-year warranty. For warranty claims, technical support, or any inquiries, please contact Nictemaw customer service through the retailer where the product was purchased or visit the official Nictemaw website for contact information.

Please retain your proof of purchase for warranty validation.