

Timex TW2W840009J

Timex Easy Reader Men's Watch (Model TW2W840009J)

Instruction Manual

INTRODUCTION

Thank you for purchasing the Timex Easy Reader Men's Watch. This timepiece combines classic design with practical features, including an easy-to-read dial and INDIGLO backlight. Please read this manual carefully to understand the proper setup, operation, and care of your watch.



Image: Front view of the Timex Easy Reader watch, showcasing its white dial with full Arabic numerals and black leather strap.

SETUP

Setting Time and Date

1. **Pull the Crown:** Gently pull the crown (the small knob on the side of the watch case) out to position 2.





Image: Side view of the watch, highlighting the crown used for adjustments.

2. **Set the Time:** Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. **Set the Date:** Push the crown halfway in to position 1. Rotate the crown to adjust the date and day.

4. **Push the Crown In:** Once the time and date are set, push the crown back into position 0 to start the watch movement.

OPERATING FEATURES

INDIGLO Night-Light

Your Timex Easy Reader watch features the INDIGLO night-light for easy readability in low-light conditions.

- **Activate:** Press and hold the crown (in position 0) to activate the INDIGLO night-light. The entire dial will illuminate.
- **Deactivate:** Release the crown to turn off the INDIGLO night-light.



Image: The watch dial illuminated by the INDIGLO backlight, demonstrating its visibility in the dark.

MAINTENANCE AND CARE

Water Resistance

This watch is water resistant up to 30 meters (100 feet). This means it is suitable for splashes or brief immersion in water. However, it is **not recommended** for swimming or diving.

- Do not operate the crown or pushers when the watch is wet.
- Avoid exposing the watch to extreme temperature changes.

General Care

- Clean the watch case and strap regularly with a soft, damp cloth.
- Avoid contact with harsh chemicals, solvents, or detergents, as these can damage the watch's finish and strap.
- Avoid exposure to strong magnetic fields, as this can affect the watch's accuracy.

Safety Information:

- Do not use while swimming or diving.
- Avoid exposure to magnetic fields.

BATTERY REPLACEMENT

The watch uses one Lithium-metal battery (CR2016). When the battery needs replacement, it is recommended to have it replaced by a qualified watch technician to ensure water resistance is maintained.



Image: Rear view of the watch case, indicating the battery type (CR2016 CELL) and water resistance (WR30 METERS).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or loses time	Low battery or exposure to strong magnetic fields.	Replace battery (professional service recommended) or move away from magnetic sources.
INDIGLO light does not work	Low battery.	Replace battery.
Date/Day does not change	Incorrectly set or crown not fully pushed in.	Re-set the date/day and ensure the crown is fully pushed in.

SPECIFICATIONS

- **Model Number:** TW2W840009J
- **Case Diameter:** 35mm
- **Case Material:** Polished Silver-Plated Brass
- **Dial:** White with Full Arabic Numerals
- **Strap Material:** Smooth Black Leather
- **Water Resistance:** 30 meters (WR30M)
- **Movement:** Quartz
- **Battery Type:** CR2016 Lithium-metal (included)
- **Features:** Day and Date display, INDIGLO Night-Light
- **Manufacturer:** Timex Group
- **Country of Origin:** Philippines

WARRANTY AND SUPPORT

Warranty Information

Timex watches are covered by a limited warranty against manufacturing defects. Please refer to the official Timex website or the warranty card included with your purchase for specific terms and conditions.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Timex website or contact their customer service department. Contact details can typically be found on the Timex website or in the packaging materials.

Official Timex Website: www.timex.com



