

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TIMEMORE](#) /

› [TIMEMORE Basic 2.0 Coffee Scale Instruction Manual](#)

## TIMEMORE Basic 2.0

# TIMEMORE Basic 2.0 Coffee Scale Instruction Manual

Model: Basic 2.0 | Brand: TIMEMORE

## INTRODUCTION

The TIMEMORE Basic 2.0 Coffee Scale is an electronic espresso scale designed for precise measurements in coffee preparation, baking, and cooking. It features high-precision sensors, a water flow rate function, and a timer. This manual provides detailed instructions for its setup, operation, and maintenance.



Figure 1: TIMEMORE Basic 2.0 Coffee Scale (White)

## SETUP

### 1. Initial Charging

Before first use, ensure the scale is fully charged. Connect the provided USB-C cable to the charging port located on the side of the scale. The charging port features a closable design to prevent liquid ingress. A full charge provides up to 10 hours of battery life.



Figure 2: USB-C Charging Port

## 2. Silicone Insulation Pad

Place the included silicone insulation waterproof pad on the weighing surface. This pad protects the scale from high temperatures and heat, and provides a non-slip surface for your brewing equipment.

# High Precision



Figure 3: Silicone Insulation Pad in place

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Press the power button (usually indicated by a circle with a vertical line) to turn the scale on. The LCD screen will light up. The scale will automatically shut down after 3 minutes of inactivity (no change in measurement value) to conserve battery.

### 2. Tare Function

To weigh ingredients accurately, use the tare function. Place your container (e.g., coffee mug, bowl) on the scale, then quick press the tare button (often indicated by 'T' or a circle with a horizontal line) to reset the display to zero. This subtracts the weight of the container, allowing you to measure only the contents.

### 3. Timer Function

The scale includes an automatic timer function, particularly useful for coffee brewing. To activate the automatic timer, press the timer button 5 times. The timer will start automatically when weight is added to the scale. To manually start or pause the timer, quick press the timer button. To reset the timer, press and hold the timer button for 2.5 seconds.



Figure 4: Scale displaying timer and weight during pour-over brewing.

#### 4. Unit Switching

The scale supports free switching between grams (g) and ounces (oz). To change the unit, press the unit button (often indicated by 'UNIT' or 'g/oz').

#### 5. Water Flow Rate Function

This scale features a water flow rate test function, which can assist in achieving consistent brewing. The flow rate is displayed on the screen during pouring.



Figure 5: Scale displaying real-time water flow rate.

## 6. Reset Function

In case of a sudden failure or unexpected behavior, a RESET button is located at the bottom of the scale. Use a small pin or paperclip to press this button to restore the program.

## MAINTENANCE

---

### 1. Cleaning

The dial surface of the scale is waterproof. For cleaning, wipe the surface with a damp cloth. Avoid submerging the entire scale in water. Ensure the charging port cover is securely closed to prevent liquid from entering.

### 2. Heat Protection

Always use the silicone insulation pad when placing hot items on the scale. Prolonged exposure to high temperatures may cause cracking of the acrylic surface.

## TROUBLESHOOTING

---

## 1. Inaccurate Readings or Drifting Weight

- Ensure the scale is placed on a flat, stable surface.
- Avoid placing the scale near vibrating equipment or in drafty areas.
- Make sure no objects are touching the scale or the weighing platform from the sides.
- Perform a reset using the button on the bottom of the scale.

## 2. Scale Not Turning On or Responding

- Check the battery level. Recharge the scale if the battery indicator is low.
- Ensure the power switch is in the 'on' position.
- Try performing a hard reset using the reset button on the bottom.

## 3. Touch Buttons Unresponsive

- Ensure the surface of the scale is dry and clean. Moisture or debris can affect touch sensitivity.
- If issues persist, try resetting the device.

## SPECIFICATIONS

<b>Brand</b>	TIMEMORE
<b>Model Number</b>	Basic 2.0
<b>Color</b>	White
<b>Material</b>	Plastic (Acrylic surface)
<b>Weight Limit</b>	2 Kilograms (4.4 lbs)
<b>Readout Accuracy</b>	0.1g (Initial minimum weight 0.5g)
<b>Display Type</b>	LCD with backlight
<b>Battery</b>	Built-in 1600mAh rechargeable lithium battery
<b>Battery Life</b>	Up to 10 hours
<b>Auto-off</b>	After 3 minutes of standby (no measurement change)
<b>Product Dimensions</b>	5.1 x 1 x 0.9 inches
<b>Item Weight</b>	1.12 pounds

## OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Overview of TIMEMORE Coffee Scale features, including pour-over, cooking, espresso use, waterproofing, and charging.

## WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided with your product packaging or visit the official TIMEMORE website. Keep your purchase receipt for warranty

