

Beyution RC-G009

Beyution RC-G009 Universal TV Remote Control User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the Beyution RC-G009 Universal TV Remote Control. This remote is designed to replace your original television remote, offering compatibility with a wide range of TV brands without complex programming. Its ergonomic design and durable construction ensure reliable and comfortable use.

The RC-G009 remote control is compatible with numerous television brands, including but not limited to: **Samsung, LG, Sony, Panasonic, Sharp, Toshiba, Philips, Hitachi, Hisense, Skyworth, Sanyo, TCL, Haier, Changhong, Konka, and JVC.**





This image displays the front of the Beyution RC-G009 remote control, showing all buttons including power, volume, channel, navigation, and dedicated app buttons for Netflix, YouTube, and Amazon.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



The back of the Beyution RC-G009 remote control is shown, featuring the battery compartment cover and printed instructions for the brand search function.

2.2 Initial Use (No Programming Required)

For most major TV brands, the Beyution RC-G009 remote control is pre-programmed and ready to use directly out of the box. Simply insert the batteries as described above, point the remote at your television, and begin operating it.

2.3 Brand Search (If Direct Use Fails)

If the remote does not operate your TV immediately, you may need to perform a brand search to find the correct code for your specific television model. Follow these steps:

1. Identify the specific brand key on the remote control that corresponds to your television (e.g., SAMSUNG, LG, SONY, PANASONIC, SHARP, etc.).
2. Press and hold the brand key for approximately 3 seconds.
3. The indicator light on the remote control will flash once. The remote will then begin sending a volume up (+VOL) key code for that brand.
4. Continue holding the brand key. Observe your TV screen. When the volume symbol appears on your TV,

release the brand key immediately.

5. The indicator light on the remote will turn off, indicating that the code has been successfully saved.
6. Test the remote's functions (e.g., power, volume, channel) to ensure full compatibility.

3. OPERATING INSTRUCTIONS

The Beyution RC-G009 remote control features a standard layout for easy navigation and control of your television. Ensure a clear line of sight between the remote and your TV's infrared receiver for optimal performance. The effective operating range is approximately 10 meters (33 feet).



The image illustrates the Beyution RC-G009 remote control being used in a living room setting, emphasizing its effective control range of 30 feet (approximately 10 meters) and rapid response time.

3.1 Basic Functions

- **Power Button (Power Symbol):** Turns the TV on or off.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button (Mute Symbol):** Mutes or unmutes the TV sound.

- **Number Buttons (0-9):** Directly input channel numbers.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Return Button (Return Arrow):** Returns to the previous screen or menu.
- **Exit Button (EXIT):** Exits the current menu or application.
- **Source Button (SOURCE):** Changes the input source (e.g., HDMI 1, AV).

3.2 Dedicated App Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **NETFLIX:** Launches the Netflix application.
- **YouTube:** Launches the YouTube application.
- **Amazon:** Launches the Amazon Prime Video application.

3.3 Special Function Buttons

Additional buttons provide access to various TV features:

- **SET:** May be used for advanced settings or programming (refer to TV manual).
- **DNS/DEXP, P.MODE, ASPECT, SLEEP, MENU, TV, VU, GUIDE, TEXT, SMART, INFO, 3D, HOME, DISP:** These buttons correspond to specific functions on compatible televisions. Their exact functionality may vary by TV brand and model.

4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, high temperatures, and excessive humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your Beyution RC-G009 remote control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are correctly installed with the proper polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor. Ensure a clear line of sight.
 - Confirm that the remote is pointed directly at the TV.
- **Limited Functionality or Incorrect Commands:**
 - If you performed a brand search, ensure you released the brand key immediately when the volume

symbol appeared on your TV. If not, repeat the brand search process.

- Some advanced functions may not be supported by all TV models. Refer to your TV's original manual for specific feature compatibility.

- **Indicator Light Issues:**

- If the indicator light does not flash during brand search, check battery installation.
- If the light remains on or flashes erratically, replace the batteries.

- **Remote Control Damaged or Not Working:**

- If the remote control is physically damaged or completely unresponsive after trying the above steps, please refer to the Warranty and Support section for assistance.

6. SPECIFICATIONS

Feature	Detail
Model	RC-G009
Material	ABS Plastic
Connectivity Technology	Infrared
Maximum Range	10 meters (33 feet)
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	5" x 1" x 0.5" (12.7 cm x 2.54 cm x 1.27 cm)
Item Weight	1.9 Ounces (53.86 grams)
Color	Black
Compatible Devices	Universal for various TV brands (Samsung, LG, Sony, Panasonic, Sharp, Toshiba, Philips, Hitachi, Hisense, Skyworth, Sanyo, TCL, Haier, Changhong, Konka, JVC)



This graphic highlights the dimensions of the Beyution RC-G009 remote control (6.89 inches length, 1.77 inches width) and its construction from ABS material, noting its soft touch, anti-dusted finish, and long transmission distance.

7. WARRANTY

The Beyution RC-G009 Universal TV Remote Control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

If you receive a damaged remote control or if it ceases to function correctly within the warranty period, please contact our support team for assistance. We are committed to providing a satisfactory solution, which may include repair or replacement.

8. SUPPORT

For any questions, concerns, or technical assistance regarding your Beyution RC-G009 Universal TV Remote Control, please contact our customer support team. If your specific TV model is not listed as compatible or if you experience any issues not covered in this manual, our team is available to help.

Please have your product model (RC-G009) and purchase information ready when contacting support to facilitate a quicker resolution.

