

Panasonic NA-FA10K3

Panasonic NA-FA10K3-W 10kg Fully Automatic Washing Machine User Manual

Model: NA-FA10K3-W | Brand: Panasonic

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions could result in serious injury or property damage.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded outlet. Do not use extension cords. Disconnect power before cleaning or servicing.
- **Water Safety:** Ensure water supply hoses are securely connected to prevent leaks. Do not operate the machine if there is a water leak.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow children to play on or in the washing machine.
- **Flammable Materials:** Do not wash items that have been soiled with flammable substances (e.g., gasoline, cooking oil).
- **Installation:** Install the machine on a firm, level surface. Ensure adequate clearance around the machine for ventilation and access.

2. PRODUCT OVERVIEW

The Panasonic NA-FA10K3-W is a 10kg fully automatic washing machine designed for efficient and thorough cleaning. Key features include automatic liquid detergent and softener dispensing, the 'Sugo-ochi Bubble Wash' system, and a 'Hypochlorous Acid Sterilization' course for both laundry and the wash tub.



Image 1: Top-down view of the Panasonic NA-FA10K3-W washing machine, highlighting the control panel and top-loading design.

3. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. Please follow these steps carefully.

3.1 Unpacking

- Remove all packaging materials, including the base packaging and any internal packing.

- Inspect the machine for any damage incurred during transit. Contact your retailer immediately if damage is found.

3.2 Location Requirements

Ensure the installation area meets the following criteria:


- A solid, level floor capable of supporting the machine's weight (approx. 50 kg) plus the weight of water and laundry.
- Adequate space for the machine, including clearance for opening the lid and maintenance. Refer to the diagram below for specific dimensions.
- Avoid direct sunlight or extreme temperatures.

商品寸法+10cm以上の幅が必要です。


※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。
※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

《搬入における確認項目》


《商品の寸法》




《玄関の高さ》
商品寸法+10cm




《玄関の幅》
商品寸法+10cm




《廊下の幅》
商品寸法+10cm



《エレベータの幅》
商品寸法+10cm




《階段の幅》
商品寸法+10cm



《設置における確認項目》

• 必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。
• 洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。



洗濯機本体の高さ
蛇口までの高さ
+10~20cm


上方ドア開閉時に
必要なスペース
全開時 +10~15cm

後方1cm以上

左右方(壁側)1cm以上
※排水ホースの接続側は9cm以上

※乾燥機付きの商品の場合は、
壁から離す距離が決まら
れています。

防水パンの有無と内側サイズをチェック



※排水エルボ・足台の有無と排水口位置によって、
追加費用がかかることがあります。

Image 2: Diagram illustrating the necessary clearance for installation, including space for the machine's height, width, and depth, as well as additional space for door opening and maintenance. For example, a minimum of 10cm extra space is required for height, width, and depth for smooth installation and operation.

3.3 Water Supply Connection

- Connect the hot and cold water supply hoses to the corresponding inlets on the back of the machine.
- Ensure all connections are tight to prevent leaks.

3.4 Drain Hose Connection

- Securely attach the drain hose to the machine and route it to a suitable drain (e.g., standpipe or utility sink).

- Ensure the drain hose is not kinked or blocked.

3.5 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Do not share the outlet with other high-power appliances.

4. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your washing machine.

4.1 Control Panel Overview

The control panel features various buttons and a display to select wash cycles and options. Refer to Image 1 for a visual guide to the control panel layout.

4.2 Loading Laundry

- Open the lid and load laundry loosely into the tub. Do not overload the machine.
- Distribute laundry evenly to prevent imbalance during the spin cycle.

4.3 Adding Detergent and Softener

This model features automatic dispensing for liquid detergent and softener.

- Open the detergent dispenser drawer.
- Pour liquid detergent into the 'Liquid Detergent Tank' (approx. 450 mL capacity).
- Pour fabric softener into the 'Softener Tank' (approx. 550 mL capacity).
- The machine will automatically dispense the appropriate amount for each wash cycle.

液体洗剤・柔軟剤 自動投入

面倒な計量は洗濯機におまかせ
タンクに補充しておけば、自動で適量を投入します。



Image 3: Close-up view of the automatic liquid detergent and softener dispenser tanks, showing their respective capacities and the manual detergent case option.

4.4 Selecting a Wash Course

Turn the program dial or press the 'Course' button to select your desired wash cycle. Common courses include:

- **Standard:** For everyday laundry.
- **Sugo-ochi Bubble Wash:** Utilizes fine foam to penetrate fabrics and remove stubborn dirt effectively.
- **Hypochlorous Acid Sterilization Course:** Designed to sterilize clothes and towels, eliminating odor-causing bacteria. This course also helps sterilize the wash tub during the cycle.
- **Delicate:** For fragile items.
- **Quick Wash:** For lightly soiled items requiring a fast cycle.

4.5 Starting a Cycle

- Close the lid securely.
- Press the 'Start/Pause' button to begin the wash cycle.

4.6 Pausing and Stopping

- To pause a cycle, press the 'Start/Pause' button. Press again to resume.
- To stop a cycle completely, press and hold the 'Start/Pause' button for a few seconds, or press the 'Power'

button.

5. MAINTENANCE

Regular maintenance ensures your washing machine operates efficiently and extends its lifespan.

5.1 Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer.
- Rinse it under warm water to remove any residue. Use a small brush if necessary.
- Dry thoroughly before reinserting.

5.2 Cleaning the Lint Filter

- Locate the lint filter (usually inside the tub or near the top rim).
- Remove the filter and clean out any accumulated lint and debris.
- Rinse the filter under running water and reinsert it securely.

5.3 Cleaning the Washing Tub

- Utilize the 'Hypochlorous Acid Sterilization Course' or a dedicated 'Tub Clean' cycle (if available) to prevent mold and odors.
- Alternatively, use a washing machine cleaner according to the product instructions.

5.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or solvents that could damage the finish.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Circuit breaker tripped.	Check power connection; Ensure lid is fully closed; Reset circuit breaker.
No water filling	Water supply turned off; Water inlet hoses kinked; Water pressure too low.	Turn on water supply; Straighten hoses; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clean drain pump filter (refer to maintenance section).
Excessive vibration/noise	Machine not level; Laundry unevenly distributed; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure all shipping bolts are removed.
Error code displayed	Specific malfunction.	Refer to the detailed error code list in the full manual (if available) or contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Panasonic NA-FA10K3-W washing machine.

Brand: Panasonic

Model: NA-FA10K3-W

Capacity: 10 kg

Dimensions (Depth x Width x Height): 63.5 cm x 59.9 cm x 107.1 cm

Product Weight: 50 kg

Color: White

Operation Panel Type: Push Button

Door Position: Top

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product. For technical support or service inquiries, please contact Panasonic customer service. Contact details can typically be found on the Panasonic official website or in your product documentation.