

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VINABTY](#) /

> [VINABTY AKB36097101 Replacement Remote Control User Manual for LG DVD VCR Combo](#)

### VINABTY AKB36097101

# VINABTY AKB36097101 Replacement Remote Control User Manual

For LG DVD VCR Combo Models

## 1. INTRODUCTION

This manual provides detailed instructions for the VINABTY AKB36097101 replacement remote control. This remote is designed to be compatible with various LG DVD VCR Combo models, offering a direct replacement for original remote controls such as AKB32606601, AKB31238705, RC797T, RC897T, RC700N, RC397HM, RC397H, RC389H, RC286H, RC297H, RC199H, RC397H-M, RC286H M, and RC286HM. Please read this manual thoroughly to ensure proper setup and operation.

## 2. PRODUCT OVERVIEW

The VINABTY AKB36097101 is an infrared replacement remote control. It features a comprehensive layout of buttons for controlling both DVD and VCR functions, as well as basic TV power and input selection. No programming is required; simply insert batteries for immediate use.





Figure 2.1: Front view of the VINABTY AKB36097101 remote control, showing all buttons and their labels. The remote is black with white and blue text.





Figure 2.2: Angled view of the VINABTY AKB36097101 remote control, highlighting its ergonomic design and button placement.



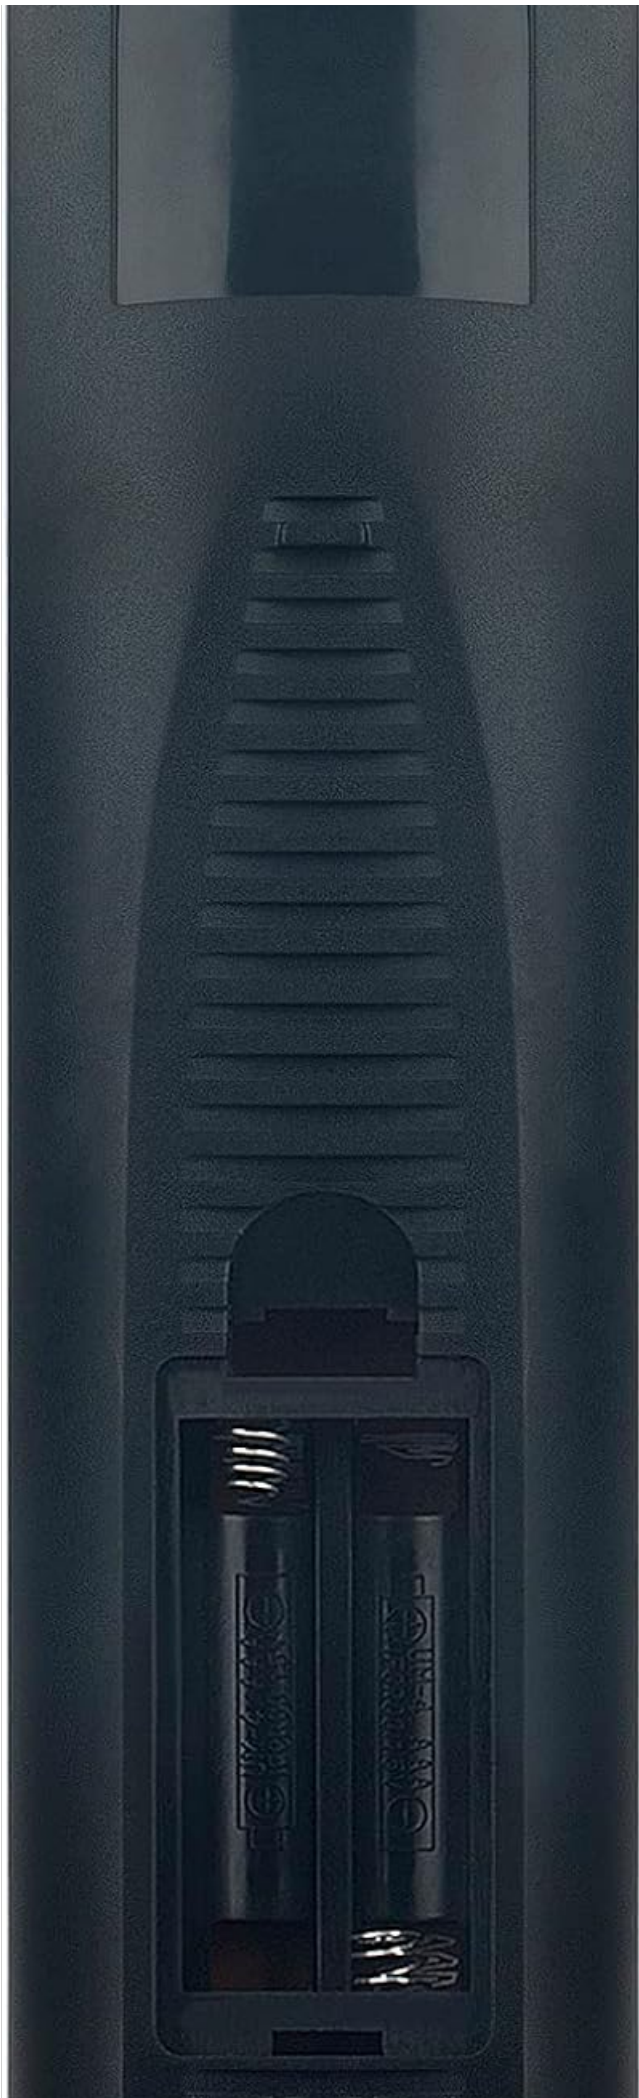




Figure 2.3: Back view of the VINABTY AKB36097101 remote control with the battery compartment cover removed, showing the two AAA battery slots.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control is now ready for use. No additional programming is required for most LG DVD VCR Combo models.

## 4. OPERATING INSTRUCTIONS

---

This section outlines the primary functions of the buttons on your VINABTY AKB36097101 remote control.

### 4.1 Power and Input Control

- **POWER (DVD/VCR):** Turns the LG DVD VCR Combo unit on or off.
- **TV POWER:** Turns the connected television on or off.
- **INPUT:** Cycles through available input sources on the television.

### 4.2 Number and Navigation Buttons

- **0-9 (Number Buttons):** Used for direct track/chapter selection or channel input.
- **DASH (-):** Used for entering sub-channels or specific menu options.
- **INPUT (Numeric):** Confirms numeric input.
- **HOME:** Accesses the main menu or home screen of the device.
- **ENTER (Center Button):** Confirms selections within menus.
- **Arrow Keys (Up, Down, Left, Right):** Navigates through menus and options.

### 4.3 Playback Controls

- **PLAY (▶):** Starts playback of a DVD or VCR tape.
- **PAUSE/STEP (⏸):** Pauses playback or advances frame by frame.
- **STOP (■):** Stops playback.
- **BACKWARD (◀◀):** Rewinds the media.
- **FORWARD (▶▶):** Fast forwards the media.
- **SKIP (◀◀| |▶▶):** Skips to the previous or next track/chapter.
- **EJECT OPEN/CLOSE:** Opens or closes the disc tray or ejects a VCR tape.

## 4.4 Audio/Video and Menu Functions

- **VOL (Volume Up/Down)**: Adjusts the volume level.
- **CH (Channel Up/Down)**: Changes TV channels.
- **DISC MENU/LIST**: Accesses the DVD disc menu or a list of available content.
- **DISPLAY**: Shows on-screen information about the current playback.
- **AUDIO**: Cycles through available audio tracks or languages.
- **SUBTITLE**: Cycles through available subtitle options.
- **ZOOM**: Adjusts the screen zoom level.
- **I.SKIP**: Instant skip function.
- **RETURN**: Goes back to the previous menu or screen.

## 4.5 Recording and Advanced Functions

- **REC (●)**: Initiates recording on the VCR.
- **REC MODE**: Selects recording quality/mode.
- **DUBBING**: Used for dubbing content.
- **TITLE**: Accesses the title menu of a DVD.
- **PLAY MODE**: Selects playback mode (e.g., repeat, shuffle).
- **MARKER**: Sets a marker during playback.
- **SEARCH**: Initiates a search function.
- **THUMBNAIL**: Displays content as thumbnails.
- **CHP.ADD**: Chapter add function.
- **TV/VCR**: Switches between TV and VCR modes.
- **TIMESHIFT**: Activates or deactivates time shift function.
- **CLEAR**: Clears current input or selection.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

### 5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote and the device's infrared sensor.
  - Ensure you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
    - This remote is a replacement and may not support all functions of every original LG remote. Verify compatibility with your specific LG DVD VCR Combo model.
    - Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.
- **Intermittent operation:**
    - Weak batteries can cause intermittent operation. Replace them.
    - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

## 7. SPECIFICATIONS

Feature	Specification
Brand	VINABTY
Model Number	AKB36097101
Connectivity Technology	Infrared
Maximum Range	10 Meters
Number of Supported Devices	1
Batteries Required	2 x AAA (not included)
Item Weight	80 Grams

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the retailer. As a replacement remote, specific warranty details may vary.