


AVV F10

AVV F10 Portable Rechargeable Camping Fan User Manual

Model: F10

1. INTRODUCTION

Thank you for choosing the AVV F10 Portable Rechargeable Camping Fan. This fan is designed to provide powerful and quiet airflow with the added convenience of an LED light and remote control. Its compact and lightweight design makes it ideal for various settings, including camping, travel, work, and home use. Please read this manual thoroughly before operating the device to ensure safe and optimal performance.

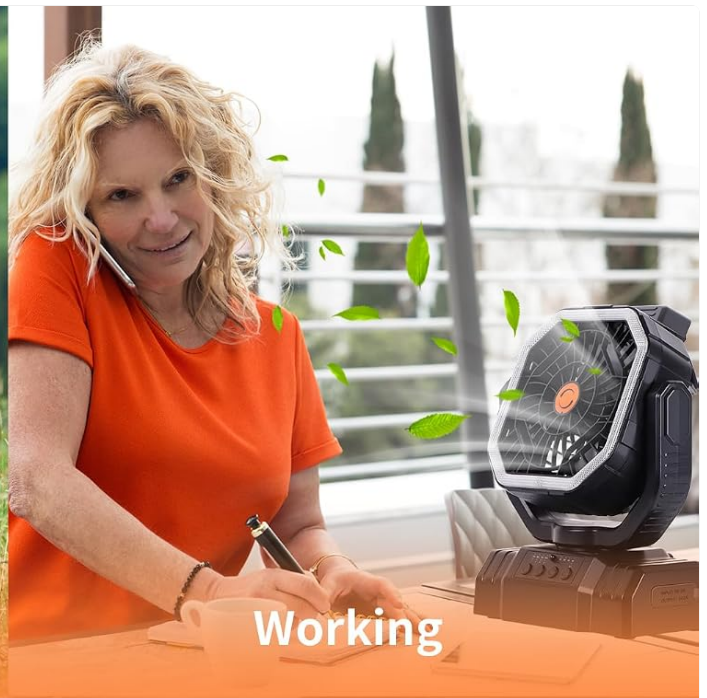

The AVV F10 fan is versatile for camping, working, sleeping, and studying environments.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the fan.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Keep the fan away from water or other liquids to prevent electric shock.
- Do not use the fan near flammable materials or gases.
- Ensure the fan is placed on a stable surface or securely hung to prevent it from falling.
- Only use the provided charging cable or a certified 5V/2A Type-C cable for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Keep out of reach of children and pets.
- Unplug the fan when not in use for extended periods or during cleaning.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x AVV F10 Portable Camping Fan
- 1 x USB Charging Cable
- 1 x Remote Control
- 1 x User Manual

Packing Include



The package includes the AVV F10 fan, remote control, USB charging cable, and user manual.

4. PRODUCT OVERVIEW

The AVV F10 fan features a robust design with multiple functionalities for enhanced user experience.

- **Fan Head:** Adjustable angle (90° to 270° manual rotation) for directed airflow.

- **LED Light Ring:** Integrated light with 3 brightness levels.
- **Control Panel:** Buttons for power, fan speed, oscillation, and light.
- **USB-A Output Port:** For charging external devices (5V/2A).
- **Type-C Input Port:** For charging the fan (5V/2A).
- **Battery Indicator:** Displays remaining battery life (25%, 50%, 75%, 100%).
- **360° Rotating Hook:** For easy hanging in tents or other locations.



The AVV F10 fan features a compact design with a protective grille.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB Type-C cable to the fan's Type-C input port and the other end to a 5V/2A USB power adapter (not included). The battery indicator lights will show the charging progress. A full charge typically takes several hours.

USB & Type C Charging Port



The fan can be charged via its Type-C port (5V/2A input) and can also charge other devices via its USB-A port (5V/2A output).

5.2 Placement

- **Tabletop Use:** Place the fan on a flat, stable surface. Adjust the fan head manually to direct airflow as desired (90° to 270° rotation).
- **Hanging Use:** Utilize the integrated 360° rotating hook to hang the fan inside a tent, from a branch, or other suitable locations. Ensure it is securely fastened.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power Button** on the control panel or the remote control to turn the fan on or off.

6.2 Fan Speed Adjustment

Press the **Fan Speed Button** (usually indicated by fan icons) on the control panel or remote control to cycle through the 4

available wind speeds. Each press will increase the speed. After the highest speed, it will return to the lowest speed.



The fan offers four distinct wind speed settings for customized airflow.

6.3 Oscillation Function

Press the **Oscillation Button** on the control panel or remote control to activate or deactivate the automatic oscillation feature, which distributes air across a wider area.

6.4 LED Light Adjustment

Press the **Light Button** on the control panel or remote control to cycle through the 3 brightness levels of the integrated LED light. A fourth press will turn the light off.

Tri-Level Brightness Camping Fan



The fan's integrated LED light provides three brightness levels for illumination in dark environments.

6.5 Timer Function

Press the **Timer Button** on the remote control to set the fan to automatically turn off after a specified duration. Available timer settings are 1 hour, 2 hours, 4 hours, and 6 hours. Pressing the button repeatedly cycles through these options.

Quiet & Powerful Airflow

Four-Blade Fans for Bedroom



The fan includes a timer function with settings for 1, 2, 4, or 6 hours, ideal for use during sleep.

6.6 Remote Control Usage

The remote control allows convenient operation of all fan functions from a distance. Ensure the remote has working batteries and is pointed towards the fan's receiver.

7. CHARGING THE FAN AND EXTERNAL DEVICES

7.1 Charging the Fan

To charge the fan, connect a 5V/2A Type-C charging cable to the fan's Type-C input port. The battery indicator lights (25%, 50%, 75%, 100%) will illuminate to show the current charge level and charging progress. When fully charged, all four lights will be solid.

7.2 Charging External Devices

The fan is equipped with a USB-A output port (5V/2A) that can be used to charge other USB-powered devices, such as smartphones or tablets. Simply connect your device's charging cable to the fan's USB-A output port.

Rechargeable Camping Fan

with Extended Battery Life Provides Strong Cooling Breeze



The fan can charge external devices like smartphones via its USB-A output port.

8. MAINTENANCE

8.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces of the fan.
- For dust accumulation on the fan blades or grilles, use a soft brush or a vacuum cleaner with a brush attachment. Do not use water or harsh cleaning agents.

8.2 Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the fan fully before storing and to recharge it every 3-6 months to maintain battery health.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the fan fully. Press the power button firmly.
Weak airflow.	Fan speed is too low. Obstruction in front/back grille.	Increase fan speed. Clear any obstructions.
LED light not working.	Light function not activated. Battery is very low.	Press the light button to cycle through brightness levels. Charge the fan.
Remote control not responding.	Remote batteries are dead. Obstruction between remote and fan. Remote not pointed at fan.	Replace remote control batteries. Ensure clear line of sight. Point remote directly at the fan.
Fan not charging.	Charging cable or adapter faulty. Port is damaged.	Try a different Type-C cable and 5V/2A adapter. Contact customer support.

10. SPECIFICATIONS

Feature	Detail
Model Number	F10
Brand	AVV
Dimensions (L x W x H)	7.9 x 22.9 x 29.2 cm (3.1 x 9.0 x 11.5 inches)
Weight	1.19 Kilograms (2.62 lbs)
Color	Black
Power Source	Battery Powered
Voltage	5 Volts
Wattage	10 Watts
Number of Fan Speeds	4
Noise Level	28 Decibels (max)
Control Method	Button Control, Remote Control
Motor Type	Brushless Motor
LED Light Levels	3
Charging Input	Type-C, 5V/2A
USB Output	USB-A, 5V/2A

Feature	Detail
Oscillation	Yes
Adjustable Angle	90° to 270° (manual)
Special Features	Travel-sized, LED Light, Remote Control, Timer Function, Power Bank Function
Recommended Uses	Camping, Work, Study, Sleep

11. WARRANTY AND CUSTOMER SUPPORT

11.1 Warranty Information

The AVV F10 Portable Rechargeable Camping Fan comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact our customer support for detailed warranty terms and conditions. The warranty covers defects in materials and workmanship under normal use.

11.2 Customer Support

If you have any questions, concerns, or require assistance with your AVV F10 fan, please do not hesitate to contact our customer support team. You can typically find contact information on the product packaging, our official website, or through your purchase platform.

Please have your model number (F10) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question