

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Sejoy](#) /

> [Sejoy JK-1360 6-in-1 Electric Shaver User Manual](#)

## Sejoy JK-1360

# Sejoy JK-1360 6-in-1 Electric Shaver User Manual

Model: JK-1360

## INTRODUCTION

Thank you for choosing the Sejoy JK-1360 6-in-1 Electric Shaver. This versatile grooming tool is designed to provide a comfortable and efficient shaving experience for your head, face, and body. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

## PRODUCT OVERVIEW

### Included Components

- Main Shaver Body with 7D Rotary Shaving Head
- Hair Clipper Attachment
- Nose & Ear Trimmer Attachment
- Body Trimmer Attachment
- Facial Cleaning Brush Attachment
- Soft Face Sponge Attachment
- USB Charging Cable (Type-C compatible)
- Cleaning Brush
- Protective Cap

### Key Features

- **7D Floating Shaving Head:** Adapts to the contours of your head and face for a close and smooth shave.
- **6-in-1 Versatility:** Includes multiple attachments for comprehensive grooming needs.
- **Wet & Dry Shaving:** IPX6 waterproof rating allows for comfortable dry shaving or refreshing wet shaving with foam/gel.
- **Smart LED Display:** Shows remaining battery life and charging status.
- **Travel Lock Function:** Prevents accidental activation during travel.
- **Long-lasting Battery:** 1200mAh battery provides up to 120 minutes of cordless use after a 2-hour charge.
- **USB Rechargeable:** Convenient charging via USB-C from various power sources.



Image: The Sejoy JK-1360 electric shaver displaying its main body and the six interchangeable attachments for various grooming functions.

## SAFETY INFORMATION

- Keep the appliance dry when charging.
- Do not immerse the charging cable or adapter in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always check the blades for damage before use. Do not use if blades are damaged.

- Do not disassemble or attempt to repair the shaver yourself. Contact customer support for assistance.
- Avoid using the shaver on irritated or broken skin.

## SETUP

---

### Initial Charging

1. Before first use, fully charge the shaver.
2. Connect the USB charging cable to the shaver's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
4. The LED display will indicate charging status. A full charge typically takes about 2 hours.
5. Once fully charged, disconnect the shaver from the power source.

# Cordless & Portable

Easy to Carry Anywhere

100

3s unlock



Travel Lock

2 Hours

USB Charging

120 Mins

Working Time



Cordless Charger



USB Charger



Power Bank



Car Charger



Laptop Charger

Image: The Sejoy JK-1360 electric shaver connected to a USB power source, illustrating its cordless and portable design with an LED display showing battery percentage.

## Attaching/Detaching Heads

- To attach a head: Align the desired attachment with the main shaver body and press firmly until it clicks into place.
- To detach a head: Gently pull the attachment away from the shaver body.

## OPERATING INSTRUCTIONS

### Power On/Off

- Press the power button once to turn the shaver on.

- Press the power button again to turn the shaver off.

## Using the Shaver

1. Ensure the desired attachment is securely fastened.
2. For optimal results, hold the shaver at a right angle to your skin.
3. Move the shaver in small, circular motions for rotary heads, or against the direction of hair growth for trimmers.
4. The 7D floating heads are designed to follow your facial and head contours for a comfortable shave.

# More Suitable for Your Facial Contours

Enjoy a closer and smoother shaving



Image: A close-up of the Sejoy JK-1360 shaver head demonstrating its flexibility and ability to conform to facial contours for a smooth shave.

# 360° Floating Shaving

360°fit yuur head ,face and body



Image: An illustration showing the 360-degree flexibility of the Sejoy JK-1360 shaver's floating heads, designed to adapt to the head, face, and body.

## Wet vs. Dry Shaving

- **Dry Shaving:** Use the shaver on dry skin for a quick and convenient shave.
- **Wet Shaving:** Apply shaving foam or gel to your skin before shaving for a smoother, more comfortable experience, especially for sensitive skin. The shaver is fully waterproof (IPX6) and can be used in the shower.

## Travel Lock

- To activate the travel lock: Press and hold the power button for 3 seconds until the lock icon appears on the LED display.
- To deactivate the travel lock: Press and hold the power button for 3 seconds until the lock icon disappears.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

### Cleaning the Shaver Head

1. Turn off the shaver and detach the shaving head.
2. Rinse the shaving head under running water to remove hair clippings and debris.
3. For a more thorough clean, you can open the individual blade covers and rinse them.
4. Use the small cleaning brush provided to remove any stubborn hair particles.
5. Allow the head to air dry completely before reattaching it to the shaver body or storing.



Image: A step-by-step visual guide demonstrating how to detach and clean the waterproof shaving head of the Sejoy JK-1360 electric shaver under running water.

## Cleaning Other Attachments

- Rinse all attachments under running water after each use.
- Use the cleaning brush to remove any trapped hair.
- Ensure attachments are completely dry before storing.

## Storage

- Store the shaver and its attachments in a cool, dry place.
- Always place the protective cap on the shaving head when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted. Travel lock is active.	Charge the shaver fully. Deactivate the travel lock by pressing and holding the power button for 3 seconds.
Poor shaving performance.	Blades are dull or clogged with hair.	Clean the shaving head thoroughly. Consider replacing the shaving head if performance does not improve.
Shaver stops during use.	Battery is low.	Recharge the shaver.
Irritation after shaving.	Dry shaving on sensitive skin. Incorrect technique.	Try wet shaving with foam/gel. Ensure gentle, circular motions. Shave in the direction of hair growth if irritation persists.

## SPECIFICATIONS

Feature	Detail
Model Number	JK-1360
Power Source	Battery Powered
Battery Type	Lithium Ion
Battery Capacity	1200 mAh
Charging Time	Approx. 2 hours
Operating Time	Up to 120 minutes
Waterproof Rating	IPX6
Blade Material	Stainless Steel
Head Type	Rotary (7D Floating)
Color	Black
Dimensions	18 x 11.2 x 10.8 cm

Feature	Detail
Weight	500 grams

## WARRANTY AND SUPPORT

---

Sejoy products are manufactured with quality and performance in mind. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your product packaging or visit the official Sejoy website.

If you encounter any issues or have questions regarding your Sejoy JK-1360 Electric Shaver, please contact our dedicated customer support team. Our team is available to assist you with any inquiries or concerns to ensure your satisfaction.

**Contact Information:** Please refer to the contact details provided in your product packaging or on the official Sejoy website.