

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Ufree](#) /

> [Ufree Body Hair Trimmer User Manual](#)

Ufree U-1816-Q331

Ufree Body Hair Trimmer User Manual

Model: U-1816-Q331

INTRODUCTION

The Ufree Body Hair Trimmer for Men is a versatile 3-in-1 grooming kit designed for precise and comfortable hair removal across various body areas. Featuring a powerful motor, ceramic blade, and waterproof design, it offers a safe and efficient grooming experience for face and body, including sensitive areas like the groin and pubic region.

WHAT'S INCLUDED

Your Ufree Body Hair Trimmer kit comes with the following components:

- Ufree Body Hair Trimmer Unit
- Long Hair Trimmer Head
- Precise Shaver Head
- Nose Hair Trimmer Head
- Charging Dock
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Adjustable Trimmer Guard (3-6mm, 9-12mm)
- User Manual



Image: All components of the Ufree Body Hair Trimmer kit, including the main unit, various heads, charging dock, and accessories.

KEY FEATURES

- **Powerful & Precision Trim:** High-torque motor for effective and precise trimming without sacrificing comfort.
- **Enhanced Waterproof Performance (IPX7):** Designed for both wet and dry use, allowing for convenient grooming in the shower and easy cleaning.



Image: The Ufree trimmer shown with water droplets, highlighting its IPX7 waterproof capability for wet and dry use.

- **Specialized Interchangeable Blades:** Includes a long hair trimmer, precise shaver, and nose hair trimmer head for targeted grooming.



Image: Close-up of the Ufree trimmer with the long hair trimmer head attached.

SUITABLE FOR FULL BODY SHAVE



CHEST

ARMPIT



PUBIC

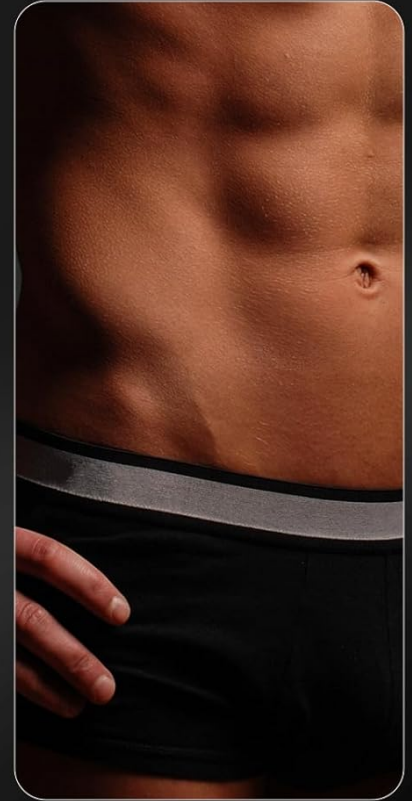


Image: Close-up of the Ufree trimmer with the body hair precise trimmer head, showing its curved and straight blades.



Image: Close-up of the Ufree trimmer with the nose trimmer head attached.

- **Cordless & Rechargeable:** Offers freedom of movement with a long-lasting battery. A 2-hour charge provides up to 180 minutes of operating time.

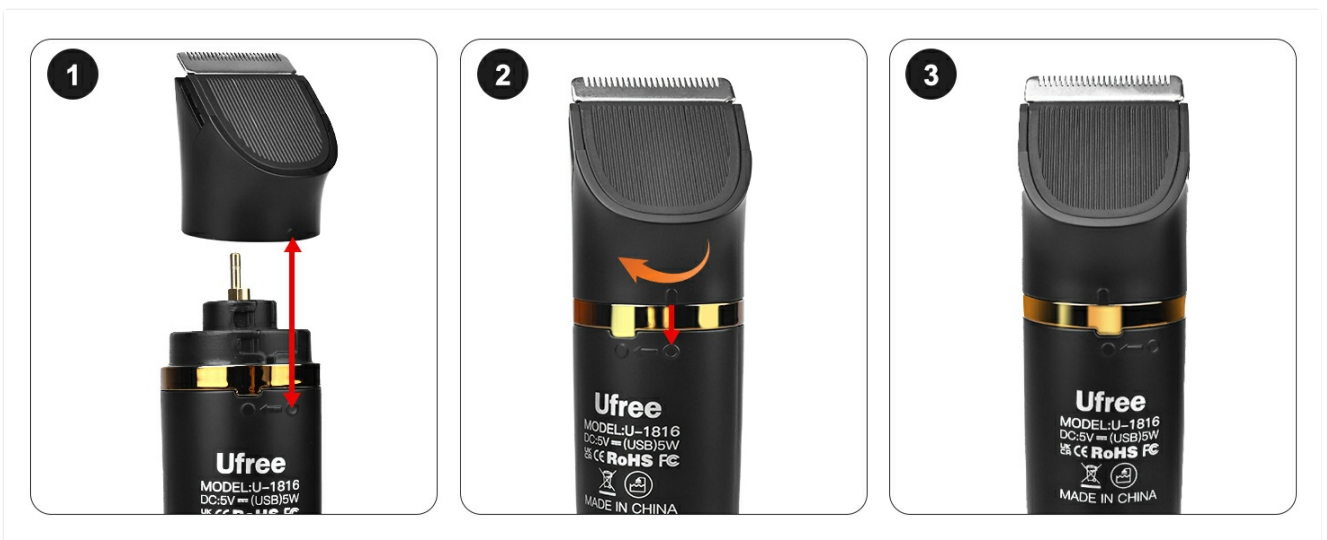


Image: The Ufree trimmer being charged via USB, illustrating its cordless and rechargeable nature.

- **Travel Lock Function:** Prevents accidental activation during travel. Press and hold the power button for 5 seconds to activate/deactivate.



Image: A hand holding the Ufree trimmer, with an icon indicating the travel lock function.

SETUP

Charging the Trimmer

1. Connect the USB charging cable to the charging dock.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
3. Place the trimmer unit into the charging dock. The indicator light on the trimmer will show charging status.
4. A full charge takes approximately 2 hours and provides up to 180 minutes of operating time.

Attaching/Changing Trimmer Heads

1. Ensure the trimmer is turned off.
2. To remove a head, gently twist and pull it upwards from the main unit.
3. To attach a head, align the head with the main unit and push down until it clicks securely into place.



Image: Visual guide on how to simply replace trimmer heads and adjust the trimmer guard.

OPERATING INSTRUCTIONS

General Use

- Press the power button to turn the trimmer on/off.
- The trimmer can be used wet or dry. For best results and comfort, consider using it in the shower or with shaving cream/gel.
- Always ensure the blades are clean and lubricated before use.

Using the Long Hair Trimmer Head

- Attach the long hair trimmer head.
- For desired hair length, slide the adjustable trimmer guard to either 3-6mm or 9-12mm setting.
- Move the trimmer against the direction of hair growth for an even trim.

Using the Precise Shaver Head

- Attach the precise shaver head.

- This head is designed for a closer shave on body hair.
- Gently press the shaver against the skin and move it slowly in the direction of hair growth.
- Ideal for areas like chest, armpit, and pubic region.



Image: The Ufree trimmer with its precise shaving head, emphasizing a smooth, nick-free trim.

Using the Nose Hair Trimmer Head

- Attach the nose hair trimmer head.
- Carefully insert the trimmer tip into the nostril or ear canal.
- Gently rotate the trimmer to remove unwanted hair.

Travel Lock

- To activate the travel lock, press and hold the power button for 5 seconds until the indicator light flashes. This prevents accidental power-on.
- To deactivate, press and hold the power button for 5 seconds again until the indicator light stops flashing.

MAINTENANCE

Cleaning

1. Turn off the trimmer and detach the trimmer head.
2. Use the provided cleaning brush to remove any trapped hair from the blades and the trimmer body.
3. Rinse the trimmer head and the main unit under running water (due to IPX7 waterproof rating). Ensure all hair residue is removed.
4. Allow all parts to air dry completely before reassembling or storing.

Lubrication

- After cleaning and drying, apply a few drops of the provided lubricating oil to the blades of the trimmer head.
- Turn on the trimmer for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and smooth operation.

Blade Replacement

- The ceramic blades are designed for durability, but may need replacement over time for optimal performance.
- Refer to the "Attaching/Changing Trimmer Heads" section for instructions on how to remove and attach new blades.
- Replacement blades can be purchased from authorized Ufree retailers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or dead. Travel lock is activated.	Charge the trimmer fully. Deactivate the travel lock by pressing and holding the power button for 5 seconds.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair. Insufficient lubrication.	Clean the blades thoroughly. Apply lubricating oil. Consider replacing the blade head if dull.
Trimmer makes unusual noise.	Hair caught in the motor or blade mechanism.	Turn off and carefully clean the trimmer head and internal mechanism.

SPECIFICATIONS

- **Model Number:** U-1816-Q331
- **Brand:** Ufree
- **Product Dimensions:** 1.38 x 1.57 x 6.3 inches
- **Item Weight:** 10.55 ounces (0.3 Kilograms)
- **Power Source:** Cordless, Rechargeable (USB)
- **Charging Time:** Approximately 2 hours
- **Working Time:** Up to 180 minutes
- **Waterproof Rating:** IPX7 (Whole-body washable)
- **Blade Material:** Ceramic
- **Recommended Uses:** Body, Ball, Groin, Pubic, Face, Genital, Chest, Under Arm, Private, Leg, Beard, Mustache, Neck
- **Country of Origin:** China

SAFETY INFORMATION

Please read and follow these safety precautions to ensure safe operation and prevent injury:

- Do not use the device near water sources if not explicitly designed for wet use (this product is IPX7 waterproof, but always ensure charging port is dry before charging).
- Do not use the device while charging.
- Handle blades with care as they are sharp.
- Keep out of reach of children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

WARRANTY AND SUPPORT

Ufree is committed to providing high-quality products and customer satisfaction.

- **Money Back Guarantee:** 30-Day Money Back.
- **Customer Support:** 24-Hour Support.
- **Warranty:** 1-Year Warranty.

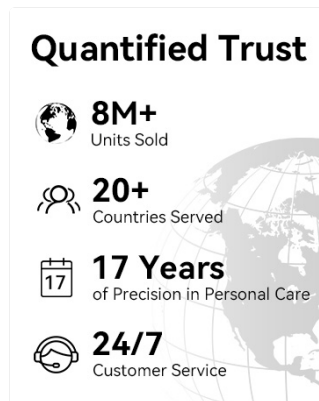


Image: Ufree customer support details, including money-back guarantee, support hours, and warranty period.

For further assistance or inquiries, please visit the official Ufree store or contact their customer service as indicated on the product packaging or official website.