

Candy CCG1S 518EX

Candy CCG1S 518EX Refrigerator-Freezer User Manual

Model: CCG1S 518EX | Brand: Candy

1. PRODUCT OVERVIEW

The Candy CCG1S 518EX is a combi refrigerator-freezer designed for efficient food storage. It features a total capacity of 252 liters, with 188 liters for the refrigerator compartment and 64 liters for the freezer compartment. This appliance utilizes static refrigeration technology and offers mechanical temperature control. Its compact design, with a width of 54.5 cm, makes it suitable for various kitchen spaces. The reversible door and integrated handles provide flexibility in installation and a sleek appearance.





Front view of the Candy CCG1S 518EX refrigerator-freezer, showcasing its stainless steel finish and combi design with the freezer at the bottom.



**Capacidad
252L**



**Puertas
reversibles**



**Ancho reducido
54,5CM**



An illustrative diagram highlighting key features: 252L total capacity, the option for reversible doors, and a reduced width of 54.5 cm, making it ideal for smaller spaces.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials from the appliance. Inspect the refrigerator-freezer for any signs of damage during transit. Keep packaging materials for potential future transport or recycling.

2.2 Placement

- Place the appliance on a firm, level surface to ensure stability and proper operation.
- Ensure adequate ventilation around the unit. Maintain a minimum clearance of 5 cm from walls and other furniture to allow for proper air circulation and heat dissipation.
- Avoid placing the refrigerator-freezer in direct sunlight or near heat sources such as ovens, radiators, or

stoves, as this can affect its cooling efficiency and energy consumption.

- The dimensions of the appliance are 179.4 cm (height) x 54.5 cm (width) x 54.5 cm (depth). Ensure sufficient space for door opening.



The Candy CCG1S 518EX refrigerator-freezer integrated into a kitchen environment, demonstrating its narrow 54.5 cm width, suitable for compact spaces.



Consulta el dibujo técnico para más información

A side view of the appliance with precise measurements, showing its height of 179.4 cm, width of 54.5 cm, and depth of 54.5 cm, crucial for installation planning.

2.3 Door Reversibility

The doors of the Candy CCG1S 518EX are reversible, allowing them to open from either the left or the right side. This feature provides maximum flexibility to adapt to your kitchen layout. Refer to the detailed instructions in the full manual for the procedure to reverse the door hinges.

2.4 Initial Power-On

After positioning the appliance, wait at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle. Once plugged in, the appliance will begin to cool. Allow several hours for the internal temperature to stabilize before loading food.

3. OPERATING INSTRUCTIONS

3.1 Temperature Control

The refrigerator-freezer features mechanical temperature control. A dial or knob inside the refrigerator compartment allows you to adjust the cooling intensity. Turn the knob to a higher number for colder temperatures and a lower number for warmer temperatures. Start with a medium setting and adjust as needed based on the ambient temperature and the amount of food stored.

3.2 Internal Organization

The appliance offers flexible storage solutions to accommodate your daily needs:

- **Refrigerator Compartment (188L):** Equipped with 3 + 1 glass shelves with white profiles and 4 door balconies. These can be adjusted to create optimal storage configurations for various items.
- **Vegetable Drawer:** A transparent drawer designed for storing fruits and vegetables, helping to maintain their freshness.
- **Freezer Compartment (64L):** Located at the bottom, it includes multiple drawers for organized frozen food storage.



**Almacenan tus compras
diarias fácilmente.**

An interior view of the refrigerator compartment, illustrating the adjustable glass shelves and the spacious vegetable drawer, emphasizing the total 252L capacity for daily groceries.



A close-up of the freezer section, displaying the clear plastic drawers designed for efficient and organized storage of various frozen goods.



A detailed view of the transparent vegetable drawer, showing its capacity for fresh produce like tomatoes and cabbage, designed to keep them crisp.



An overhead interior shot of the refrigerator, highlighting the bright LED illumination that provides clear visibility of contents, with a bunch of grapes on a shelf.





The interior of the refrigerator door, featuring multiple adjustable balconies and a dedicated egg tray, offering versatile storage for

bottles and smaller items.

3.3 Static Refrigeration Technology

This appliance uses static refrigeration, which relies on the natural circulation of air to maintain low temperatures. Cold air, being denser, sinks, while warmer air rises, creating a natural convection current. This system is effective for preserving food freshness and is generally more energy-efficient for certain applications. It is important not to block air vents inside the refrigerator to ensure proper circulation.



The refrigerator interior filled with fresh produce, symbolizing the appliance's ability to keep food fresh for extended periods through its cooling system.

4. MAINTENANCE

4.1 Cleaning

Regular cleaning of your refrigerator-freezer is essential for hygiene and optimal performance. Always unplug the appliance before cleaning.

- Clean the interior with a solution of mild detergent and warm water. Wipe dry with a soft cloth.
- Remove and clean shelves, drawers, and door balconies periodically.
- Clean the exterior surfaces with a damp cloth and mild detergent. For stainless steel finishes, use a specialized stainless steel cleaner.
- Clean the condenser coils at the back or bottom of the appliance at least once a year to ensure efficient cooling. Use a vacuum cleaner or a soft brush.

4.2 Defrosting

The Candy CCG1S 518EX features a manual defrosting system for both the refrigerator and freezer compartments. Frost buildup can reduce cooling efficiency and increase energy consumption.

- **Refrigerator:** The refrigerator compartment typically defrosts automatically during operation, with condensation collecting in a tray at the back. Ensure the drain hole is clear.
- **Freezer:** The freezer compartment requires manual defrosting when the frost layer reaches approximately 3-5 mm thickness.
- To defrost the freezer:
 1. Unplug the appliance.
 2. Remove all food items and store them in a cool place or another freezer.
 3. Leave the freezer door open to allow the frost to melt naturally. You can place towels at the bottom to absorb water. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
 4. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

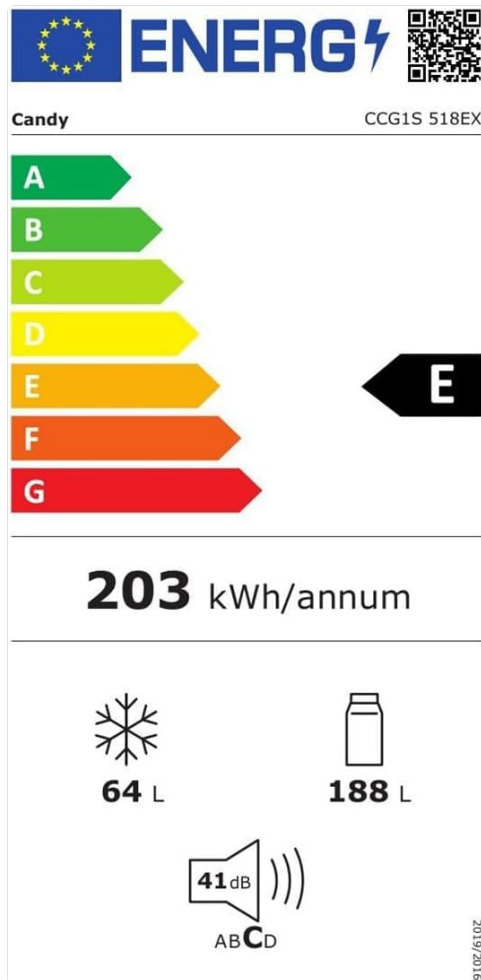 
5. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; power cord not properly plugged in; fuse blown.	Check power connection; check household fuse/circuit breaker.
Temperature is not cold enough.	Temperature setting too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature setting; minimize door openings; allow warm food to cool before storing; ensure adequate clearance around the appliance.
Excessive noise.	Appliance not level; contact with wall or other objects; normal operating sounds.	Adjust leveling feet; move appliance away from contact points; gurgling or humming sounds are normal.
Water on the floor/inside.	Drain hole blocked (refrigerator); excessive frost buildup (freezer).	Clear the drain hole; manually defrost the freezer compartment.

6. SPECIFICATIONS



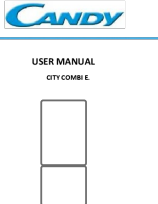 
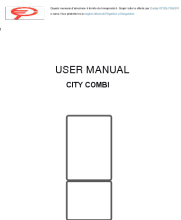 
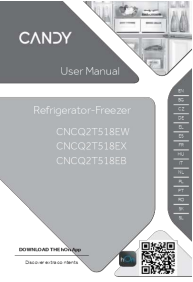 
Feature	Detail
Brand	Candy
Model Number	34005399 (CCG1S 518EX)
Total Capacity	252 Liters
Refrigerator Capacity	188 Liters
Freezer Capacity	64 Liters
Dimensions (H x W x D)	179.4 x 54.5 x 54.5 cm
Weight	45 kg
Color	Inox
Configuration	Bottom Freezer
Defrost System	Manual
Number of Doors	2
Special Features	3 + 1 glass shelves, 4 door balconies, Vegetable drawer, Egg tray, Reversible doors, Integrated handles, Static refrigeration system.
Noise Level	41 dB
Energy Efficiency Rating	E (New European Energy Label)



The energy efficiency label for the Candy CCG1S 518EX, indicating its E energy class, annual energy consumption of 203 kWh, freezer capacity of 64L, refrigerator capacity of 188L, and a noise level of 41 dB.

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your appliance at the time of purchase or visit the official Candy website. Keep your proof of purchase for any warranty claims. For further assistance, you may contact Candy customer service through their official channels. Details can typically be found on the manufacturer's website or in the product packaging.

 <p>CANDY USER MANUAL 60 COMBI 70 COMBI</p>	<p>Candy 60 Combi & 70 Combi User Manual</p> <p>Comprehensive user manual for Candy 60 Combi and 70 Combi refrigerators. Includes safety instructions, installation guides, operating procedures, maintenance tips, and troubleshooting advice.</p>
	<p>Candy CCE4T620EW Refrigerator User Manual</p> <p>Comprehensive guide for the Candy CCE4T620EW refrigerator, covering product description, usage, special functions like Super Cool and Super Freeze, app connectivity, and door reversibility.</p>
 <p>CANDY USER MANUAL CITY COMBI E.</p>	<p>Candy City Combi E. User Manual: Installation, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Candy City Combi E. refrigerator. Includes detailed instructions on installation, safe operation, food storage, maintenance, troubleshooting, and energy saving tips.</p>
 <p>CANDY USER MANUAL CITY COMBI</p>	<p>Candy City Combi User Manual</p> <p>Comprehensive user manual for the Candy City Combi refrigerator, providing essential safety information, operating instructions, and maintenance guidelines.</p>
 <p>CANDY User Manual Refrigerator-Freezer CNCQ2T518EW CNCQ2T518EX CNCQ2T518EB</p>	<p>Candy Refrigerator-Freezer User Manual</p> <p>Comprehensive user manual for Candy Refrigerator-Freezer models CNCQ2T518EW, CNCQ2T518EX, and CNCQ2T518EB. Includes safety information, intended use, product description, control panel operation, installation, and maintenance tips.</p>



[Candy Refrigerator-Freezer CNCQ2T518EW, CNCQ2T518EX, CNCQ2T518EB User Manual](#)

User manual for Candy Refrigerator-Freezer models CNCQ2T518EW, CNCQ2T518EX, and CNCQ2T518EB. This guide provides instructions on installation, operation, safety, maintenance, and troubleshooting.