

Karlsson KA5982BP

Karlsson Spry Square LED Alarm Clock User Manual

Model: KA5982BP

INTRODUCTION

Thank you for purchasing the Karlsson Spry Square LED Alarm Clock. This compact and modern alarm clock is designed to provide reliable timekeeping and alarm functions for your home or office. Please read this manual carefully before using the product to ensure proper operation and maintenance.

PRODUCT OVERVIEW

The Karlsson Spry Square LED Alarm Clock features a clear digital display and a compact square design, making it suitable for various settings such as a bedside table or desk.



Figure 1: Front view of the Karlsson Spry Square LED Alarm Clock. This image shows the bright pink alarm clock from a slight angle, with its red LED display showing "12:00". The Karlsson brand name is visible below the display.



Figure 2: Back view of the Karlsson Spry Square LED Alarm Clock. This image displays the rear of the pink alarm clock, featuring a large black cover labeled "OPEN" for the battery compartment, and three control buttons labeled "SET", "UP", and "DOWN" below it. A DC input port is also visible.

PACKAGE CONTENTS

- Karlsson Spry Square LED Alarm Clock
- User Manual (this document)
- Power Adapter (may vary by region)

SETUP

1. Power Connection

1. Locate the DC input port on the back of the alarm clock.
2. Connect the provided power adapter to the DC input port.
3. Plug the power adapter into a standard electrical outlet. The display should illuminate.
4. **Optional Battery Backup:** For time retention during power outages, insert 3 x AAA batteries (not included) into the

battery compartment. Open the compartment cover on the back of the unit, insert batteries according to polarity markings, and close the cover securely.

2. Initial Time Setting

1. Press and hold the **SET** button on the back of the clock until the hour digits begin to flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press the **SET** button again to confirm the hour and move to the minute setting.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Press the **SET** button one more time to confirm the minutes and exit time setting mode.

OPERATING INSTRUCTIONS

Setting the Alarm

1. Press the **SET** button once (do not hold) to enter alarm setting mode. The alarm time will be displayed, and the hour digits may flash.
2. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
3. Press the **SET** button again to confirm the alarm hour and move to the alarm minute setting.
4. Use the **UP** or **DOWN** buttons to adjust the alarm minutes.
5. Press the **SET** button one more time to confirm the alarm minutes and exit alarm setting mode.

Activating/Deactivating the Alarm

While in normal time display mode, press the **UP** button to toggle the alarm on or off. An alarm icon (e.g., a bell symbol or "AL") will appear on the display when the alarm is active.

Snooze Function

When the alarm sounds, press any button (except **SET**) to activate the snooze function. The alarm will temporarily stop and sound again after approximately 5-10 minutes (exact duration may vary). To turn off the alarm completely, press the **SET** button when it is sounding.

Display Brightness Adjustment

Press the **DOWN** button to cycle through different brightness levels for the LED display.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Power:** Ensure the clock is connected to a stable power source. If using battery backup, replace batteries annually or when the display dims.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	No power, loose connection, or low battery backup.	Check power adapter connection. Ensure outlet is functional. Replace backup batteries if applicable.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Verify alarm is turned on (check for alarm icon). Re-set the alarm time.
Time is incorrect.	Time was not set correctly or power interruption.	Re-set the current time following the "Initial Time Setting" instructions.

SPECIFICATIONS

- Brand:** Karlsson
- Model Number:** KA5982BP
- Color:** Bright Pink
- Dimensions (L x W x H):** 6.8 x 3.81 x 6.6 cm (2.68 x 1.5 x 2.6 inches)
- Weight:** 120 grams (0.26 lbs)
- Material:** Engineered Wood
- Display Type:** Digital LED
- Power Source:** AC Power Adapter (included), 3x AAA batteries for backup (not included)
- Usage:** Indoor

WARRANTY AND SUPPORT

Specific warranty information for the Karlsson Spry Square LED Alarm Clock is not provided in this manual. Please refer to the product packaging or the retailer's website for details regarding warranty coverage and customer support. For technical assistance or inquiries, please contact Karlsson customer service through their official website or the point of purchase.