

PIKOY WH-E14A

PIKOY Star Projector Galaxy Light Projector WH-E14A User Manual

Model: WH-E14A

1. INTRODUCTION

The PIKOY Star Projector Galaxy Light Projector is a versatile device designed to create a captivating starry sky and nebula projection. It integrates a Bluetooth speaker and a white noise machine, offering a multi-sensory experience for relaxation and ambiance. This manual provides detailed instructions for the safe and effective use of your projector.

2. SAFETY INFORMATION

- Do not look directly into the projector light source to avoid eye damage.
- Keep the device away from water or other liquids to prevent electric shock.
- Do not disassemble or attempt to repair the device yourself. Contact qualified personnel for service.
- Use only the provided power adapter.
- Keep out of reach of children without adult supervision.
- Ensure proper ventilation; do not cover the device during operation.

3. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact customer support.

- PIKOY Star Projector Galaxy Light Projector
- Remote Control
- USB Cable
- User Manual (this document)

It Seems to be in the Splendid Galaxy

Perfect Children's Room Decoration Gift



Image: Package contents including the projector, remote, USB cable, and manual.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your PIKOY Star Projector and its remote control.

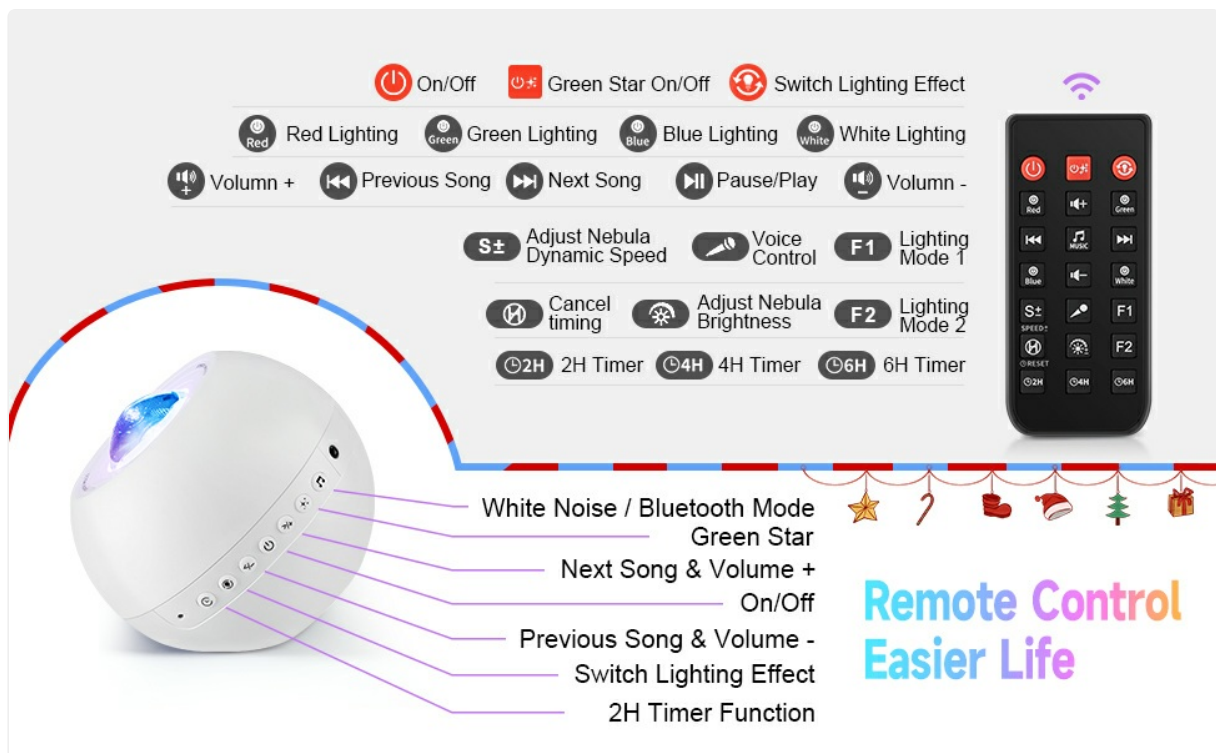


Image: Overview of the projector and remote control buttons.

4.1 Projector Buttons

- **Power Button:** Turns the projector on or off.
- **White Noise / Bluetooth Mode Green Star Button:** Switches between white noise and Bluetooth speaker modes.
- **Green Star Button:** Toggles the green star projection on/off.
- **Next Song & Volume +:** Skips to the next track in Bluetooth mode or increases volume.
- **Previous Song & Volume -:** Skips to the previous track in Bluetooth mode or decreases volume.
- **Switch Lighting Effect:** Cycles through different light projection effects.
- **2H Timer Function:** Activates a 2-hour automatic shut-off timer.

4.2 Remote Control Functions

The remote control provides comprehensive control over all projector functions.

- **On/Off:** Power on/off the projector.
- **Green Star On/Off:** Toggles green stars.
- **Switch Lighting Effect:** Changes light patterns.
- **Color Buttons (Red, Green, Blue, White):** Selects individual or combined colors.
- **Volume +/-:** Adjusts speaker volume.
- **Previous/Next Song:** Navigates music tracks.
- **Pause/Play:** Controls music playback.
- **Adjust Nebula Dynamic Speed (S+/-):** Controls the movement speed of the nebula effect.
- **Voice Control:** Activates sound-activated light mode.
- **Lighting Mode (F1, F2):** Pre-set lighting modes.
- **Cancel Timing:** Deactivates any active timer.
- **Adjust Nebula Brightness:** Changes the brightness of the nebula.
- **Timer Buttons (2H, 4H, 6H, 8H):** Sets automatic shut-off timers.

5. SETUP

1. **Power Connection:** Connect the provided USB cable to the projector and a compatible USB power adapter (not included) or a USB port. Plug the adapter into a power outlet.
2. **Placement:** Place the projector on a stable, flat surface. For optimal projection, position it in the center of the room or desired projection area.
3. **Initial Power On:** Press the power button on the projector or the remote control to turn on the device.

6. OPERATING INSTRUCTIONS

6.1 Light Projection

The projector offers 15 color combinations and various dynamic effects.

- Use the color buttons on the remote to select individual colors (Red, Green, Blue, White) or combine them.
- Press the 'Switch Lighting Effect' button on the projector or remote to cycle through different nebula patterns.
- Adjust the nebula movement speed using the 'S+/-' buttons on the remote.
- Toggle the green stars on/off using the 'Green Star' button on the projector or remote.
- Adjust the brightness of the nebula using the 'Adjust Nebula Brightness' buttons on the remote.
- Activate 'Voice Control' on the remote for lights to react to sound.



Image: Example of galaxy and star projection in a room.

Video: Demonstration of 15 colors and 15 white noise options for the galaxy projector.

Video: Showcase of the 15 colors and 15 white noise features of the star projector galaxy light.

Video: Overview of the 15 colors and 15 white noise functions of the star projector galaxy projector.

6.2 Bluetooth Speaker Function

The projector features a 5.3 HiFi Bluetooth speaker.

1. Press the 'White Noise / Bluetooth Mode' button on the projector to switch to Bluetooth mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select the device named 'WH-E14A' (or similar) to pair.
4. Once connected, you can play music from your device through the projector's speaker.
5. Use the volume and track control buttons on the projector or remote to manage playback.



Image: Bluetooth speaker function in use with music playback.

6.3 White Noise Function

The projector includes 15 soothing white noise sounds.

1. Press the 'White Noise / Bluetooth Mode' button on the projector to switch to white noise mode.
2. The projector will cycle through the available white noise sounds.
3. Adjust the volume using the volume buttons on the projector or remote.



Image: White noise feature for sleep and relaxation.

6.4 Timer Function

Set an automatic shut-off timer for convenience.

- On the remote control, press the 2H, 4H, 6H, or 8H buttons to set the desired timer duration.
- The projector will automatically turn off after the selected time.
- To cancel the timer, press the 'Cancel Timing' button on the remote.

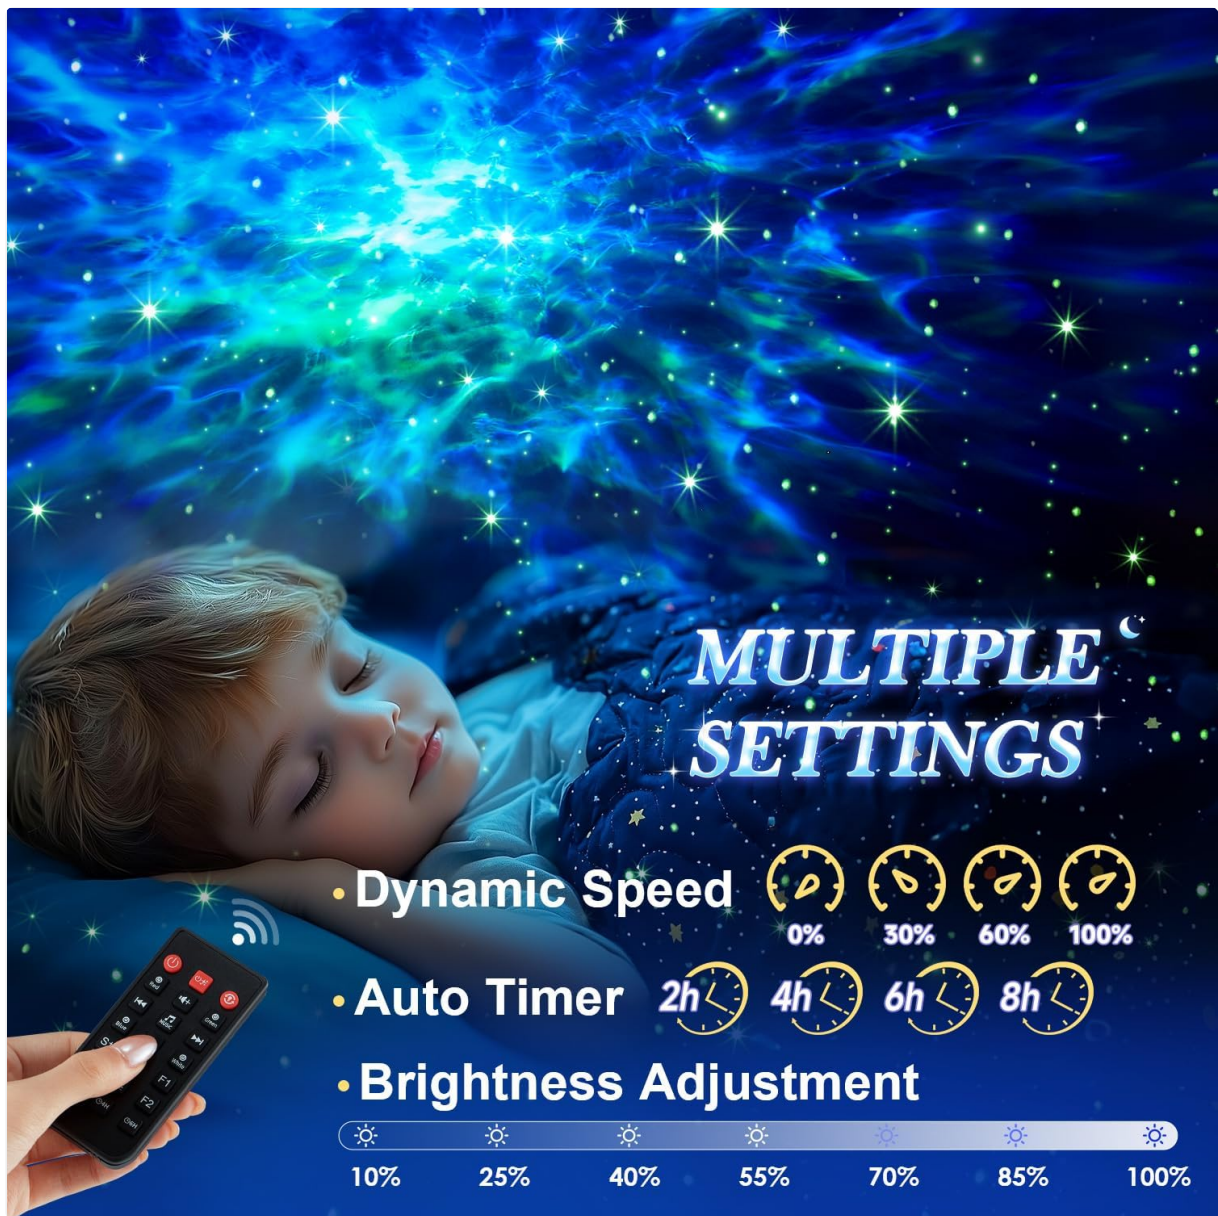


Image: Remote control functions for timer and brightness.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the projector. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Lens Care:** Gently wipe the projection lens with a microfiber cloth to ensure clear projection.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power supply or loose connection.	Check if the USB cable is securely connected and the power adapter is plugged into a working outlet.
Lights are dim or unclear.	Lens is dirty or brightness setting is low.	Clean the projection lens. Increase brightness using the remote control. Ensure the room is dark.

Problem	Possible Cause	Solution
Bluetooth cannot connect.	Projector not in Bluetooth mode or device not discoverable.	Ensure the projector is in Bluetooth mode. Turn off and on Bluetooth on your mobile device. Try pairing again.
Remote control not working.	Battery depleted or obstruction.	Replace the remote control battery. Ensure there is no obstruction between the remote and the projector.
Automatic shut-off occurs unexpectedly.	Timer is active.	Press the 'Cancel Timing' button on the remote to deactivate the timer.

9. SPECIFICATIONS

- **Model Number:** WH-E14A
- **Light Source Type:** LED
- **Number of Light Sources:** 1
- **Shade Color:** Multicolor
- **Shade Material:** Plastic
- **Base Material:** Plastic
- **Power Source:** Battery Powered (USB connectivity for charging/power)
- **Control Method:** Remote, Voice
- **Connectivity Technology:** USB, Bluetooth 5.3
- **Installation Type:** Tabletop
- **Indoor/Outdoor Usage:** Indoor
- **Water Resistance Level:** Not Water Resistant
- **Dimensions (Shade Height):** 4.13 Inches

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official PIKOY website. Keep your purchase receipt for warranty claims.