

## Karlsso KA5981OR

# Karlsso Spry Round Alarm Clock User Manual

Model: KA5981OR

## INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Karlsso Spry Round Alarm Clock. This compact and elegant digital alarm clock features time display, alarm function, and temperature indication, making it a versatile addition to your bedside table or office desk.



Image: Front view of the Karlsso Spry Round Alarm Clock in orange, displaying the time 12:17.

## **SAFETY INFORMATION**

---

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Use only the specified power adapter (DC 5V) or USB cable.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel.

## **PACKAGE CONTENTS**

---

Please check that all items are present in the package:

- Karlsson Spry Round Alarm Clock (Model: KA5981OR)
- USB Power Cable (Note: Power adapter not included)
- User Manual (this document)

## **PRODUCT OVERVIEW**

---

Familiarize yourself with the various parts and controls of your alarm clock.



Image: Rear view of the Karlsson Spry Round Alarm Clock, showing the control panel with 'SET', 'UP', 'DOWN' buttons, DC 5V power input, and a reset hole.

### Control Panel (Rear View)

- **SET Button:** Used to enter setting modes (time, alarm) and confirm selections.
- **UP Button:** Used to increase values or navigate menu options.
- **DOWN Button:** Used to decrease values or navigate menu options.
- **DC 5V Input:** Power input port for the USB cable.
- **RESET Hole:** Small hole for resetting the device using a thin object (e.g., paperclip).

## SETUP

### 1. Powering On

1. Locate the DC 5V input port on the back of the alarm clock.
2. Connect the provided USB power cable to the DC 5V input port.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB port (e.g., computer, power bank).

4. The digital display will illuminate, indicating the clock is powered on.

## 2. Initial Time Setting

Upon first power-on, you may need to set the current time.

1. Press and hold the **SET** button for a few seconds until the hour digits start flashing.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press the **SET** button again to move to the minute digits.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Press the **SET** button one more time to confirm the time and exit the setting mode.

## OPERATING INSTRUCTIONS

---

### Setting the Alarm

1. Press the **SET** button once (do not hold) to cycle through display modes until the alarm time is shown (often indicated by a small alarm icon).
2. While the alarm time is displayed, press and hold the **SET** button until the alarm hour digits flash.
3. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
4. Press the **SET** button to move to the alarm minute digits.
5. Use the **UP** or **DOWN** buttons to set the desired alarm minutes.
6. Press the **SET** button to confirm and exit alarm setting mode.

### Turning Alarm On/Off

To activate or deactivate the alarm:

- In normal time display mode, press the **UP** button to toggle the alarm on or off. An alarm icon will appear on the display when the alarm is active.

### Snooze Function

When the alarm sounds, press any button (except **RESET**) to activate the snooze function. The alarm will sound again after approximately 5-10 minutes (duration may vary by model).

### Stopping the Alarm

To stop the alarm completely, press and hold the **SET** button when the alarm is sounding, or wait for it to automatically turn off after a set period (e.g., 1 minute).

### Temperature Display

The clock automatically displays the ambient temperature. This display may alternate with the time display or be shown simultaneously, depending on the current display mode. No user action is typically required to activate this feature.

## MAINTENANCE

---

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays.
- **Storage:** If storing the clock for an extended period, disconnect it from the power source.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power or loose connection.	Ensure the USB cable is securely connected to the clock and a powered USB port/adaptor. Try a different USB port or adapter.
Alarm does not sound.	Alarm is not set or is deactivated.	Verify the alarm time is set correctly and that the alarm function is activated (check for alarm icon on display).
Incorrect time displayed.	Time not set correctly or power interruption.	Reset the time following the "Initial Time Setting" instructions. If issues persist, use the RESET hole on the back.
Buttons are unresponsive.	Temporary software glitch.	Disconnect and reconnect the power. If unresponsive, gently press the RESET hole on the back with a thin, non-metallic object.

## SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5981OR
Colour	Orange
Product Dimensions	4.3 x 3.81 x 9 cm (Diameter 9 cm)
Item Weight	130 g
Display Type	Digital LED
Special Features	Alarm, Temperature Display
Power Source	DC 5V (USB powered, adapter not included)
Mounting Type	Tabletop
Material	MDF

## WARRANTY AND SUPPORT

Specific warranty information for your Karlsson Spry Round Alarm Clock is typically provided at the point of purchase or on the product packaging. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the retailer or Karlsson customer service directly. Contact details can usually be found on the product packaging or the official Karlsson website.

Please visit the official Karlsson website for the most up-to-date support information.

Documents - Karlsson – KA5981OR

no relevant documents