



Manuals.plus /

- › VEGER /
- › VEGER V1179 Compact 10000mAh Portable Charger Instruction Manual

VEGER V1179

VEGER V1179 Compact 10000mAh Portable Charger Instruction Manual

Model: V1179

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your VEGER V1179 Compact 10000mAh Portable Charger. Please read this manual thoroughly before operating the device and retain it for future reference.

PRODUCT OVERVIEW

The VEGER V1179 is a compact and portable power bank designed to provide on-the-go charging for various electronic devices. It features a 10000mAh battery capacity, 20W fast charging capabilities, and a unique built-in bidirectional cable for versatile connectivity.



Image: The VEGER V1179 portable charger in black, connected via its built-in cable to a smartphone, displaying a charge percentage. The charger features a sparkling texture on one side and a digital display showing the battery level.

Your browser does not support the video tag.

Video: An official product video showcasing the VEGER Stylish Portable Charger, highlighting its design, built-in cables, and charging capabilities for various devices.

1. Charging the Portable Charger

Before initial use, fully charge your VEGER V1179 portable charger. There are two methods to recharge the power bank:

1. **Using the Built-in Cable:** Extend the built-in USB-C cable and connect it to a compatible USB power adapter (not included).
2. **Using the USB-C Port:** Connect a USB-C to USB-C cable (not included) to the power bank's USB-C input port and a compatible USB power adapter.

The digital display will show the charging progress. A full charge typically takes 3-4 hours.

2 Ways to Refuel the Portable Charger

Fully Recharged in 3-4 Hours

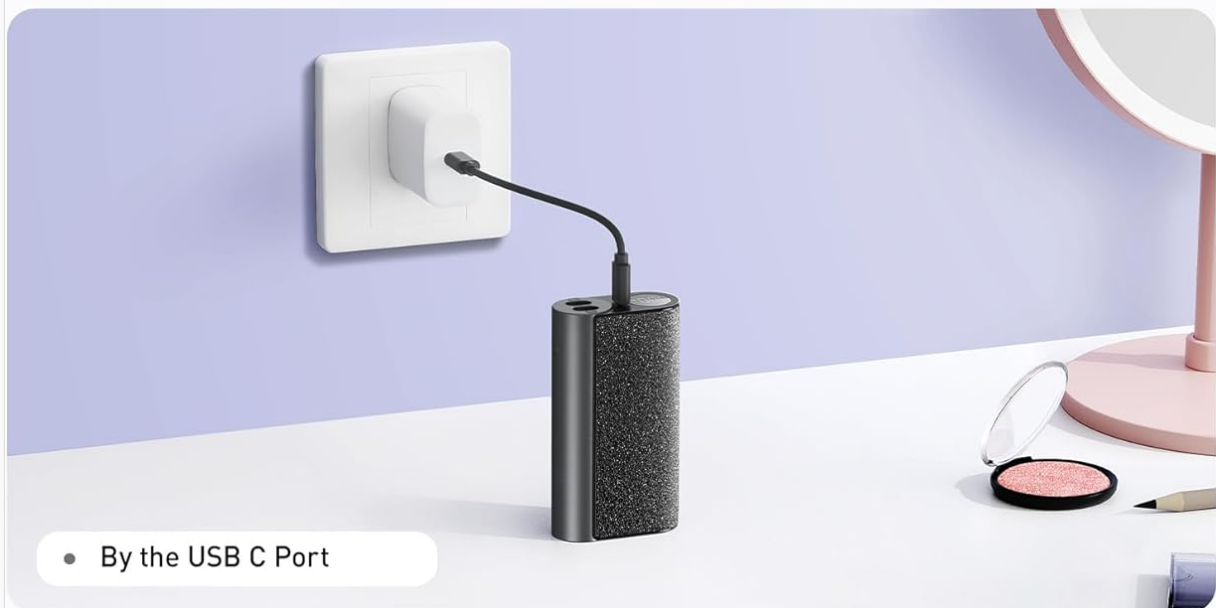


Image: Illustration showing two methods to recharge the power bank: one using the built-in cable plugged into a wall adapter, and another using an external USB-C cable connected to the USB-C port.

2. Connecting Devices for Charging

The VEGER V1179 features a built-in bidirectional cable that supports both USB-C and Lightning connectors, making it compatible with a wide range of devices.

Bidirectional USB C to iOS Cable



Image: A graphic illustrating the bidirectional nature of the built-in cable, showing how it can be used as a USB-C to iOS (Lightning) cable for older iPhones (up to iPhone 14) and as an iOS (Lightning) to USB-C cable for iPhone 15 and Android devices.

OPERATING INSTRUCTIONS

1. Charging Your Device

1. Extend the built-in cable from the power bank.
2. Connect the appropriate end of the cable (USB-C or Lightning) to your device's charging port.
3. The power bank will automatically begin charging your device. The digital display on the power bank

will show its remaining battery percentage.

The 20W Power Delivery (PD) fast charging feature allows for rapid charging of compatible devices, such as an iPhone 15 to 60% in approximately 30 minutes.



Image: The VEGER portable charger connected to an iPhone 15, illustrating its 20W PD fast charging capability, showing a 60% charge in 30 minutes compared to 15% with a standard 5V-1A charger.

2. Checking Battery Level

Press the power button located on the side of the power bank. The digital display will illuminate, showing the current battery percentage of the power bank.



Image: A close-up view of the VEGER portable charger's digital display, clearly showing "100%" indicating a full charge. This display allows users to monitor the power bank's remaining battery life.

MAINTENANCE

- Keep the power bank away from extreme temperatures, direct sunlight, and liquids.
- Avoid dropping or subjecting the device to strong impacts.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.
- For optimal battery life, fully charge and discharge the power bank at least once every three months.

TROUBLESHOOTING

- **Device not charging:**
 1. Ensure the power bank itself is charged. Check the digital display.
 2. Verify that the built-in cable is securely connected to both the power bank and your device.
 3. Try using a different charging cable or port if available.
 4. Ensure your device is compatible with the power bank's output specifications.
- **Power bank not charging:**
 1. Ensure the wall adapter is functioning correctly and the cable is securely connected.
 2. Try a different wall adapter or power outlet.
 3. Ensure the charging cable used to charge the power bank is not damaged.
- **Slow charging:**
 1. Ensure both the power bank and your device support fast charging.
 2. Check if the cable used is rated for fast charging.
 3. Avoid using your device extensively while it is charging.

SPECIFICATIONS

Feature	Detail
Model Number	V1179
Battery Capacity	10000mAh
Product Dimensions	3.78 x 2.12 x 1.02 inches
Item Weight	7.9 ounces
Special Feature	Built-in Bidirectional Cable (USB-C & Lightning)
Fast Charging	20W Power Delivery (PD)
Connector Type	USB Type C
Manufacturer	Dong guan Utopia-Originality Technology Co., Ltd

WARRANTY INFORMATION

VEGER products are covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official VEGER website.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact VEGER customer support through the following channels:

- **Online:** Visit the official VEGER website for FAQs and support contact forms.
- **Email:** Refer to your product packaging or warranty card for specific email addresses.

Please have your product model number (V1179) and purchase details ready when contacting support.