

Manuals.plus /

› VEGER /

› VEGER Compact Portable Charger with Built-in Cable (Removable), 10000mAh Cute Power Bank 20W Fast Charging User Manual

VEGER V1179

VEGER Compact Portable Charger User Manual

Model: V1179 | Brand: VEGER

PRODUCT OVERVIEW

The VEGER V1179 Compact Portable Charger is a 10000mAh power bank designed for convenient and fast charging of your mobile devices. Its compact size and built-in bidirectional cable make it an ideal travel accessory.

Key Features

- **10000mAh Capacity:** Provides multiple charges for smartphones.
- **20W Fast Charging:** Quickly refuels compatible devices.
- **Built-in Bidirectional Cable:** Integrated USB-C to iOS cable for versatile charging.
- **Compact & Portable Design:** Easily fits into small bags.
- **Digital Display:** Shows remaining battery percentage.



The VEGER V1179 Compact Portable Charger in green, connected to a smartphone via its built-in cable, demonstrating its primary function.

10000mAh Stylish Portable Charger




The compact VEGER 10000mAh portable charger shown alongside various makeup items, highlighting its small size and suitability for carrying in a makeup bag or small purse.

Sparkling and Stylish Design

Ultra Compact and Slim



186 g / 6.56 oz 

96 x 53.75 x 6 mm
3.78 x 2.12 x 1.02 in 

A woman holding the VEGER portable charger, illustrating its ultra-compact and slim design, making it easy to handle and carry.

SETUP

Charging the Power Bank

Before initial use, fully charge your VEGER portable charger. It can be recharged in two ways:

1. **Using the Built-in Cable:** Plug the USB-C end of the built-in cable into a USB-C power adapter (not included).
2. **Using the USB-C Port:** Connect a USB-C to USB-C cable (not included) to the dedicated USB-C input/output port on the power bank and a USB-C power adapter.

A full recharge typically takes 3-4 hours with a compatible fast charger.

2 Ways to Refuel the Portable Charger

Fully Recharged in 3-4 Hours

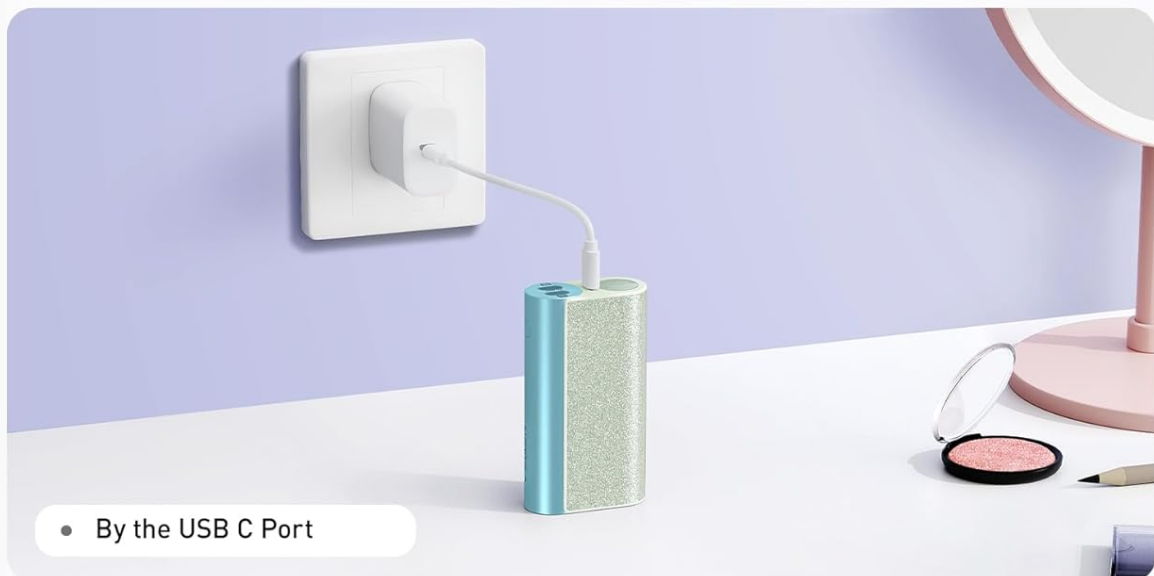


Illustration of the two methods for recharging the portable charger: via its built-in cable plugged into a wall adapter, or by connecting a separate USB-C cable to the USB-C port.

Checking Battery Level

The power bank features an LCD screen that displays the remaining battery percentage. Simply press the power button once to activate the display and check the charge level.



A close-up view of the portable charger's digital display, clearly showing '100%' indicating a full charge, along with a charging icon.

OPERATING INSTRUCTIONS

Charging Your Device

The VEGER V1179 is equipped with a unique bidirectional built-in cable that supports both USB-C and iOS devices, eliminating the need for multiple cables.

- **For iPhone (up to iPhone 14) / Older iOS Devices:** Use the iOS (Lightning) end of the built-in cable.
- **For iPhone 15 / Android / USB-C Devices:** Use the USB-C end of the built-in cable.

Simply plug the appropriate end of the built-in cable into your device's charging port. The power bank will automatically begin charging.

Bidirectional USB C to iOS Cable




A visual representation of the bidirectional USB-C to iOS cable, demonstrating how it can be used to charge both older iPhones (up to iPhone 14) and newer iPhone 15/Android devices.

Fast Charging Capability

This power bank supports PD 20W fast charging, allowing it to refuel your iPhone 15/14 to approximately 60% in just 30 minutes. Ensure your device and cable are compatible with fast charging for optimal results.

PD 20W Fast Charging

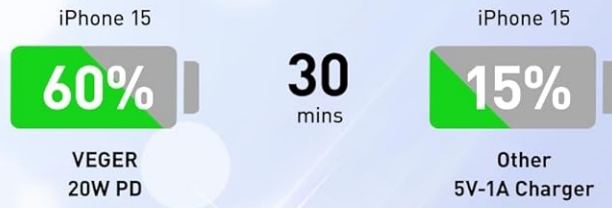

A graphic comparing the charging speed of the VEGER 20W PD fast charger (60% in 30 mins) against a standard 5V-1A charger (15% in 30 mins) for an iPhone 15.

Share the Power



Two individuals sharing the portable charger, with one person holding the power bank connected to the other's smartphone, illustrating its convenience for shared use.

MAINTENANCE

Cleaning

To clean the power bank, gently wipe its surface with a soft, dry cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the device or its sparkling finish.

Storage

Store the power bank in a cool, dry place away from direct sunlight, extreme temperatures, and high

humidity. If storing for an extended period, ensure the power bank is charged to approximately 50-75% to maintain battery health.

TROUBLESHOOTING

Common Issues

- **Power Bank Not Charging:** Ensure the charging cable is securely connected to both the power bank and the power adapter. Try a different power adapter or cable.
- **Device Not Charging:** Verify that the built-in cable is correctly inserted into your device. Check if the power bank has sufficient charge. Try restarting your device.
- **Slow Charging:** Ensure your device and the power bank are both capable of fast charging. Use a compatible fast-charging wall adapter when recharging the power bank.
- **Display Not Working:** Press the power button firmly. If the issue persists, try charging the power bank to see if it reactivates.

If problems persist, refer to the warranty information or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	VEGER
Model Number	V1179
Battery Capacity	10000 Milliamp Hours
Charging Speed	20W PD Fast Charging
Connector Type	USB Type C (Built-in bidirectional cable)
Product Dimensions	3.78 x 1.02 x 2.2 inches
Item Weight	8.1 ounces
Special Feature	Built-in Cable, Digital Display

WARRANTY AND SUPPORT

VEGER products are manufactured with high-quality standards. For specific warranty details and customer support, please refer to the product packaging or contact VEGER customer service directly. Keep your purchase receipt for warranty claims.

Visit the official VEGER Store for more information and product registration: [VEGER Store on Amazon](#)

