

[Manuals.plus](#) /

› [VEGER](#) /

› VEGER V1179 10000mAh Portable Charger Instruction Manual

VEGER V1179

VEGER V1179 10000mAh Portable Charger Instruction Manual

Model: V1179 | Brand: VEGER

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your VEGER V1179 10000mAh Portable Charger. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or fire.
- Avoid dropping, disassembling, or attempting to repair the device yourself.
- Keep out of reach of children.
- Use only compatible charging cables and adapters.
- Do not immerse in water or expose to excessive moisture.
- Dispose of the product responsibly according to local regulations.

3. PRODUCT OVERVIEW

The VEGER V1179 is a compact 10000mAh portable power bank designed for charging various mobile devices. It features a built-in bidirectional cable and supports 20W fast charging.

Package Contents:

- VEGER V1179 Portable Charger
- User Manual

Key Features:

- 10000mAh Battery Capacity
- Built-in Bidirectional USB-C to iOS Cable
- 20W Power Delivery (PD) Fast Charging

- Digital Display for Battery Percentage
- Compact and Portable Design



Image: The VEGER V1179 portable charger in blue, connected via its built-in cable to a smartphone, displaying 100% charge.

Sparkling and Stylish Design

Ultra Compact and Slim



186 g / 6.56 oz



96 x 53.75 x 6 mm
3.78 x 2.12 x 1.02 in



Image: A woman holding the VEGER V1179 portable charger, highlighting its compact dimensions (3.78 x 2.12 x 1.02 inches) and light weight (6.56 ounces).

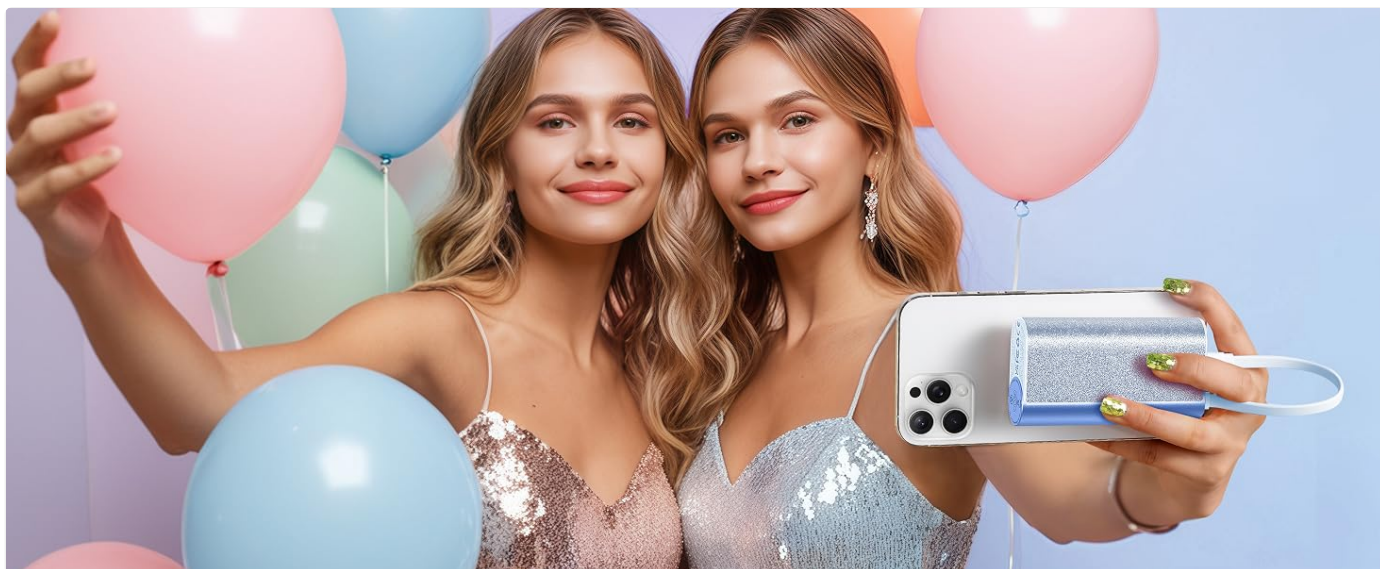


Image: A compatibility chart showing various devices compatible with the VEGER V1179, including iPhone 15 series, iPad Air/Pro series, Samsung S23 series, neck fans, portable fans, iPhone 14 series, iPhone 13 series, iPad 9/8 series, and AirPods series, categorized by USB-C and iOS connections.

4. SETUP AND INITIAL CHARGE

4.1 Charging the Portable Charger

Before first use, fully charge your VEGER V1179 portable charger. The digital display will show the battery percentage.

1. **Using the Built-in Cable:** Connect the built-in cable to a USB-C power adapter (not included) and plug it into a wall outlet.
2. **Using the USB-C Port:** Alternatively, connect a USB-C to USB-C cable (not included) to the charger's USB-C IN/OUT port and a USB-C power adapter.

A full charge typically takes 3-4 hours. The display will show "100%" when fully charged.

2 Ways to Refuel the Portable Charger

Fully Recharged in 3-4 Hours



Image: Illustration demonstrating two ways to recharge the portable charger: using its built-in cable connected to a wall adapter, or using an external USB-C cable connected to the USB-C port.



Image: A close-up view of the VEGER V1179's digital display, indicating a full charge with "100%" and a charging icon.

5. OPERATING INSTRUCTIONS

5.1 Charging Your Device

The VEGER V1179 features a built-in bidirectional cable for convenient charging.

1. **For iPhone (up to iPhone 14) / iOS devices:** Connect the USB-C end of the built-in cable to the portable charger and the iOS end to your device.
2. **For iPhone 15 / Android / USB-C devices:** Connect the iOS end of the built-in cable to the portable charger and the USB-C end to your device.

The digital display on the power bank will illuminate, showing the remaining battery percentage. Your device should begin charging automatically.

Bidirectional USB C to iOS Cable



USB C to iOS

For iPhone (UP to iPhone 14)



iOS to USB C

For iPhone 15 and Android



Image: A visual guide demonstrating the bidirectional functionality of the built-in cable, showing how to connect it for USB-C to iOS (for iPhone up to 14) and iOS to USB-C (for iPhone 15 and Android devices).

PD 20W Fast Charging



Image: A comparison graphic showing the VEGER V1179's 20W PD fast charging capability, charging an iPhone 15 to 60% in 30 minutes, compared to a standard 5V-1A charger reaching only 15% in the same time.

5.2 Checking Battery Level

Press the power button (if available, or simply connect a device) to activate the digital display and view the current battery percentage of the portable charger.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the charger. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, charge the device to approximately 50-70% every three months to maintain battery health.
- **Cable Care:** Handle the built-in cable gently. Avoid sharp bends or excessive pulling to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Charger not charging device	Low battery on power bank; incorrect cable connection; device not compatible.	Recharge the power bank; ensure cable is correctly connected for your device type (USB-C to iOS or iOS to USB-C); verify device compatibility.
Power bank not recharging	Faulty charging adapter/cable; loose connection; power bank malfunction.	Try a different USB-C power adapter and cable; ensure connections are secure; contact customer support if issue persists.
Slow charging	Cable issue; device drawing less power; environmental factors.	Ensure you are using the built-in cable correctly for fast charging; check if your device supports 20W PD charging.
Digital display not working	Power bank is off; internal issue.	Press the power button to activate the display; if unresponsive, try charging the power bank.

8. SPECIFICATIONS

Feature	Detail
Model Number	V1179
Battery Capacity	10000 Milliamp Hours (mAh)
Product Dimensions	3.78 x 1.02 x 2.2 inches
Item Weight	7.7 ounces
Connector Type	USB Type C (Built-in bidirectional cable)
Special Features	Built-in Cable, 20W PD Fast Charging, Digital Display
Batteries	2 Lithium Polymer batteries (included)
Manufacturer	Dong guan Utopia-Originality Technology Co., Ltd

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official VEGER website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question