

Manuals.plus /

› RIVERSONG /

› RIVERSONG Rhythm M6 Wireless Bluetooth Headphones User Manual

RIVERSONG Rhythm M6

RIVERSONG Rhythm M6 Wireless Bluetooth Headphones User Manual

Model: Rhythm M6

1. INTRODUCTION

Thank you for choosing the RIVERSONG Rhythm M6 Wireless Bluetooth Headphones. These headphones are designed to provide a high-quality audio experience with advanced features such as Environmental Noise Cancellation (ENC), 360-degree stereo sound, and a comfortable, foldable design. This manual will guide you through the setup, operation, and maintenance of your new headphones to ensure optimal performance.



Image 1.1: RIVERSONG Rhythm M6 Wireless Bluetooth Headphones. The image displays the black over-ear headphones with the RIVERSONG logo on the earcups, set against a light blue and white background.

2. PRODUCT OVERVIEW

2.1 Package Contents

- RIVERSONG Rhythm M6 Wireless Bluetooth Headphones
- USB-C Charging Cable
- User Manual

2.2 Key Features

- **Bluetooth 5.3 Technology:** Ensures stable and fast connection up to 10 meters.
- **Environmental Noise Cancellation (ENC):** Filters ambient sounds for clear calls and immersive audio.
- **360-degree HD Stereo Sound:** Delivers a rich and high-definition audio experience.
- **Long Playback Time:** Up to 25 hours of continuous playback on a single charge (at 70% volume).
- **Fast Charging:** Fully charges in approximately 1.5 hours via USB-C.
- **Integrated Microphone:** Supports hands-free calls and voice assistants.
- **Foldable and Compact Design:** Easy to store and carry.
- **Ergonomic and Adjustable:** Designed for maximum comfort during extended use.

3. SETUP

3.1 Charging the Headphones

1. Locate the USB-C charging port on the headphones.
2. Connect one end of the provided USB-C cable to the headphone's charging port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The LED indicator on the headphones will illuminate to show charging status. It typically takes about 1.5 hours for a full charge.
5. Once fully charged, the LED indicator will change or turn off (refer to specific LED behavior in the product's quick start guide if available).

A full charge provides up to 25 hours of playback time at 70% volume.

Mantén tu Música



Rhythm M6 te ofrece hasta 25 horas con una sola carga, suficiente para seguir escuchando incluso en los vuelos más largos.



Image 3.1: Graphic illustrating 25 hours of playback time for the Rhythm M6 headphones. The image shows the headphones with a large '25 hrs' graphic and smaller icons indicating charging and playback times.

3.2 Pairing with a Bluetooth Device

1. Ensure the headphones are fully charged.
2. **Power On:** Press and hold the Power button on the headphones until the LED indicator flashes, usually blue and red, indicating pairing mode.
3. **Activate Bluetooth:** On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and turn Bluetooth on.
4. **Search for Devices:** Your device will automatically search for nearby Bluetooth devices.
5. **Select 'Rhythm M6':** From the list of available devices, select 'Rhythm M6'.
6. **Confirm Pairing:** Once connected, the LED indicator on the headphones will typically show a steady blue light or flash slowly. A voice prompt may also confirm the connection.

The headphones support Bluetooth 5.3 for a strong and consistent connection up to 10 meters.

Libertad Inalámbrica

Bluetooth 5.3. proporciona una conexión fuerte y consistente hasta 9 metros*. Menos latencia, más estabilidad y mayor duración de la batería.



*Distancia de trabajo se llevó a cabo por RIVERSONG en el laboratorio. Los datos se basan en un uso típico y pueden variar en función del uso.

Image 3.2: A stylized graphic of a Bluetooth 5.3 chip, representing the wireless connectivity of the headphones. The image highlights the advanced Bluetooth technology for stable connections.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up and you hear a power-on prompt.
- **Power Off:** Press and hold the Power button for approximately 5 seconds until the LED indicator turns off and you hear a power-off prompt.

4.2 Music Playback

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button) once.
- **Volume Up:** Press the Volume + button.
- **Volume Down:** Press the Volume - button.
- **Next Track:** Press and hold the Volume + button (or double-press the Multi-function button, refer to specific controls).
- **Previous Track:** Press and hold the Volume - button (or triple-press the Multi-function button, refer to specific controls).



La experiencia que mereces

Ya sea música, vídeos o su podcast favorito, acércate a lo que más te gusta con el sonido estéreo HD 360° de Rhythm M6.

Image 4.1: A woman smiling and enjoying music while wearing the Rhythm M6 headphones, with stylized sound waves emanating from the earcups.

4.3 Call Management

- **Answer/End Call:** Press the Multi-function button once during an incoming call to answer, or once during an active call to end it.
- **Reject Call:** Press and hold the Multi-function button for approximately 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the Multi-function button when not on a call.

The Environmental Noise Cancellation (ENC) technology helps ensure clear conversations even in noisy environments.



Llamadas nítidas

La tecnología ENC filtra los sonidos ambientales para mantener conversaciones nítidas, incluso con viento y ruido.

Image 4.2: A man smiling and holding a smartphone while wearing the Rhythm M6 headphones, illustrating clear call quality with ENC technology.

4.4 Voice Assistant

- **Activate Voice Assistant:** Triple-press the Multi-function button (or refer to specific button for voice assistant activation) to activate your device's voice assistant (e.g., Siri, Google Assistant).

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the headphones.
- Do not use abrasive cleaners, solvents, or chemical sprays.
- Avoid getting moisture into any openings.

5.2 Storage

- When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- The foldable design allows for compact storage.

Compañero Perfecto

Plegable y compacto
¡Llévelo donde quieras que vaya!



Image 5.1: The Rhythm M6 headphones folded and placed inside a compact carrying case or bag, demonstrating their portability.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully using the USB-C cable.
Cannot pair with device.	Bluetooth is off on the device; headphones not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Put headphones into pairing mode (flashing blue/red LED). Move headphones closer to the device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; headphones not connected properly.	Increase volume on both headphones and connected device. Re-pair the headphones with your device.
Sound cutting in and out.	Interference; too far from device; low battery.	Move closer to the connected device. Avoid strong electromagnetic interference. Charge the headphones.
Microphone not working.	Microphone muted on device; software issue.	Check microphone settings on your device. Restart both headphones and device.

7. SPECIFICATIONS

Feature	Detail
Model Name	Rhythm M6
Brand	RIVERSONG
Bluetooth Version	5.3
Bluetooth Profiles	A2DP, AVCTP, AVRCP, HFP, SDP, L2CAP
Wireless Range	Up to 10 meters (33 feet)
Battery Capacity	300 mAh
Charging Time	Approximately 1.5 hours
Playback Time	Up to 25 hours (at 70% volume)
Charging Port	USB-C
Frequency Response	20 Hz - 20 kHz
Special Features	Environmental Noise Cancellation (ENC), Rechargeable Battery, Foldable Design
Color	Black
Compatibility	iOS, Android, and all Bluetooth-enabled devices

8. WARRANTY AND SUPPORT

RIVERSONG products are designed with quality and reliability in mind. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official RIVERSONG website.

If you encounter any issues or have questions not covered in this manual, please contact RIVERSONG customer support through their official website or the contact information provided with your product.