

[Manuals.plus](#) /

› [Leebein](#) /

› Leebein YMG-820 Electric Spin Scrubber User Manual

Leebein YMG-820

Leebein YMG-820 Electric Spin Scrubber User Manual

Model: YMG-820 | Brand: Leebein

INTRODUCTION

Thank you for purchasing the Leebein YMG-820 Electric Spin Scrubber. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new cleaning device. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the charging port is sealed when using the scrubber in wet conditions.
- Do not immerse the main unit in water. The brush heads are washable.
- Keep out of reach of children.
- Use only the provided charging cable.
- Do not operate the scrubber if it is damaged or malfunctioning.
- Avoid using abrasive cleaners or harsh chemicals with the scrubber, as they may damage the device or surfaces.
- Ensure the brush head is securely attached before operation.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Leebein YMG-820 Electric Spin Scrubber Main Unit
- Extension Handle
- Charging Cable
- Large Flat Brush
- Dome Brush

- Corner Brush
- Small Flat Brush
- Cloth Brush
- Sponge Brush
- Faux Fur Brush
- Scouring Pad Brush
- User Manual (this document)





Image: The Leebein YMG-820 Electric Spin Scrubber, showing the main unit, extension handle, and a variety of included brush heads.

PRODUCT OVERVIEW

The Leebein YMG-820 is a versatile electric spin scrubber designed to simplify various cleaning tasks. It features a powerful motor, an extendable handle for reaching high or low areas, and multiple interchangeable brush heads for different surfaces and cleaning needs.

Main Components:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Extension Handle:** Allows for adjustable length to clean hard-to-reach areas.
- **Brush Head Connector:** Where different brush heads attach.
- **Charging Port:** Located on the main unit, typically with a waterproof cover.

ASSEMBLY AND SETUP

1. **Charge the Scrubber:** Before first use, fully charge the scrubber. Open the waterproof cover of the charging port and connect the charging cable. The indicator light will show charging status (e.g., red for charging, green for fully charged).
2. **Attach the Extension Handle (Optional):** To extend the reach, align the extension handle with the main unit and twist clockwise until it locks securely. To remove, twist counter-clockwise.
3. **Attach a Brush Head:** Select the appropriate brush head for your cleaning task. Align the brush head with the connector on the main unit (or extension handle) and push firmly until it clicks into place. Ensure it is securely fastened.

OPERATING INSTRUCTIONS

1. **Prepare the Surface:** For best results, pre-wet the surface to be cleaned and apply your preferred cleaning solution directly

to the surface or the brush head.

2. **Power On:** Press the power button on the main unit to turn on the scrubber. The scrubber typically has multiple speed settings. Press the power button again to cycle through speeds or turn off.
3. **Begin Cleaning:** Gently press the rotating brush head against the surface. Allow the scrubber's rotation to do the work; avoid applying excessive pressure, which can slow down the motor.
4. **Adjust Angle:** The scrubber head can often be adjusted to different angles for ergonomic cleaning. Refer to the product's physical design for specific angle adjustment mechanisms.
5. **Power Off:** After cleaning, press the power button to turn off the scrubber.

BRUSH HEAD USAGE GUIDE

The YMG-820 comes with a variety of brush heads, each designed for specific cleaning tasks:

Common Brush Heads:

Large Flat Brush: Ideal for large flat surfaces like floors, tiles, and walls.

Adaptable Brush Heads



Image: Examples of the Large Flat, Dome, Corner, and Small Flat brushes in action on various surfaces.

Dome Brush: Suitable for curved surfaces such as bathtubs, sinks, and toilets.

Corner Brush: Designed to clean tight corners, grout lines, and narrow gaps.

Small Flat Brush: For smaller flat areas, countertops, or detailed cleaning.

Specialized Brush Heads:

Cloth Brush: Gentle cleaning for delicate surfaces or polishing.

Adaptable Brush Heads

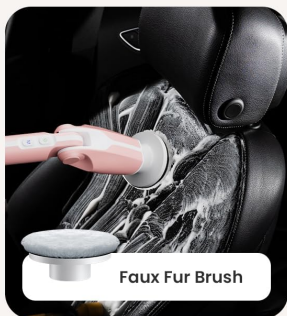 
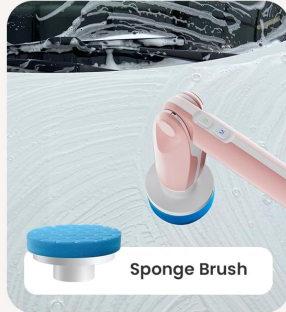 
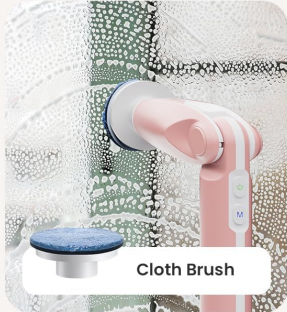 


Image: Examples of the Cloth, Sponge, Faux Fur, and Scouring Pad brushes in action on various surfaces.

Sponge Brush: For absorbing liquids or applying cleaning solutions evenly.

Faux Fur Brush: Soft cleaning for car interiors, upholstery, or dusting.

Scouring Pad Brush: For tough stains and grime on durable surfaces.



Image: A collection of the different brush heads included with the scrubber, showing their distinct shapes and textures.

CHARGING THE SCRUBBER

To ensure optimal performance, fully charge the scrubber before each extended use or when the battery indicator shows low power.

1. Locate the charging port on the main unit. It is typically covered by a waterproof silicone plug.
2. Carefully open the waterproof plug.
3. Insert the small end of the provided charging cable into the scrubber's charging port.
4. Connect the USB end of the charging cable to a compatible USB power adapter (not included) or a USB port on a computer.
5. The indicator light will illuminate (e.g., red) to show that charging is in progress.
6. Once fully charged, the indicator light will change color (e.g., green) or turn off.
7. Disconnect the charging cable and securely close the waterproof plug to prevent water ingress during use.

Note: Do not operate the scrubber while it is charging.

MAINTENANCE AND CLEANING

Cleaning the Brush Heads:

- After each use, remove the brush head from the scrubber.
- Rinse the brush head thoroughly under running water to remove dirt and cleaning solution residue.
- For stubborn grime, use a mild soap and water to clean the bristles.
- Allow the brush heads to air dry completely before storing.

Cleaning the Main Unit:

- Wipe the main unit and extension handle with a damp cloth.
- Do not submerge the main unit in water or rinse it directly under a tap.
- Ensure the charging port cover is securely closed before cleaning the main unit.
- Do not use abrasive cleaners or solvents, as they may damage the surface.

STORAGE

- Store the Leebein YMG-820 Electric Spin Scrubber in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the device is clean and dry before storage.
- Keep all brush heads and accessories together to prevent loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is low or depleted.	Charge the scrubber fully.
Scrubber stops during use.	Battery is low. Excessive pressure applied.	Recharge the battery. Reduce pressure on the brush head.
Brush head does not spin or spins slowly.	Brush head not properly attached. Obstruction in the brush head. Battery is low.	Ensure brush head is securely clicked into place. Remove any debris from the brush head. Charge the scrubber.
Water leakage from charging port.	Charging port cover not sealed properly.	Ensure the waterproof plug is firmly closed before use in wet conditions.

SPECIFICATIONS

Model:	YMG-820
Brand:	Leebein
Color:	Pink
Handle Material:	Plastic
Main Material:	Plastic
Special Feature:	Replaceable Head
Included Components:	Attachment (various brush heads)
Surface Recommendation:	Floor, Tile, Grout, Glass, Sink, Bathroom, Shower, Bathtub, Kitchen
Item Firmness:	Medium
ASIN:	B0D17NZRCT
Date First Available:	April 9, 2024

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any questions regarding your Leebein YMG-820 Electric Spin Scrubber, please contact Leebein customer service through the retailer's platform or the official Leebein website. Please have your model number (YMG-820) and purchase details ready when contacting support.

Note: Warranty terms may vary by region and retailer. Please refer to your purchase documentation for specific warranty details.

© 2024 Leebein. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question