

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DEKOPRO](#) /

› [DEKOPRO 126-Piece Tool Kit User Manual](#)

## DEKOPRO DKMT126-GR

# DEKOPRO 126-Piece Tool Kit User Manual

Model: DKMT126-GR

### 1. PRODUCT OVERVIEW

The DEKOPRO 126-Piece Tool Kit is a comprehensive set designed for various home repairs, DIY projects, and maintenance tasks. This versatile kit includes an 8V cordless drill, a wide array of hand tools, and essential accessories, all organized within a durable storage case. The tools are crafted from alloy steel with chrome plating for corrosion prevention, ensuring durability and reliability for everyday use.



Figure 1.1: The DEKOPRO 126-Piece Tool Kit, showcasing the cordless drill and various hand tools within its organized storage case.

## 2. PACKAGE CONTENTS

Before beginning, please verify that all components listed below are present in your DEKOPRO 126-Piece Tool Kit. Refer to Figure 2.1 for a visual guide to the included items.

- 1x 8V Cordless Drill
- 1x Hex Nut Screwdriver (6.35mm)
- 2x Screwdrivers (PH1x100, SL5x100mm)
- 4x Precision Screwdrivers (PH00, 0, SL2.4, 3.0)
- 6x Twisted Drills (5/64", 3/32", 1/8", 5/32", 3/16", 1/4")
- 8x Hex Keys (1.5-6mm)
- 1x Magnetic Bit Holder (60mm)
- 10x 50L Bits (SL4, SL5, SL6, T15, T20, PH0, PH1, PH2, PH3, AD)
- 18x 25I Bits (SL1, SL1/8, SL5/32, SL3/16, SL1/4, SL9/32, PH1, PH2, PH3, S1, S2, S3, H2, H3, H4, H5, H6, AD)
- 9x 1/4" Sockets (5, 6, 7, 8, 9, 10, 11, 12, 13mm)
- 1x Measure Tape Ruler (3m)
- 50x Fasteners
- 1x Claw Hammer (8oz)
- 1x Adjustable Wrench (6")
- 10x Utility Knife Blades (18mm)
- 1x Utility Knife (18mm)
- 1x Long Nose Pliers (6")
- 1x User Manual (this document)



Figure 2.1: Labeled diagram of the DEKOPRO 126-Piece Tool Kit components.

### 3. SETUP

#### 3.1 Unboxing and Inspection

Carefully remove all items from the packaging. Inspect each tool for any signs of damage or missing parts. If any items are damaged or missing, please contact customer support immediately.

#### 3.2 Charging the Cordless Drill Battery

The 8V cordless drill is powered by a rechargeable battery. Before first use, or if the battery indicator light shows low charge, fully charge the drill.

1. Locate the Type-C charging input port on the drill.
2. Connect the supplied Type-C 1.5A charging cable to the drill's charging port.
3. Connect the other end of the charging cable to a universal charger or a USB output (5V d.c.) power source.
4. The battery indicator light, located at the back of the drill, will illuminate to show charging status. Allow the drill to charge until the indicator shows a full charge.



Figure 3.1: Key features and charging port location on the 8V Cordless Drill.

## 4. OPERATING INSTRUCTIONS

### 4.1 Cordless Drill Operation

The 8V cordless drill is designed for drilling in wood and plastic, and for tightening or loosening screws. Its lightweight design (1.65 pounds net weight) allows for easy one-handed operation.

1. **Inserting/Removing Bits:** To insert a drill bit or screwdriver bit, twist the keyless chuck counter-clockwise to open the jaws. Insert the bit fully, then twist the chuck clockwise to securely tighten it. To remove, reverse the process.
2. **Powering On/Off and Speed Control:** Press the control trigger to activate the drill. The drill's speed is variable and can be adjusted by the pressure applied to the trigger. The maximum no-load speed is 800 revolutions per minute (r/min). Release the trigger to turn off the drill.
3. **Forward/Reverse Switch:** Use the forward/reverse switch, located above the trigger, to change the rotation direction of the drill. Push it to the left for forward (clockwise) rotation for drilling and tightening, and to the right

for reverse (counter-clockwise) rotation for loosening screws. Ensure the switch is in the neutral (middle) position when not in use to prevent accidental activation.

4. **LED Worklight:** The integrated LED worklight illuminates the work area when the trigger is pressed, improving visibility in dimly lit spaces.
5. **Battery Indicator Light:** Monitor the battery indicator light on the back of the drill to check the remaining battery charge. Recharge the drill when the indicator shows low power.



Figure 4.1: Drill applications and torque capabilities.

## 4.2 Using Hand Tools

The kit includes a variety of hand tools for common tasks:

- **Screwdrivers and Precision Screwdrivers:** Use the appropriate size and type (Phillips or Slotted) for tightening or loosening screws. Precision screwdrivers are ideal for small electronics or delicate tasks.
- **Claw Hammer:** Primarily used for driving nails and prying them out. Always wear safety glasses when using a hammer.
- **Adjustable Wrench:** Adjust the jaw opening to fit various nut and bolt sizes. Ensure a snug fit to prevent slipping.

- **Long Nose Pliers:** Useful for gripping small objects, bending wires, and reaching into tight spaces.
- **Utility Knife:** Use with caution for cutting various materials. Always retract the blade when not in use and replace dull blades promptly.
- **Measure Tape Ruler:** For accurate measurements in meters and feet.
- **Hex Keys:** Used for tightening or loosening hexagonal socket head screws.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DEKOPRO tool kit.

- **Cleaning:** After each use, wipe down all tools with a clean, dry cloth to remove dust, dirt, and debris. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying.
- **Corrosion Prevention:** Many tools in this kit are chrome plated to prevent corrosion. However, to maintain their condition, avoid exposing tools to excessive moisture. If tools become wet, dry them thoroughly before storage.
- **Storage:** Always store the tools in their original storage case. This protects them from damage, keeps them organized, and prevents loss. Store the case in a dry environment, away from extreme temperatures.
- **Battery Care (Cordless Drill):**
  - Do not overcharge or completely drain the battery.
  - Store the drill with a partial charge if it will not be used for an extended period.
  - Avoid storing the drill in extreme hot or cold conditions.
- **Blade Replacement (Utility Knife):** Replace the utility knife blade when it becomes dull to ensure safe and effective cutting. Follow the instructions provided with the replacement blades for safe installation.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your DEKOPRO tool kit.

Problem	Possible Cause	Solution
Cordless drill does not turn on.	Battery is depleted. Forward/reverse switch is in the neutral position.	Charge the drill battery fully. Push the forward/reverse switch to either the forward or reverse position.
Drill bit/screwdriver bit slips in the chuck.	Chuck not tightened sufficiently. Bit is worn or damaged.	Ensure the keyless chuck is tightened securely. Replace the worn or damaged bit.
Utility knife blade is dull or not cutting effectively.	Blade is worn out.	Replace the utility knife blade with a new one from the included spare blades.

Problem	Possible Cause	Solution
Tools show signs of rust.	Exposure to moisture. Improper storage.	Ensure tools are completely dry before storing. Store in a dry environment. Lightly oil tools if necessary for long-term storage.

If you encounter an issue not listed here, or if the suggested solutions do not resolve the problem, please contact DEKOPRO customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	DKMT126-GR
Brand	DEKOPRO
Voltage (Cordless Drill)	8 Volts
Amperage (Cordless Drill)	2 Amps
Battery Type (Cordless Drill)	Lithium Ion (1x 9V battery required for drill operation)
Max No-Load Speed (Cordless Drill)	800 r/min
Item Weight (Full Kit)	7.13 pounds
Product Dimensions (Case)	0.79 x 0.79 x 0.79 inches (approximate, as per provided data)
Color	Green
Style	126PCS

## 8. WARRANTY AND SUPPORT

### 8.1 Product Warranty

The DEKOPRO 126-Piece Tool Kit comes with a **1 Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, neglect, unauthorized repairs, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your DEKOPRO tool kit, please contact DEKOPRO customer support. Refer to the contact information provided on the product packaging or the official DEKOPRO website.

*Note: No official product videos were available for embedding based on the provided data.*