

[Manuals.plus](#) /

> [TOSHIBA](#) /

> TOSHIBA ChefFry Air Fryer Toaster Oven Combo, 26.4 QT Large Capacity, 12-in-1 Countertop Toaster Oven, Stainless Steel

## TOSHIBA TL-AC264CZA(SS)

# TOSHIBA ChefFry Air Fryer Toaster Oven Combo Instruction Manual

Model: TL-AC264CZA(SS)

Brand: TOSHIBA

## INTRODUCTION

---

The TOSHIBA ChefFry Air Fryer Toaster Oven Combo is a versatile 12-in-1 kitchen appliance designed to elevate your cooking experience. It allows for healthier and speedier meal preparation by using up to 90% less oil for crispy results. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.

- A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

## PRODUCT OVERVIEW & COMPONENTS

Familiarize yourself with the parts of your TOSHIBA ChefFry Air Fryer Toaster Oven.



Figure 1: Front view of the TOSHIBA ChefFry Air Fryer Toaster Oven Combo, showcasing its sleek stainless steel design and digital display.

### Included Accessories:

- **Crumb Tray:** Collects crumbs and drips for easy cleaning.
- **Baking Tray:** Ideal for baking cookies, pastries, and other items.
- **Baking Rack:** Used for general baking and toasting.
- **Air Fry Basket:** Designed for optimal air circulation during air frying.


# WIDE RANGE OF ACCESSORIES




Crumb tray



Baking tray

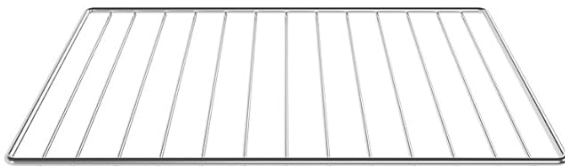

Baking rack

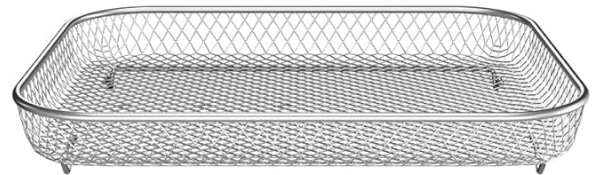

Air fry basket

Figure 2: All accessories included with the oven: Crumb tray, Baking tray, Baking rack, and Air fry basket.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the oven.
2. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure adequate clearance (at least 4 inches) on all sides for proper ventilation.
3. **First Use Cleaning:** Before first use, wipe down the interior and accessories with a damp cloth and mild detergent. Dry thoroughly.
4. **Crumb Tray Installation:** To ensure optimal cooking performance, place the crumb tray at the bottom of the oven, below the heating element.
5. **Power Connection:** Plug the appliance into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

Your ChefFry oven features 12 preset functions and intuitive digital controls.

### Control Panel Overview:

# EASY CONTROL



Digital LED Display

Button Control

Knob Control

Figure 3: Digital LED Display, Function Knob, Temperature Knob, Time Knob, and Start/Pause Button.

- **Function Knob:** Rotate to select from 12 preset cooking functions (Air Fry, Toast, Pizza, Bake, Cookie, Roast, Reheat, Bagel, Broil, Warm, Proof, Dehydrate).
- **Temperature Knob:** Adjusts cooking temperature in 5-degree Fahrenheit increments (range 80°F to 450°F).
- **Time Knob:** Adjusts cooking time in one-minute increments.
- **Start/Pause Button:** Initiates or pauses the selected cooking program. Press and hold for 3 seconds to stop the current program.

## Using Preset Functions:

The 12-in-1 versatility allows for a wide range of cooking needs.

# 12-IN-1 PRESET FUNCTION

Meet your daily cooking needs with 12 presets



Figure 4: Visual representation of the 12 preset cooking functions.

1. Place food inside the oven on the appropriate rack/tray.
2. Rotate the **Function Knob** to select your desired cooking mode (e.g., Air Fry, Bake, Roast).
3. Adjust the **Temperature Knob** and **Time Knob** as needed for your recipe. The display will show the selected settings.
4. Press the **Start/Pause Button** to begin cooking. The oven will beep and start heating.
5. To pause, press the **Start/Pause Button** once. To stop, press and hold for 3 seconds.

## Special Features:

- **Super ChefFry Airfry Tech:** Achieves crispy results with up to 90% less oil using 450°F superheated air. No preheating is required for air fry function; simply place frozen foods directly on the frying basket.
- **Accurate and Even Heating:** 360° powerful hot air circulation ensures reduced cooking time and consistent results.
- **Family-Sized Capacity:** The 26.4QT oven can accommodate 6 slices of bread, a 12-inch pizza, or a 4lb whole chicken.

# SPEEDY & HEALTHY AIR FRY

The 360° hot air brings crispy and even cooking result.

**30%**  
Faster\*

**90%**  
Oil ↓

\*Compared with traditional toaster ovens

Figure 5: The 360° hot air circulation for speedy and healthy air frying.

# COMPACT SIZE, LARGER CAPACITY



Figure 6: Dimensions and capacity of the oven, highlighting its family-sized capability.

## Official Product Video:

Your browser does not support the video tag.

Video 1: Official product overview of the TOSHIBA ChefFry Air Fryer Toaster Oven Combo, demonstrating its features and cooking capabilities.

## MAINTENANCE & CLEANING

Proper cleaning ensures the longevity and performance of your oven.

1. **Power Off and Cool Down:** Always unplug the oven and allow it to cool completely before cleaning.
2. **Remove Crumb Tray:** Remove the crumb tray from the oven and clean it with warm water and dish soap.
3. **Clean the Interior:**
  - For light stains: Wipe the interior, door, and heating elements with a soft cloth and warm water.
  - For stubborn stains: Create a paste of baking soda and water, apply it to the stains, let it sit for a few minutes, then scrub gently.

4. **Clean the Exterior:** For standard cleaning, wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.



Figure 7: Demonstrating the ease of cleaning the oven's interior.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; controls not set.	Ensure plug is securely in outlet; check circuit breaker; set function, temperature, and time.
Food not cooking evenly.	Improper rack position; overcrowding food.	Refer to recommended rack positions for specific functions; ensure food is spread evenly.
Difficulty cleaning crumb tray.	Stains have dried and hardened.	Soak crumb tray in warm soapy water immediately after use; for stubborn stains, use a baking soda paste. Avoid abrasive scrubbers.

## SPECIFICATIONS

---

- **Brand:** TOSHIBA
- **Model Name:** Toaster Oven (TL-AC264CZA(SS))
- **Color:** Stainless Steel
- **Product Dimensions:** 15.9"D x 18.2"W x 10.8"H
- **Capacity:** 26.4 QT (25L)
- **Special Feature:** LED Display
- **Material:** Stainless Steel
- **Control Type:** Knob Control
- **Power Source:** Electric
- **Temperature Range:** 80-450°F
- **Item Weight:** 18.16 pounds
- **UPC:** 840296511329

## WARRANTY & SUPPORT

---

For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official TOSHIBA Kitchen Appliances website. You may also contact customer service via the contact details provided in the manual or on the product's Amazon listing page.

For additional resources and product information, visit the [TOSHIBA Store on Amazon](#).