

ECONTROLLY IRV-1

ECONTROLLY Replacement Remote Control User Manual

Model: IRV-1 | Compatible with iRV Digital Stereo Receiver iRV6500BT, EX6500DVD, 292-101079


INTRODUCTION

This manual provides instructions for the ECONTROLLY Replacement Remote Control, designed for use with iRV Digital Stereo Receiver models iRV6500BT, EX6500DVD, and 292-101079. This remote control offers a direct replacement solution, ensuring full functionality without the need for complex programming.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Gently push down on the 'PUSH' area and slide the battery cover in the direction of the 'OPEN' arrow to remove it.
3. Insert one CR2025 coin cell battery, ensuring the positive (+) side faces upwards as indicated inside the compartment.
4. Replace the battery cover by aligning it and sliding it back until it clicks into place.

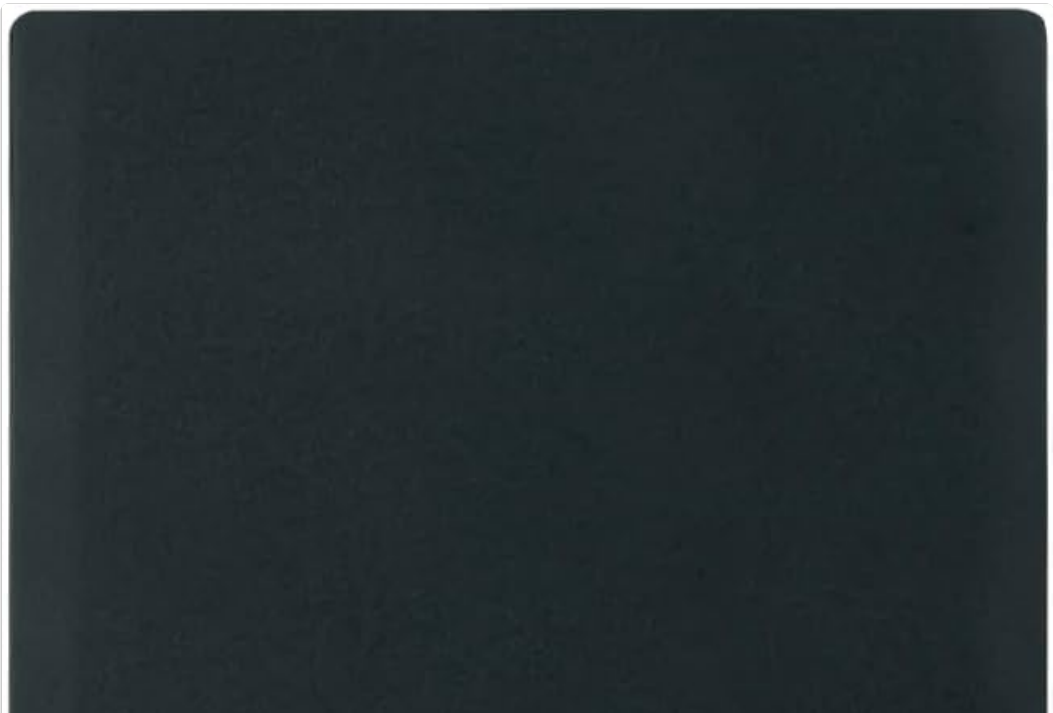

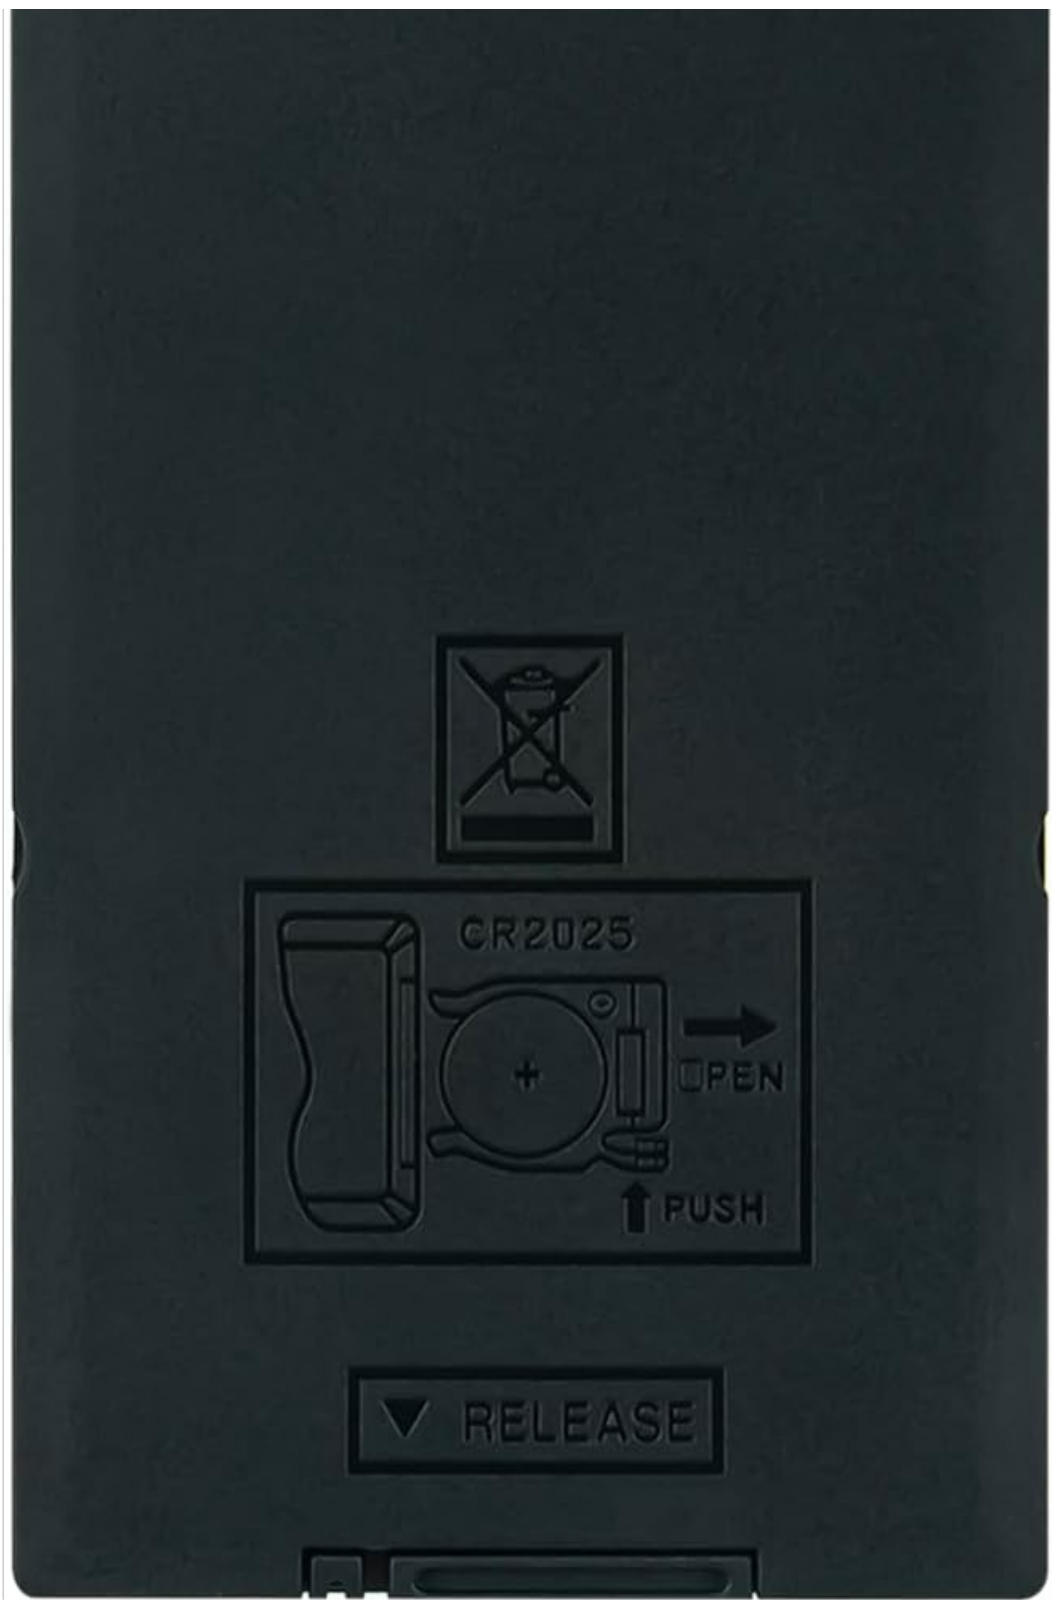


Image: Back of the remote control with the battery compartment open, indicating CR2025 battery type and polarity.

Note: Use a new alkaline CR2025 battery for optimal performance. Rechargeable batteries may not provide sufficient power.

OPERATING INSTRUCTIONS

This remote control is designed to function identically to the original remote for your iRV Digital Stereo Receiver. No programming is required; simply point the remote at your receiver and press the desired function button.

 






Image: Front view of the ECONTROLLY remote control, displaying all buttons and their labels.

Key Functions Overview

- **Power (Red Button):** Turns the receiver on or off.
- **MODE:** Cycles through available input modes (e.g., Radio, CD, USB, Bluetooth).
- **Play/Pause (▶ ▶):** Controls media playback.
- **Mute ():** Mutes or unmutes audio output.
- **BND/C RDM:** Band selection or random playback.
- **MENU:** Accesses the system menu.
- **Sub-T:** Subtitle control.
- **Navigation Arrows (▲ ▼ ◀ ▶):** Navigate through menus and selections.
- **ENTER:** Confirms a selection.
- **Setup:** Enters the setup menu.
- **EJECT:** Ejects discs from the receiver.
- **Angle:** Changes camera angle during DVD playback.
- **INT:** Introduction scan.
- **P.SCN RPT/#:** Program scan or repeat function.
- **ST/MO PTY/*:** Stereo/Mono or Program Type selection.
- **VOL+ / VOL-:** Adjusts volume up or down.
- **SEEK- / SEEK+:** Skips tracks or seeks radio stations.
- **SEL AF:** Selects alternative frequency.
- **A-B ZOOM:** A-B repeat or zoom function.
- **LOUD TA:** Loudness or Traffic Announcement function.
- **OSD:** On-Screen Display.
- **AUDIO GOTO:** Audio track selection or Go To function.
- **PBC:** Playback Control.
- **Numeric Keypad (0-9):** Direct input for tracks, channels, or settings.
- **OPEN TILT:** Opens or tilts the receiver's display.
- **DUAL:** Dual zone audio control.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.

Battery Replacement

Replace the battery when the remote control's response becomes inconsistent or stops working. Refer to the 'Battery Installation' section for instructions. Always dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote control not working:**

- Ensure the battery is installed correctly with the correct polarity.
- Replace the battery with a new CR2025 alkaline battery.
- Check for any obstructions between the remote control and the receiver's infrared sensor.
- Ensure you are within the effective range of the receiver.

- **Intermittent response:**

- This often indicates a low battery. Replace the battery.
- Ensure a clear line of sight to the receiver.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

- **Model:** IRV-1
- **Compatible Devices:** iRV Digital Stereo Receiver iRV6500BT, EX6500DVD, 292-101079
- **Power Source:** 1 x CR2025 Coin Cell Battery (not included)
- **Material:** ABS
- **Color:** Black
- **Dimensions:** Approximately 6 x 3 x 0.5 inches (15.24 x 7.62 x 1.27 cm)
- **Weight:** Approximately 2 ounces (56.7 grams)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. As a replacement product, it is intended to function as described. For any questions regarding compatibility or operational issues not covered in this manual, please refer to the seller's support channels or contact ECONTROLLY customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D1C4QKFD>

More documents and user manuals: <https://manuals.plus/>