

HyperMotion SLIDE HYP1

HyperMotion Children's Garden Slide SLIDE HYP1 Instruction Manual

Model: SLIDE HYP1

1. INTRODUCTION

Thank you for choosing the HyperMotion Children's Garden Slide SLIDE HYP1. This manual provides important information for the safe assembly, operation, and maintenance of your new slide. Please read these instructions carefully before assembly and retain them for future reference. This product is designed for outdoor use by children aged 3 years and older, with a maximum load capacity of 45 kg and suitable for one user at a time.

2. SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 3 years and above.
- **Maximum Load:** Do not exceed the maximum weight capacity of 45 kg.
- **Single User:** This slide is designed for one user at a time.
- **Adult Supervision:** Always ensure children are supervised by an adult while using the slide.
- **Stable Surface:** Place the slide on a flat, stable, and soft surface, such as grass, to minimize injury risk.
- **Clear Area:** Ensure there is sufficient clear space around the slide, free from obstacles, walls, or other play equipment.
- **Inspection:** Regularly inspect all components for wear, damage, or loose parts before each use.
- **Weather Conditions:** Avoid using the slide during extreme weather conditions (e.g., strong winds, heavy rain, extreme heat). Plastic surfaces can become very hot in direct sunlight.
- **Water Connection:** If using with a water hose, ensure the connection is secure and water flow is appropriate.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact HyperMotion customer support.

- Slide body (green)
- Ladder frame components (steel, white)
- Ladder steps (green)
- Handrails (white)
- Stabilization bar(s)
- Assembly hardware (screws, nuts, washers, etc.)
- Instruction manual

4. SETUP (ASSEMBLY)

Assembly of the HyperMotion SLIDE HYP1 is designed to be straightforward. Follow these general steps. Refer to the detailed diagrams for specific component placement.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
2. **Assemble Ladder Frame:** Connect the vertical and horizontal steel frame components to form the ladder structure. Secure with provided hardware.
3. **Attach Ladder Steps:** Secure the green ladder steps to the ladder frame using the designated attachment points and hardware. Ensure they are firmly in place.
4. **Connect Handrails:** Attach the handrails to the top of the ladder frame, ensuring they are stable and provide a secure grip.
5. **Mount Slide Body:** Carefully attach the green slide body to the assembled ladder frame. Ensure all connection points are aligned and secured with the appropriate screws and nuts.
6. **Install Stabilization Bar:** Attach the broad stabilization bar(s) to the base of the slide structure to enhance stability.
7. **Final Check:** Once assembled, thoroughly check all screws, bolts, and connections to ensure they are tight and secure. The slide should be robust and stable.

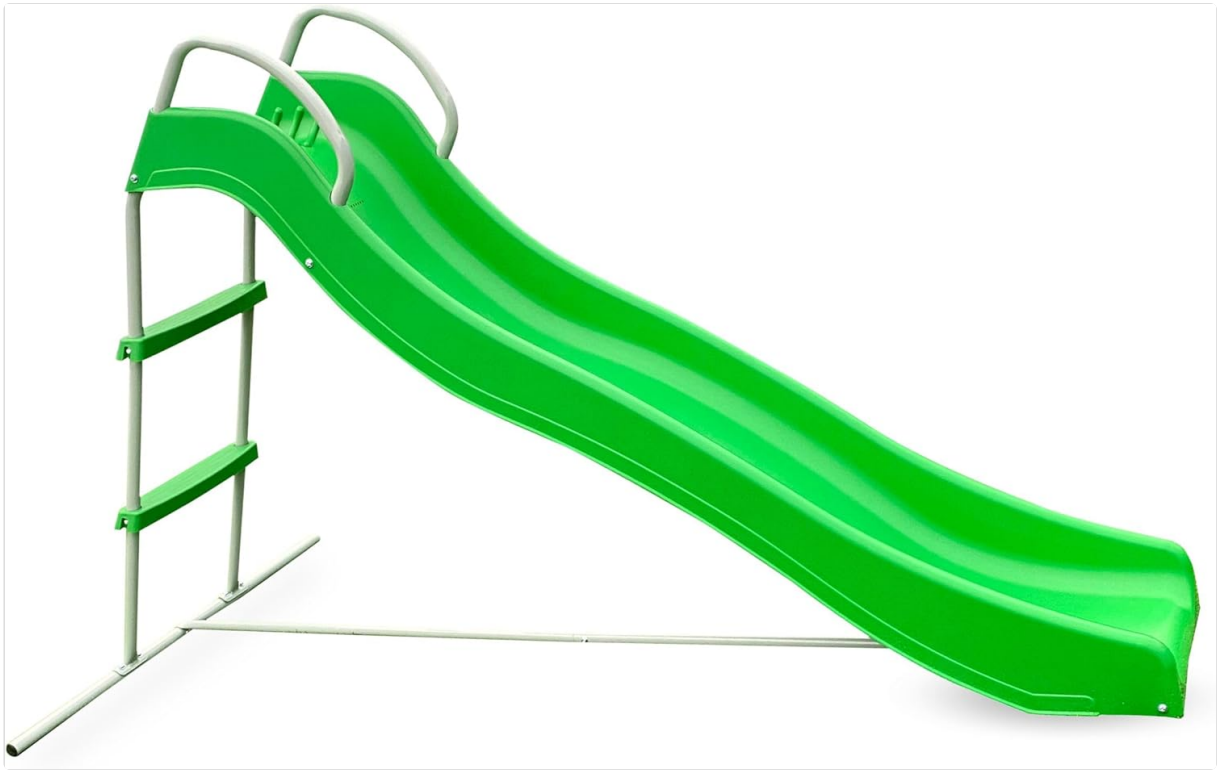


Figure 1: Fully assembled HyperMotion Children's Garden Slide.



Figure 2: Detail of the slide's top section with secure handrails.



Figure 3: Detail of the ladder steps, designed for safe climbing.

5. OPERATING INSTRUCTIONS

The HyperMotion SLIDE HYP1 is designed for hours of outdoor fun. To ensure safe and enjoyable use:

- **Climbing:** Children should always climb the ladder facing the steps, using the handrails for support.
- **Sliding Position:** Children should slide down feet first, in a sitting position. Do not allow children to slide headfirst or stand on the slide.
- **Clear Landing Area:** Ensure the landing area at the bottom of the slide is clear before a child slides down.
- **Water Feature:** The slide can be connected to a garden hose for a water slide experience on warm days. Ensure the water flow is gentle and the slide surface remains adequately wet to prevent friction.

burns.

- **Encourage Active Play:** This slide promotes physical activity and helps develop motor skills and coordination.



Figure 4: Child demonstrating proper use of the slide.



Figure 5: The slide positioned in a garden, ready for use.

6. MAINTENANCE

Proper maintenance will extend the life of your HyperMotion slide:

- **Cleaning:** Clean the slide regularly with mild soap and water. Rinse thoroughly and dry. Avoid abrasive cleaners.
- **Inspection:** Periodically check all bolts, nuts, and connections for tightness. Tighten if necessary. Inspect the plastic slide surface and steel frame for cracks, rust, or damage.
- **Weather Protection:** The slide is weather and UV resistant, but prolonged exposure to extreme elements can cause wear. Consider storing the slide indoors or covering it during winter months or periods of intense sun to prevent material degradation and excessive heating of the plastic.
- **Repairs:** Do not attempt to repair damaged structural components yourself. Contact HyperMotion customer support for guidance.

7. TROUBLESHOOTING

If you encounter any issues with your HyperMotion Children's Garden Slide, please refer to the following:

- **Instability:** Ensure the slide is placed on a level surface. Check all assembly connections and tighten any loose bolts. Verify the stabilization bar is correctly installed.
- **Damaged Parts:** If any part is broken or shows significant wear, discontinue use immediately to prevent injury. Contact customer support for replacement parts or advice.
- **Difficulty Sliding:** Ensure the slide surface is clean. If using as a water slide, check the water flow.

For problems not listed here, please contact HyperMotion customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	SLIDE HYP1
Dimensions (L x W x H)	185 cm x 95 cm x 109 cm
Slide Length	183 cm
Weight	8.6 kg
Maximum Load	45 kg
Recommended Age	3+ years
Material	Steel, Polypropylene (PP)
Color	Green
Assembly Required	Yes

SLIDE HYP1 HyperMotion



45 kg



3+



8,6 kg



HONG KONG | LISBON | NEW YORK

Figure 6: Key specifications of the HyperMotion Children's Garden Slide.

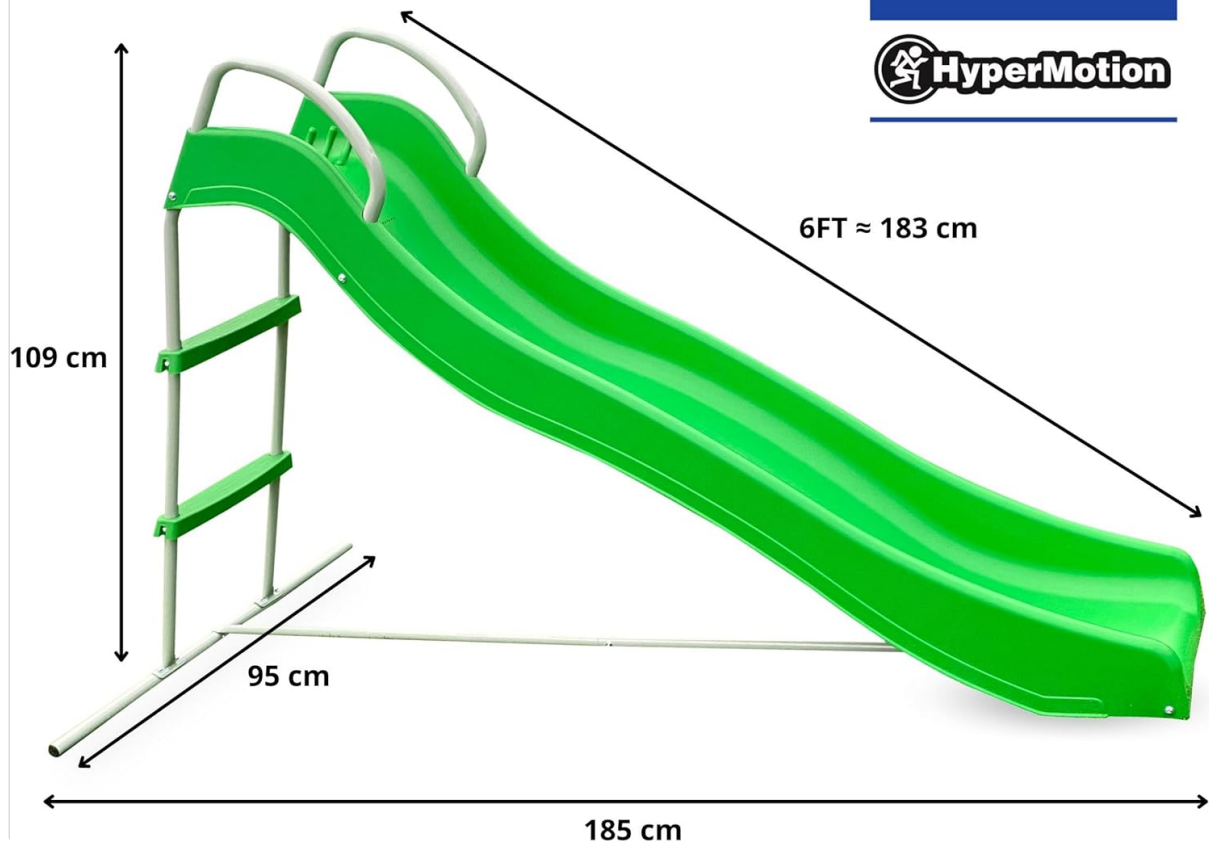


Figure 7: Detailed dimensions of the HyperMotion Children's Garden Slide.

9. WARRANTY

HyperMotion products are manufactured to high-quality standards. For specific warranty information regarding your SLIDE HYP1, please refer to the documentation included with your purchase or contact HyperMotion customer support directly. Keep your proof of purchase for any warranty claims.

10. SUPPORT

If you require further assistance, have questions about assembly, operation, or maintenance, or need to report a problem, please contact HyperMotion customer support.

You can find more information and contact details on the official HyperMotion store page: [HyperMotion Store](#)