

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ShuffleBox](#) /

› [ShuffleBox G1 Pro Automatic Card Shuffler and Dealer User Manual](#)

ShuffleBox G1 PRO

ShuffleBox G1 Pro Automatic Card Shuffler and Dealer User Manual

Model: G1 PRO | Brand: ShuffleBox

1. PRODUCT OVERVIEW

The ShuffleBox G1 Pro is an advanced 2-in-1 automatic card shuffler and dealer designed to streamline card game setup and play. This device efficiently shuffles up to two decks of cards and deals them to multiple players, enhancing the gaming experience with its quiet operation and smart features.



Figure 1: ShuffleBox G1 Pro device with cards and remote buttons.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- ShuffleBox G1 Pro Unit
- Type C Charging Cable
- Remote Controller (4 units)
- User Manual

3. GETTING STARTED: SETUP

3.1 Initial Charging

The ShuffleBox G1 Pro is equipped with a high-capacity 5200mAh rechargeable battery. Before first use, fully charge the device using the provided Type C charging cable. The battery can provide over 6 hours of continuous operation on a full charge.

Rechargeable BATTERY

 Convenient
and fast
charging



5200mAh LiION
Battery



Up to 6 hours of
playtime per
charge



Type C
charging
port



Figure 2: Charging the ShuffleBox G1 Pro via Type C port.

3.2 Setting Game Parameters

Configure the game settings on the device's display:

- 1. Press the Setting Button:** Locate and press the setting button on the device.
- 2. Configure Number of Players:** Use the "plus" (+) and "minus" (-) buttons to adjust the number of players (indicated by "people"). The device supports 2 to 12 players.
- 3. Set Cards per Player:** Adjust the number of cards dealt to each player (indicated by "sheet").
- 4. Remaining Cards in Draw Pile:** Set the number of cards to remain in the draw pile (indicated by "bottom").
- 5. Deal After Shuffling:** Choose whether to deal cards immediately after shuffling. It is recommended to turn this option off for manual control.
- 6. Random Indicator:** Enable or disable the "Random" indicator for randomized card distribution while maintaining the total cards per player.
- 7. Dealing Direction:** Select whether cards are dealt clockwise or counter-clockwise.
- 8. Confirm Settings:** After all settings are configured, press the Deal button to finalize the setup.

Your browser does not support the video tag.

Video 1: Demonstrates how to set up game parameters on the ShuffleBox G1 Pro, including player count, cards per player, and dealing

options.

3.3 Pairing Remote Controllers

To pair the remote controllers with the ShuffleBox G1 Pro:

1. **Enter Pairing Mode:** Press and hold the setting button for 3 seconds to access language options, then press it again to enter remote pairing mode.
2. **Select "Controller Match":** Navigate to and select the "Controller match" option on the display.
3. **Press Deal Button:** Press the Deal button on the device.
4. **Activate Remote:** When the triangle indicator on the device flashes, press the remote controller button to complete the pairing process.
5. **Repeat for Additional Remotes:** Repeat the process for any additional remote controllers.



Figure 3: The ShuffleBox G1 Pro with its remote card calling buttons.

4. OPERATING INSTRUCTIONS

4.1 Loading and Shuffling Cards

To shuffle cards:

1. **Place Cards:** Place up to two decks of cards on both sides of the machine's card trays.

2. **Initiate Shuffle:** Press the Shuffle button on the device. The machine will quietly and efficiently shuffle the cards.



Figure 4: Cards being loaded into the ShuffleBox G1 Pro for shuffling.

4.2 Dealing Cards

After shuffling, the device can deal cards based on your settings:

- **Random Deal:** Press the Random Deal button (often indicated by a black colored play symbol) to deal cards to a random player.
- **Designated Dealer:** For a specific player, press and hold the Random Deal button for 3 seconds to select the player, then press it again to deal.

4.3 Drawing Individual Cards

During gameplay, if a player needs to draw an additional card:

- **Using Device Button:** Press the "minus" (-) button on the device.
- **Using Remote Controller:** Press the corresponding remote controller button. The machine will deal a single card to the designated player.

5. FEATURES

- **2-in-1 Automatic Shuffling and Dealing:** The ShuffleBox G1 Pro combines both functions, automatically shuffling up to two decks and dealing a customizable number of cards to each player (up to 12 players). This feature accelerates gameplay and reduces manual effort.
- **Remote Card Calling:** Players can request a single card by pressing their remote controller, allowing for dynamic gameplay without interrupting the dealer. Additional remotes are available for games with more than 4 players.
- **Ultra Quiet & Jam-Free Operation:** Utilizing 3D Noise Reduction technology and an ultra-silent motor, the G1 Pro operates with minimal noise. Extensive testing has reduced the card jam rate to less than 0.1%, ensuring a smooth gaming experience.
- **Rechargeable Battery:** Equipped with a 5200mAh rechargeable battery, the device can operate continuously for over 6 hours on a single charge. It features a convenient Type C charging port.
- **Wide Card Compatibility:** The G1 Pro is compatible with various game cards, including Standard Poker size or Bridge Card size. This includes popular games like UNO, Taco Cat Goat Cheese Pizza, Five Crowns, Monopoly Deal, Taco vs Burrito, Exploding Kittens, as well as Maverick and Bicycle standard and jumbo size poker cards.

Shuffler & Dealer

2-IN-1

Automatically shuffles and deals,
speed up the game and save your hands.

GAMES
ARE MORE
CONVENIENT



Shuffling &
Dealing
all-in-one



Accelerate
Game
Progress



Free
your
Hands



Figure 5: The ShuffleBox G1 Pro's 2-in-1 functionality for shuffling and dealing.

Ultra Quiet & SMOOTH



3D Noise

Reduction
technology



Smooth and jam-free

Shuffling &
dealing



Figure 6: The ShuffleBox G1 Pro is designed for ultra-quiet and smooth operation.

Compatible Card Types

UNO, Taco Cat Goat Cheese Pizza, Five Crowns, Monopoly Deal, Taco vs Burrito, Exploding Kittens, Maverick and Bicycle



Ps: The names and logos are the registered trademarks of their respective owners. Any use of these brand names are made solely for demonstrating compatibility.

Figure 7: The ShuffleBox G1 Pro supports a wide range of card types and sizes.

6. MAINTENANCE

6.1 Remote Controller Battery Replacement

The remote controllers use CR2032 batteries. To replace the battery:

1. Tear off the protection film on the back side of the remote controller.
2. Unscrew the lid.
3. Pull out the depleted battery and replace it with a new CR2032 battery.

7. TROUBLESHOOTING

- **Dealing Position Inaccuracy:** If the unit loses its dealing position, ensure the device is placed on a stable, level surface. Recalibrate the dealing direction in the settings if necessary.
- **Card Jams:** While the device has a low jam rate, occasional jams may occur. If a jam happens, gently remove any visible cards from the input or output trays. Ensure cards are not bent or damaged before

loading.

- **Remote Controller Desynchronization:** If a remote controller stops responding, re-pair it with the main unit following the instructions in Section 3.3.
- **Cards Too Large:** The device supports standard poker and bridge card sizes. If cards are too large (e.g., Dixit cards), they may not fit or function correctly. Use compatible card sizes.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.2 x 5 x 7.2 inches
Item Weight	2.2 pounds
Item Model Number	G1 PRO
Battery	1 Lithium Metal battery required (included), 5200mAh
Manufacturer	ShuffleBox

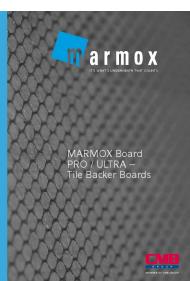
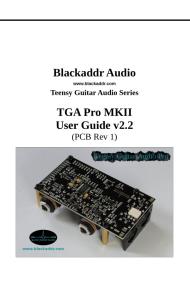



Figure 8: The compact and portable design of the ShuffleBox G1 Pro.

9. WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the User Manual included in your product package. You may also visit the official ShuffleBox website for frequently asked questions and customer service contact information.

Related Documents - G1 PRO

	<p><u>Marmox Board PRO/ULTRA: Advanced Tile Backer Boards - Product Guide & Installation</u></p> <p>Marmox Board PRO and ULTRA are high-performance XPS tile backer boards offering superior waterproofing, insulation, and dry-lining solutions. This comprehensive guide from Marmox (a CMB Group company) details product specifications, technical properties, installation methods for walls, floors, and specialized applications like pipe boxing and underfloor heating insulation. Ideal for professional builders and renovators seeking durable and efficient construction materials.</p>
	<p><u>Blackaddr Audio TGA Pro MKII User Guide v2.2: Stereo Audio & MIDI Prototyping Shield</u></p> <p>Comprehensive user guide for the Blackaddr Audio TGA Pro MKII, a stereo audio and MIDI shield for Teensy microcontrollers. Learn about features, installation, programming, and technical specifications for building digital audio effects.</p>
	<p><u>Guía de Instalación y Configuración de SMART TeamWorks 3.2</u></p> <p>Guía completa para administradores de IT sobre la instalación y configuración del software SMART TeamWorks 3.2, cubriendo requisitos del sistema, preparación de red, pasos de instalación, activación y personalización.</p>
	<p><u>Blackview Tab 60 PRO User Manual</u></p> <p>User manual for the Blackview Tab 60 PRO tablet, covering setup, important safety information, device controls, SIM card insertion, powering on/off, making calls, sending messages, and safe disposal of the device and battery.</p>
	<p><u>M15 Game Stick Pro: Instruction Manual and Hardware Specifications</u></p> <p>Comprehensive guide to the M15 Game Stick Pro, covering appearance, hardware functions, usage instructions, warranty information, and safety precautions. Supports multiple languages.</p>

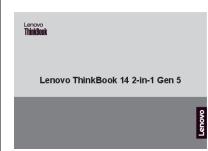

[Lenovo ThinkBook 14 2-in-1 Gen 5 Setup Guide and Overview](#)

Official setup guide and overview for the Lenovo ThinkBook 14 2-in-1 Gen 5 laptop, covering initial setup, hardware features, ports, and regulatory information.