

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ChooChoo](#) /

› ChooChoo Black End Table with Charging Station (Set of 2) - Instruction Manual

ChooChoo ET20001-BK-E-S

ChooChoo Black End Table with Charging Station (Set of 2)

Model: ET20001-BK-E-S

IMPORTANT SAFETY INFORMATION

CAUTION: This product requires assembly. Follow the instructions carefully to avoid injury. Keep all tools and sharp objects out of reach of children. Always unplug the charging station before assembly or disassembly. Ensure the power cord is not pinched or damaged during assembly or placement. Do not overload the electrical outlets. For indoor use only.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included hardware list for detailed component identification.

- Table Panels (Top, Side, Shelves, Drawer components)
- Hardware (Screws, dowels, cam locks, drawer slides, knob)
- Charging Station Unit (Pre-installed in top panel)
- Power Cord (Attached to charging station)
- Instruction Manual

Note: Each piece of wood and part is numbered for easy assembly.

ASSEMBLY INSTRUCTIONS

Assembly is estimated to take approximately 30 minutes for one person. A screwdriver is recommended (not included).


Step-by-Step Guide:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each numbered part to the corresponding diagram in the included hardware list.
3. **Assemble Frame:** Attach the side panels to the bottom shelf and middle shelf using the provided hardware. Ensure all connections are secure.
4. **Install Drawer Slides:** Secure the drawer slides to the designated side panels of the table frame.
5. **Assemble Drawer:** Construct the drawer box using the drawer panels and hardware. Install the drawer knob.

6. **Insert Drawer:** Carefully slide the assembled drawer into the installed drawer slides.
7. **Attach Top Panel:** Secure the top panel, which includes the pre-installed charging station, to the assembled frame.
8. **Final Checks:** Ensure all screws are tightened and the table is stable.



Image: Two ChooChoo Black End Tables, fully assembled and ready for use.

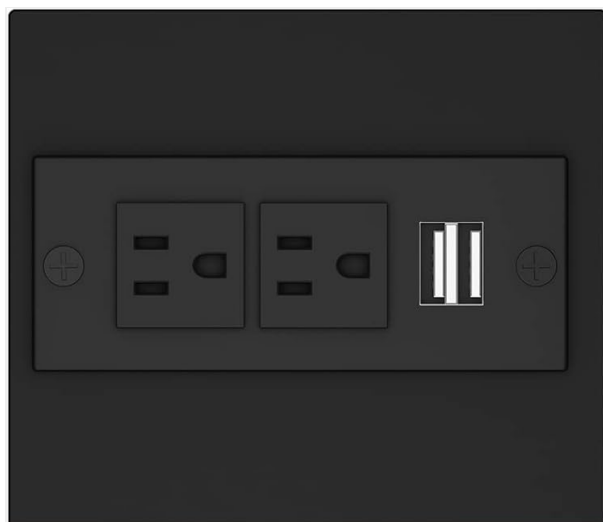

USB Charging



Storage Space Drawer



Open Double Shelves



Design Durable Legs

Image: Detailed view of the end table's features, including the charging station, drawer, and shelves.


OPERATING INSTRUCTIONS

Using the Charging Station:

The ChooChoo End Table is equipped with a convenient charging station integrated into the tabletop. This station includes 2 standard 120V/12A AC outlets and 2 USB 5V/2A ports.

1. **Connect Power:** Plug the 6.5 ft power cord from the end table into a standard wall outlet.
2. **Charge Devices:**
 - For AC devices: Insert the device's power plug into one of the two AC outlets.
 - For USB devices: Connect your device's USB charging cable to one of the two USB ports.

The charging station allows for simultaneous charging of multiple devices such as cell phones, tablets, and small electrical appliances.

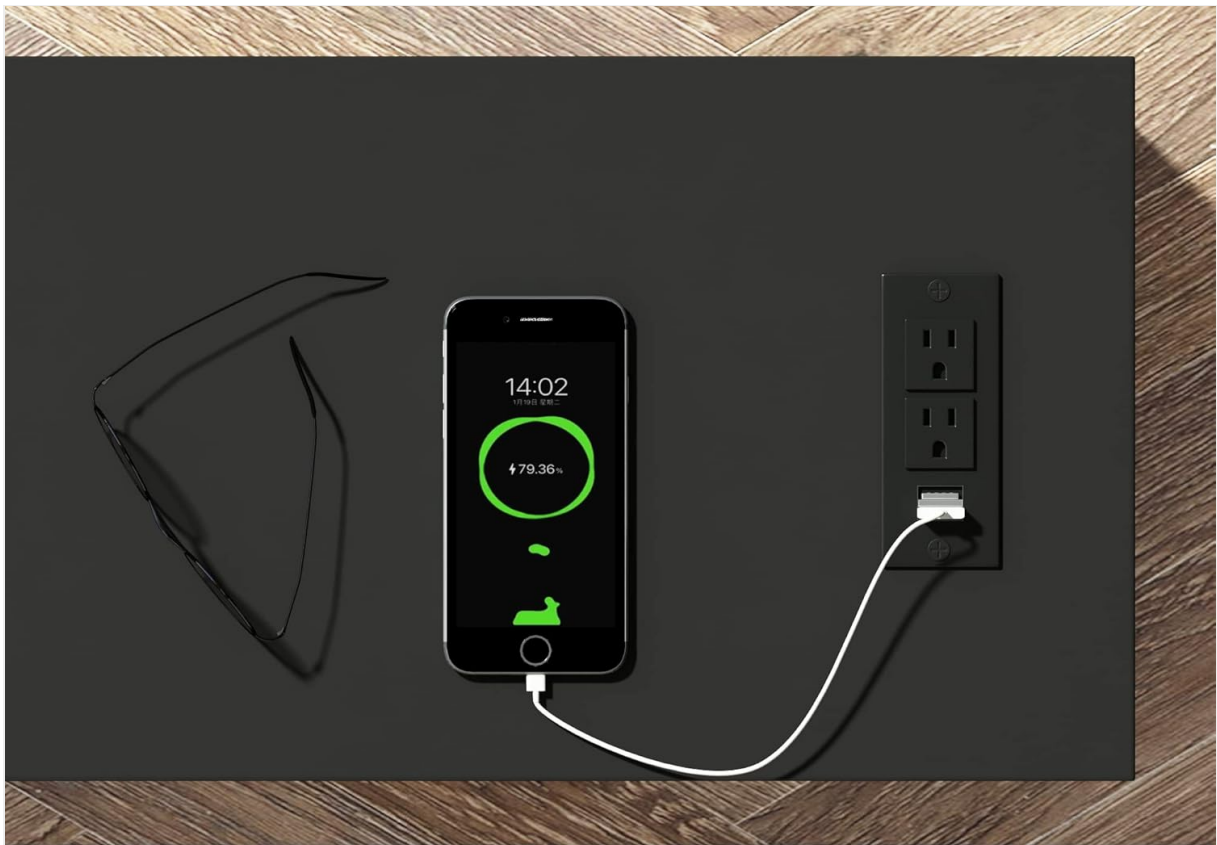

120V/12A
↳ 2 AC Outlets[†]



5V/2A
↳ 2 USB Ports[†]



6.5-Foot
↳ Power Cord[†]

Image: A smartphone charging on the integrated charging station.



Image: Infographic showing the charging station's electrical specifications.

Storage Features:

- **Hidden Drawer:** Use the top drawer to store small items like remote controls, charging cables, or snacks, keeping them out of sight.
- **Open Shelves:** The two open shelves below the drawer provide space for books, decorative items, or a small blanket.

MAINTENANCE

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood material.
- **Stability:** Periodically check all screws and connections to ensure the table remains stable. Tighten if necessary.
- **Electrical Components:** Keep the charging station free from dust and debris. Do not attempt to disassemble or repair the electrical components yourself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Table is wobbly/unstable.	Loose screws or uneven assembly.	Check and tighten all assembly screws. Ensure the table is on a flat surface.
Charging station not working.	Power cord not fully plugged in; wall outlet issue; device issue.	Verify the power cord is securely plugged into both the table and the wall outlet. Test the wall outlet with another device. Ensure your device's charging cable is functional.
Drawer does not slide smoothly.	Drawer slides incorrectly installed or debris in tracks.	Ensure drawer slides are installed correctly and aligned. Clear any debris from the tracks.

SPECIFICATIONS

Brand: ChooChoo

Model Name: ET20001-BK-E-S

Product Dimensions: 12"D x 24"W x 24"H

Item Weight: 26.8 Pounds

Frame Material: Engineered Wood

Color: Black

Charging Station: 2 x 120V/12A AC Outlets, 2 x 5V/2A USB Ports

Power Cord Length: 6.5 ft

Number of Drawers: 1

Number of Shelves: 1 (open double shelves)

Recommended Assembly Persons: 1

Tools Recommended for Assembly: Screwdriver (not included)

Indoor/Outdoor Usage: Indoor Only

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official ChooChoo website. Our customer service team is available to assist with any questions or issues you may encounter.

Contact: [Visit the ChooChoo Store on Amazon](#)