

Donner DP-10

Donner DP-10 Foldable Piano Keyboard User Manual

Model: DP-10

INTRODUCTION

Thank you for choosing the Donner DP-10 Foldable Piano Keyboard. This 88-key digital piano is designed for portability and versatility, offering a full-size playing experience with advanced features. This manual provides essential information for safe and effective use, including setup, operation, maintenance, and troubleshooting.

SAFETY INFORMATION

- Read all instructions before using the product.
- Keep the product away from water, heat sources, and direct sunlight.
- Do not attempt to disassemble or modify the product. Refer all servicing to qualified personnel.
- Use only the power adapter supplied with the product.
- Ensure proper ventilation around the instrument.
- Keep out of reach of small children to prevent choking hazards from small parts.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Donner DP-10 Foldable Piano Keyboard (88 Keys)
- Adjustable Z-Style Piano Stand (DKS-100)
- Power Adapter
- Sustain Pedal
- Music Rest
- Carrying Bag
- User Manual (this document)



Image: The Donner DP-10 keyboard in its folded state, alongside the Z-style stand components, sustain pedal, power adapter, and carrying bag, illustrating the complete package contents.

SETUP

1. Assembling the Z-Style Piano Stand (DKS-100)

1. Unfold the Z-style stand legs. The stand is designed for convenient folding and storage.
2. Adjust the width of the stand to accommodate your DP-10 keyboard. The stand has 7 adjustable gears, suitable for keyboards from 37 to 88 keys.
3. Adjust the height of the stand to your preferred playing position (sitting or standing). The height adjustment range is 56.5cm-86.4cm (22.2"-34").
4. Ensure the stand is stable and all locking mechanisms are secure before placing the keyboard on it. The thickened

iron pipe design provides strong stability and ample legroom.

Keyboard Stand



INTEGRATED

INSTALLATION AND FOLDING

The folding design is adopted to reduce the storage space to a greater extent, and the narrowest width is 350mm



CONVENIENT
FOLDING



EASY
STORAGE

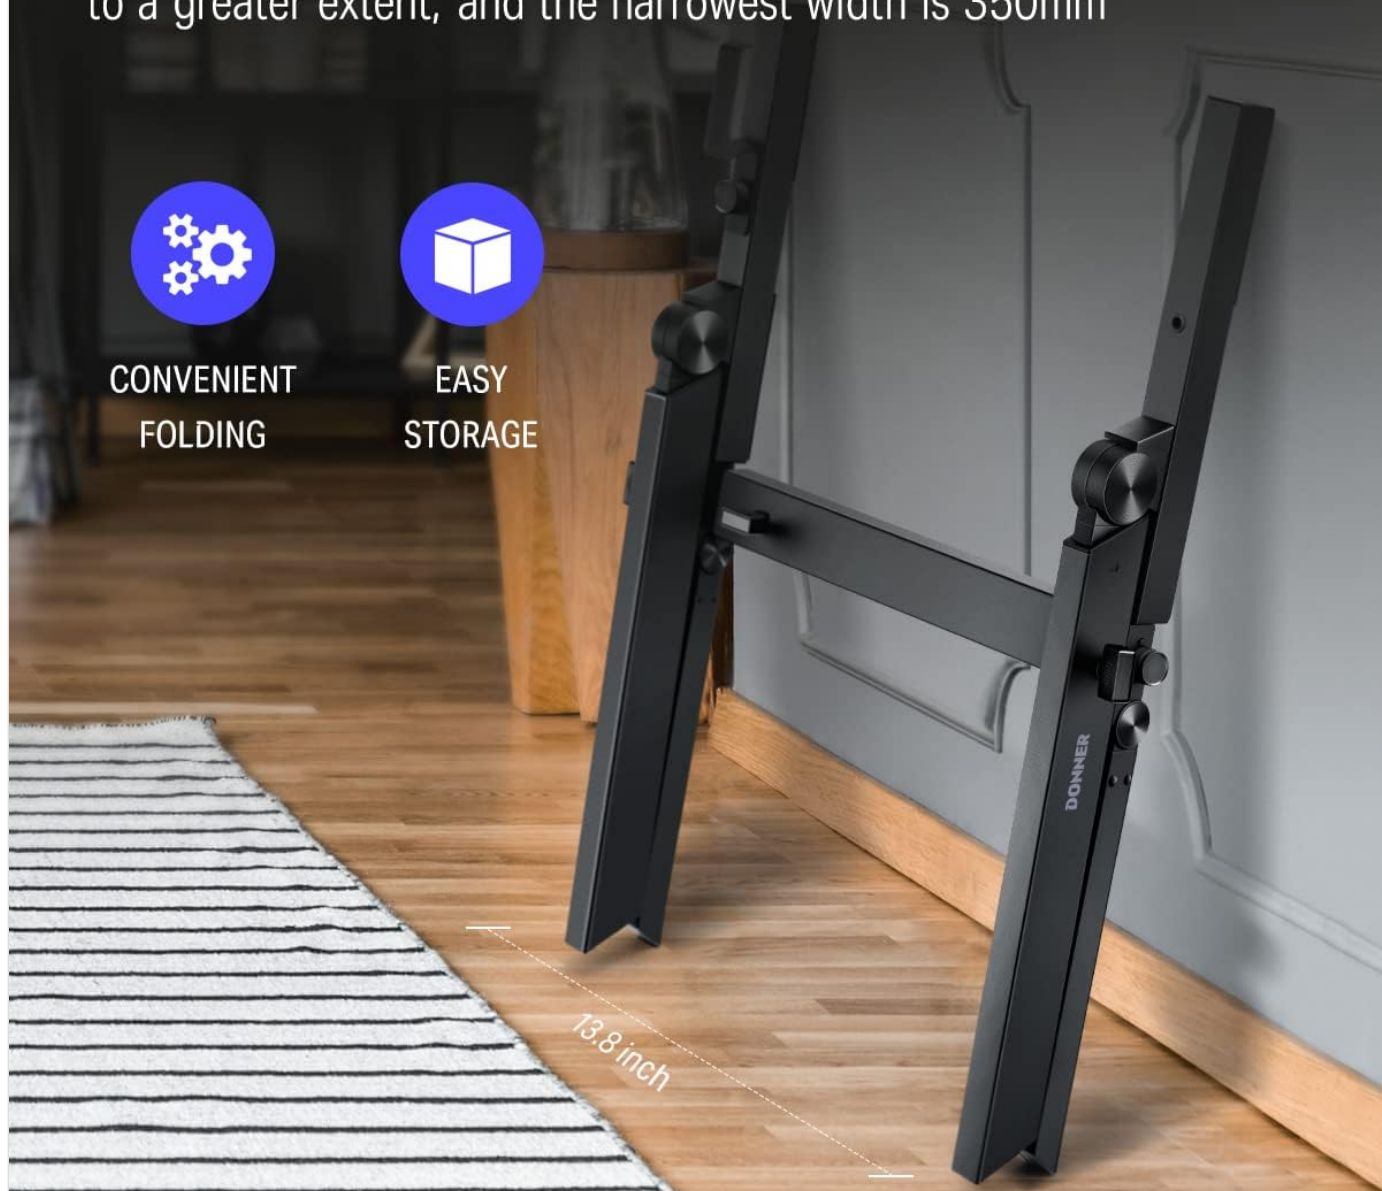 


Image: The Z-style piano stand demonstrating its integrated folding design, highlighting its convenience for storage and portability. The narrowest width when folded is 350mm.

STRONG STABILITY

The iron pipe with thickened diameter is not easy to deform and damage. When the use is strong, there will be no shaking, and there is more room for leg extension



 
MORE LEGROOM

More structurally sound to give you enough leg room

Image: The Z-style piano stand showcasing its strong stability with a thickened diameter iron pipe, ensuring no shaking during use and providing more legroom.

LARGE ADJUSTMENT RANGE

Suitable for keyboard products with
54 Key - 88 key length.

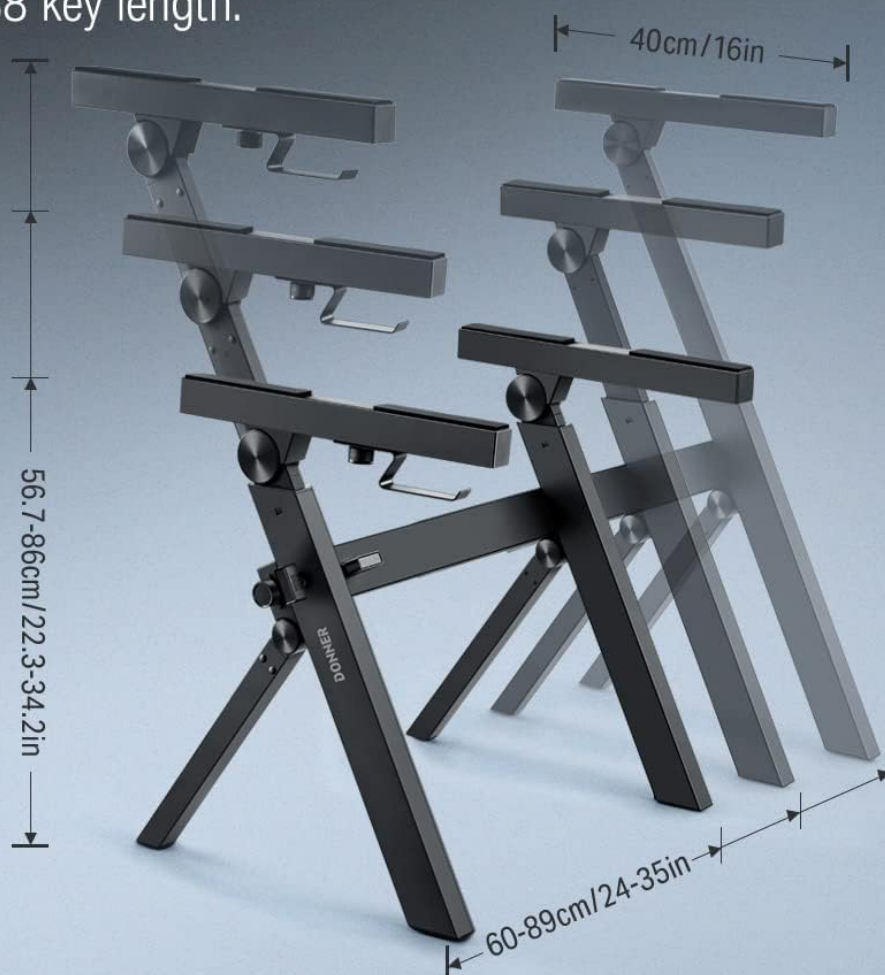

MINIMUM SIZE



MEDIUM SIZE



MAXIMUM SIZE

Image: The Z-style piano stand illustrating its large adjustment range for width and height, suitable for keyboards from 54 to 88 keys, with examples of minimum, medium, and maximum sizes.

2. Setting up the DP-10 Keyboard

1. Unfold the DP-10 keyboard. It features an ultra-portable folding design.
2. Place the unfolded keyboard securely on the assembled Z-style stand.
3. Connect the power adapter to the DC IN port on the keyboard and plug it into a power outlet.

4. Connect the sustain pedal to the designated pedal input.
5. Attach the music rest to the top of the keyboard if desired.

88 Full Size Velocity Sensitive Keys

88 KEYS

full-size touch response,
much similar to real piano



Image: The Donner DP-10 keyboard in its unfolded state, highlighting its 88 full-size velocity-sensitive keys and showing its folded and unfolded dimensions for portability.

Powering On and Off

- Press the Power button to turn the keyboard on.
- Press and hold the Power button to turn the keyboard off.
- The DP-10 features an ultra-long battery life of up to 10 hours on a full charge. Charging time is approximately 4 hours. For the first use, charge for more than 6 hours.

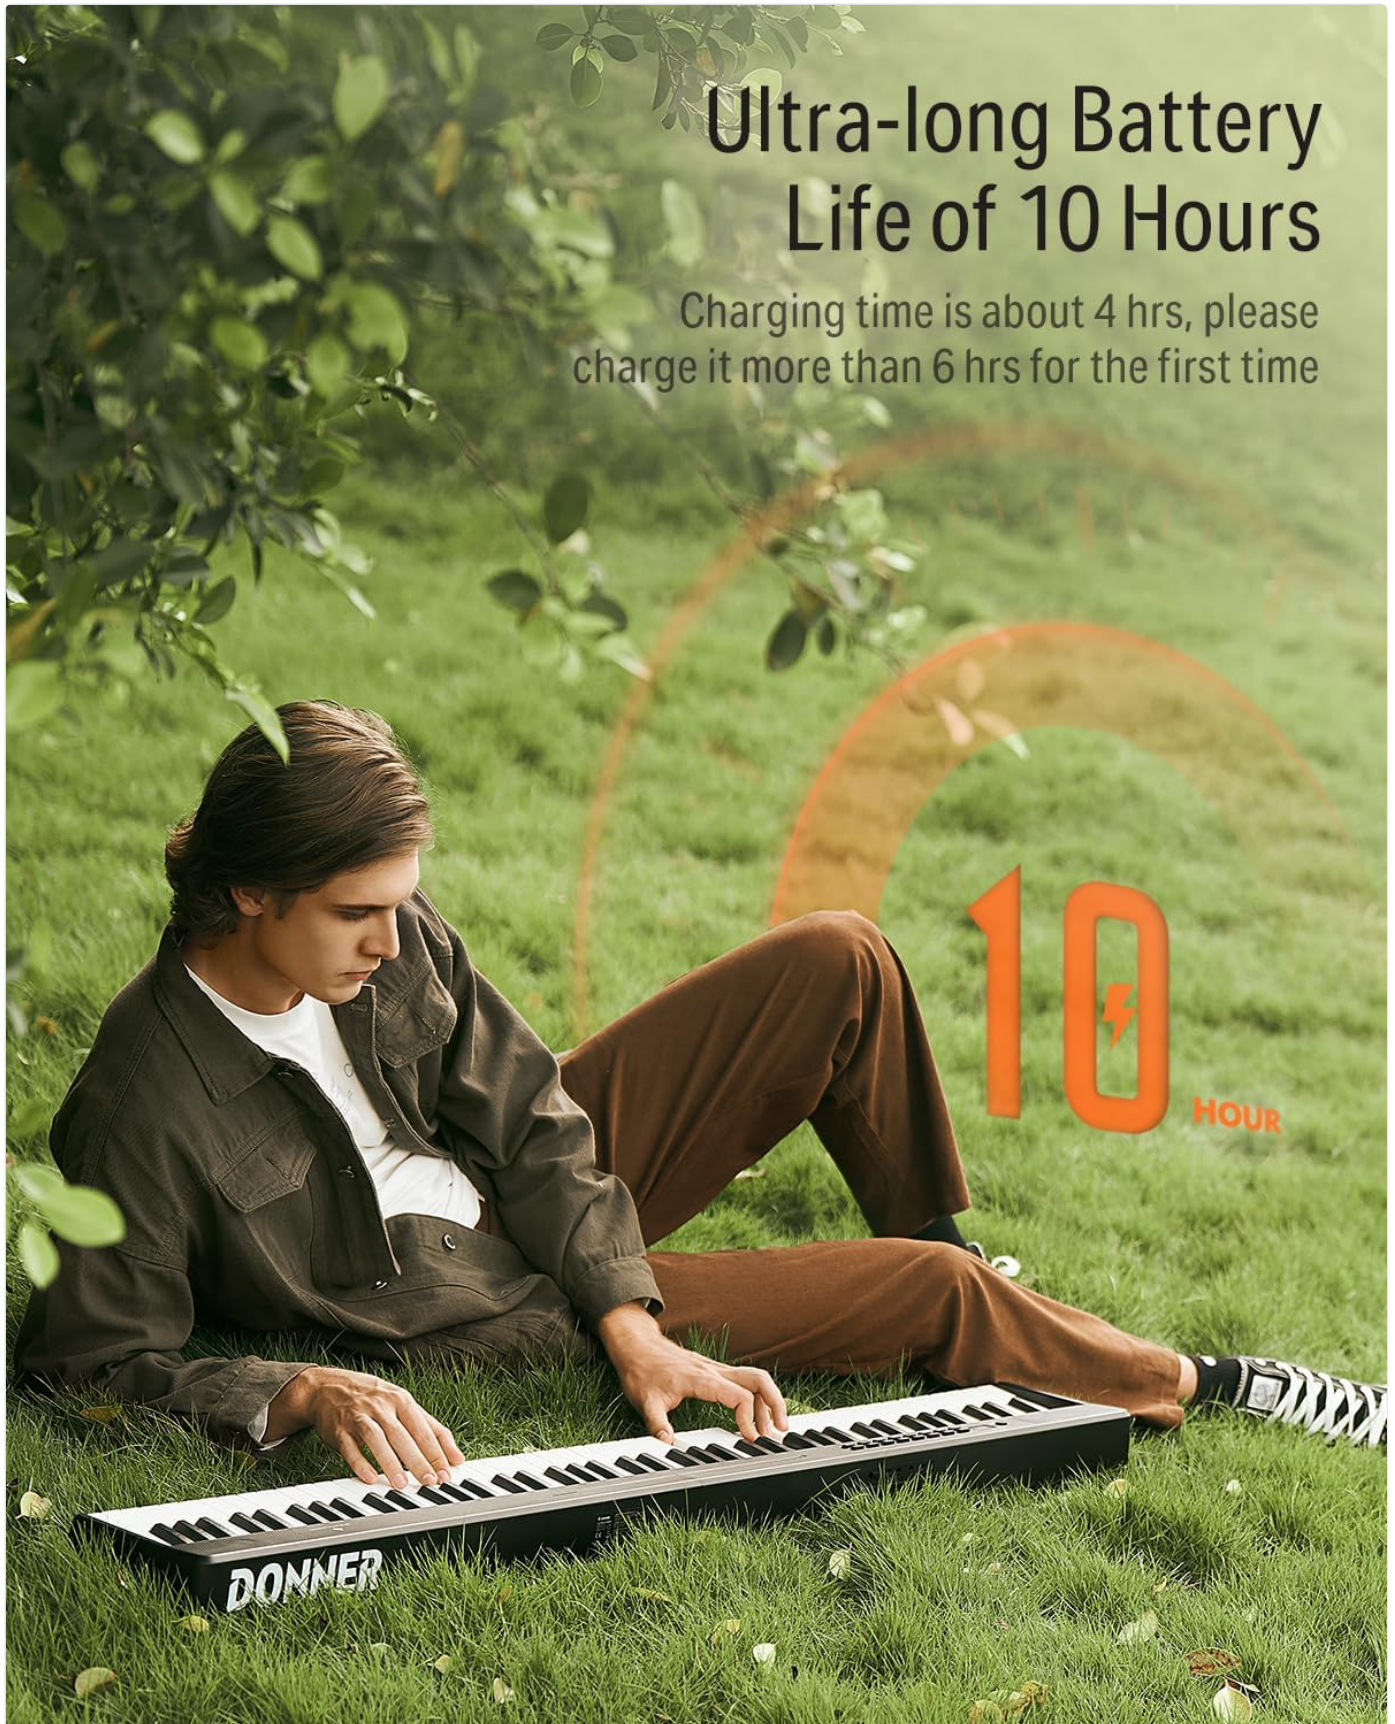 


Image: A person playing the Donner DP-10 keyboard outdoors, illustrating its portability and emphasizing the ultra-long battery life of 10

hours.

Basic Functions

- **Tones:** The DP-10 has 128 different tones. Refer to the included quick start guide or the keyboard's display for selecting specific tones.
- **Rhythms:** Explore 128 built-in rhythms to accompany your playing.
- **Demo Songs:** Enjoy 21 pre-loaded demo songs.
- **Metronome:** Use the metronome function for timing practice.
- **Auto-Chord:** Engage auto-chord for simplified accompaniment.
- **Split:** Divide the keyboard into two sections for different tones.
- **Record:** Record your performances directly on the keyboard.
- **Transpose:** Change the key of the keyboard.
- **Drum Kit:** Access various drum sounds.

Multi-function



Metronome



Learning Mode



Bluetooth



Drum Kit



Auto Chord



Record



Tempo



Pitch



Image: A close-up of the Donner DP-10 keyboard with icons representing its multi-function features, including Metronome, Learning Mode, Bluetooth, Drum Kit, Auto Chord, Record, Tempo, and Pitch.

Connectivity

- **Wireless Connection (Bluetooth):** The DP-10 supports wireless Bluetooth connection. This allows you to connect to mobile phones or iPads for learning apps or music editing software.
- **USB-MIDI Connection (Type-C):** Use the USB Type-C port to connect the keyboard to a computer or other MIDI devices. This enables the DP-10 to function as a MIDI controller for music production and editing software.

Support TYPE-C MIDI and Bluetooth Connection

You can connect ipad or phone to take a lesson in the educational app or have music editing



Garageband



Perfect Piano



Pop Piano

Image: A person interacting with the Donner DP-10 keyboard while holding a smartphone, illustrating the support for Type-C MIDI and Bluetooth connections for educational apps and music editing.

MAINTENANCE

- Clean the keyboard and stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the instrument to extreme temperatures or humidity.

- When not in use, store the keyboard in its carrying bag to protect it from dust and damage.
- Regularly check all connections and cables for wear and tear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from the keyboard.	Volume too low; headphones connected; power issue.	Increase volume; disconnect headphones; ensure power adapter is connected and unit is charged.
Keyboard not connecting via Bluetooth/USB-MIDI.	Bluetooth not enabled; incorrect cable; driver issue (for USB-MIDI).	Ensure Bluetooth is on and paired; use correct Type-C USB cable; check computer's device manager for drivers.
Keys not responding or inconsistent touch.	Dust or debris under keys; internal issue.	Gently clean around keys; if problem persists, contact customer support.
Stand is wobbly.	Legs not fully extended or locked; uneven surface.	Ensure all stand adjustments are locked; place on a flat, stable surface.

SPECIFICATIONS









 
- **Model:** DP-10
- **Number of Keys:** 88, Full-size Velocity Sensitive
- **Tones:** 128
- **Rhythms:** 128
- **Demo Songs:** 21
- **Connectivity:** USB Type-C (MIDI), Bluetooth
- **Battery Life:** Up to 10 hours
- **Charging Time:** Approx. 4 hours (6+ hours for first charge)
- **Folded Length:** 24.7 inches (62.8 cm)
- **Weight:** 7.8 lbs (3.5 kg)
- **Stand Compatibility:** Adjustable Z-Style Stand (DKS-100), suitable for 37-88 key keyboards.

WARRANTY AND SUPPORT

Donner provides a warranty for this product. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Donner customer service through their official website or the contact information provided with your purchase.

Visit the official Donner Store for more information:[Donner Store on Amazon](#)

Related Documents - DP-10

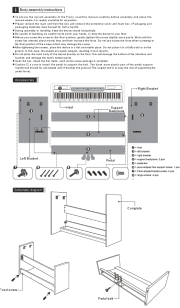 	<p>Donner DP-06 61 Keys Electronic Piano User Manual Features & Operation</p> <p>Comprehensive user manual for the Donner DP-06 61 Keys Electronic Piano. Learn about its functions, connectivity, demo songs, tones, rhythms, and safety information. Get the most out of your digital piano.</p>
 	<p>Donner DP-06 61 Keys Electronic Piano User Manual</p> <p>Comprehensive user manual for the Donner DP-06 61 Keys Electronic Piano, covering features, functions, charging, connectivity, and troubleshooting.</p>
 	<p>Donner DP-06 61-Key Electronic Piano User Manual</p> <p>Explore the Donner DP-06, a 61-key portable electronic piano designed for beginners. This user manual provides comprehensive instructions on its features, including Bluetooth connectivity, diverse tones, rhythms, and teaching modes. Enhance your musical journey with free Melodics courses available at www.donnermusic.com/daws.</p>
 	<p>Donner DDP-200 88 Keys Digital Piano User Manual</p> <p>Comprehensive user manual for the Donner DDP-200 88 Keys Digital Piano, covering assembly, panel instructions, connections, functions, maintenance, security, and troubleshooting.</p>
	<p>Donner SE-1 Piano Stand Assembly Instructions</p> <p>Step-by-step guide for assembling the Donner SE-1 Piano Stand, including a list of accessories and detailed instructions for a secure and stable setup.</p>

✦ DONNER

USER MANUAL

DONNER OURA PIANO S300
Please Read the Operating Instructions
Before Use for Maximum Safety & Reliability

[Donner OURA Piano S300 User Manual: Setup, Operation, and Maintenance](#)

Explore the Donner OURA Piano S300 digital piano with this comprehensive user manual. Learn about its 88-key graded hammer keyboard, Bluetooth/MIDI features, setup, safe operation, and maintenance. Ideal for musicians seeking detailed guidance on their Donner digital piano.