

Lafocuse ZH0129A

Lafocuse 12-inch LCD Wall Clock Instruction Manual

Model: ZH0129A

INTRODUCTION

Thank you for choosing the Lafocuse 12-inch LCD Wall Clock. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Use only the specified battery types (AA for clock movement, AAA for LCD).
- Ensure batteries are inserted with correct polarity (+/-).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- This product is designed for indoor use only.

PACKAGE CONTENTS

- 1 x Lafocuse 12-inch LCD Wall Clock
- 1 x Instruction Manual

SETUP

1. Battery Installation

Locate the battery compartments on the back of the clock. One compartment is for the clock movement, and the other is for the LCD display.

1. Insert one (1) AA battery into the compartment for the clock movement. Ensure the positive (+) and negative (-) terminals are correctly aligned.
2. Insert one (1) AAA battery into the compartment for the LCD display. Ensure the positive (+) and negative (-) terminals are correctly aligned.



Image: Back of the clock with battery compartments and setting knob clearly visible.

2. Setting the Time

After installing the AA battery, the clock hands will begin to move. To set the correct time:

1. Locate the hand setting knob on the back of the clock (refer to the image above).
2. Turn this knob clockwise or counter-clockwise until the clock hands display the accurate time.

3. Setting the Date and Temperature (LCD Display)

The LCD display shows the month, date, day of the week, and temperature. To adjust these settings:

1. Locate the 'SET', 'UP', and 'DOWN' buttons on the back of the clock, near the LCD battery compartment.
2. Press the **'SET'** button. The 'Year' display will begin to flash.
3. Use the **'UP'** or **'DOWN'** buttons to adjust the year.
4. Press **'SET'** again to confirm the year and move to the next setting (Month).
5. Repeat the process using **'UP'** or **'DOWN'** to adjust the Month and Date, pressing **'SET'** after each adjustment.

6. Continue pressing **'SET'** to cycle through other potential settings. The 'Week' and 'Temperature' displays will update automatically based on the set date.
7. To switch the temperature unit between Fahrenheit (°F) and Celsius (°C), locate the dedicated switch or button on the back of the clock, if available, or cycle through settings using the 'SET' button until the temperature unit flashes, then use 'UP'/'DOWN' to change.



Image: Detailed view of the LCD display for date and temperature settings.

OPERATING INSTRUCTIONS

Once set up, your Lafocuse LCD Wall Clock operates continuously. The silent quartz movement ensures accurate timekeeping without any ticking noise, making it suitable for bedrooms, offices, and other quiet environments.



Image: The Lafocuse LCD Wall Clock displaying current time, date, and temperature.

Reading the Display

- **Analog Hands:** Indicate the current hour and minute.
- **LCD Display:** Shows the Month, Date, Day of the Week, and Temperature.

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or the LCD screen.

Battery Replacement

Replace batteries when the clock hands stop moving or the LCD display becomes dim or unresponsive. Follow the battery

installation steps in the Setup section. It is recommended to replace both batteries simultaneously for optimal performance.

Troubleshooting

Problem	Possible Cause	Solution
Clock hands not moving	AA battery is dead or incorrectly inserted.	Replace the AA battery, ensuring correct polarity.
LCD display is blank or dim	AAA battery is dead or incorrectly inserted.	Replace the AAA battery, ensuring correct polarity.
Incorrect time displayed	Time was not set correctly or was accidentally changed.	Re-set the time using the hand setting knob.
Incorrect date/temperature displayed	Date/temperature settings were not configured correctly.	Re-set the date and temperature using the 'SET', 'UP', 'DOWN' buttons.

Specifications

Feature	Detail
Model Number	ZH0129A
Dimensions (L x W x H)	30 x 3.81 x 30 cm (12 x 1.5 x 12 inches)
Weight	810 grams
Power Source	1 x AA battery (for clock movement), 1 x AAA battery (for LCD)
Display Type	Analog (hands) and Digital (LCD)
Movement Type	Quartz
Special Features	Silent sweep movement, LCD calendar (month, date, day of week), temperature display, wooden hands, plastic frame with wood finish
Material	Plastic with wood finish
Indoor/Outdoor Use	Indoor

Warranty and Support

Warranty Information

This Lafocuse clock comes with a **3-year warranty** on the movement. If you experience any quality issues with the clock movement within this period, please contact our support team for assistance.

Customer Support

For any questions, technical support, or warranty claims, please contact the seller, QuareBest, through your purchase platform. Please have your order number and product model (ZH0129A) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question