

IK.004.978.25

HJÄLPA Adjustable Clothes Rail User Manual

Model: IK.004.978.25

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your HJÄLPA Adjustable Clothes Rail. Please read this manual thoroughly before installation and use, and retain it for future reference.

The HJÄLPA Adjustable Clothes Rail is designed to provide a customizable storage solution for clothing, with an adjustable width range of 30 cm to 47 cm.

SAFETY INFORMATION

- Ensure all mounting hardware is securely fastened to a suitable wall material. Consult a professional if unsure about wall type or mounting methods.
- Do not overload the clothes rail. Exceeding the recommended weight limit can cause damage to the product or mounting surface.
- Keep small parts out of reach of children during assembly to prevent choking hazards.
- Regularly check the rail and its fixings for any signs of wear or loosening. Tighten as necessary.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Adjustable Clothes Rail (1 unit)
- Mounting Brackets (2 units)
- Screws and Wall Plugs (quantity as required for mounting)
- Instruction Leaflet (this document)

SETUP AND INSTALLATION

The HJÄLPA Adjustable Clothes Rail is designed for wall-mounted installation. Follow these steps carefully:

1. **Select Location:** Choose a suitable wall location, ensuring it can support the weight of the rail and its contents. Consider the desired height for hanging clothes.
2. **Mark Drilling Points:** Hold one mounting bracket against the wall at the desired height. Use a pencil to mark the screw holes. Repeat for the second bracket, ensuring it is level with the first and at the desired width (between 30 cm and 47 cm). Use a spirit level for accuracy.

3. **Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked points. Insert wall plugs if necessary.
4. **Attach Brackets:** Securely fasten the mounting brackets to the wall using the provided screws.
5. **Install Clothes Rail:** Extend the adjustable clothes rail to the desired width. Insert the ends of the rail into the attached mounting brackets. Ensure it clicks securely into place.
6. **Test Stability:** Gently pull down on the installed rail to confirm it is firmly attached before hanging any items.



Image 1: The HJÄLPA Adjustable Clothes Rail integrated into a closet space, demonstrating its use for hanging clothes. The rail is extended to accommodate the space, and various garments are neatly hung.

OPERATING INSTRUCTIONS

The HJÄLPA Adjustable Clothes Rail is straightforward to use:

- **Adjusting Width:** To adjust the width, gently pull or push the two sections of the rail apart or together until the desired length (between 30 cm and 47 cm) is achieved. Ensure both ends are securely seated in their respective brackets after adjustment.

- **Hanging Clothes:** Use standard clothes hangers to hang garments on the rail. Distribute weight evenly to prevent undue stress on one section.



Image 2: The HJÄLPA Adjustable Clothes Rail shown in a different room setting with green walls, illustrating its versatility. The rail is holding several items of clothing, demonstrating its practical application.

MAINTENANCE AND CARE

To ensure the longevity and proper function of your clothes rail:

- **Cleaning:** Wipe the rail with a soft, damp cloth. Use a mild detergent if necessary, then wipe dry. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all connections and mounting points for tightness. Re-tighten screws if they become loose.
- **Weight Limit:** Adhere to the maximum recommended weight capacity to prevent bending or damage.

TROUBLESHOOTING

If you encounter issues with your HJÄLPA Adjustable Clothes Rail, consider the following:

- **Rail feels loose:** Check if the mounting brackets are securely fastened to the wall and if the rail ends are properly seated in the brackets. Re-tighten screws if necessary.
- **Difficulty adjusting width:** Ensure there is no obstruction and that the rail sections are clean. Apply a small amount of silicone spray if movement is stiff, avoiding contact with clothing.
- **Rail sags:** This indicates overloading. Reduce the weight of items on the rail. Ensure the rail is installed correctly and the wall can support the load.

SPECIFICATIONS



Image 3: A detailed view of the HJÄLPA Adjustable Clothes Rail, highlighting its design and the mechanism that allows for width adjustment. The white color and smooth finish are visible.

Feature	Detail
Model Number	IK.004.978.25
Brand	Generic (HJÄLPA series)
Adjustable Width	30 cm - 47 cm (Min. width: 30.0 cm, Max. width: 47.0 cm)
Color	White
Mounting Type	Wall Mounted
Manufacturer	ProTuning
ASIN	B0D1CQZJPL

WARRANTY AND SUPPORT

Specific warranty details for the HJÄLPA Adjustable Clothes Rail are not provided in the product information. For warranty claims or technical support, please contact the retailer or manufacturer directly using the contact information provided at the point of purchase.

Manufacturer: ProTuning