

BLIXTSNABB 78 cm 700 black

# BLIXTSNABB Induction Hob User Manual

Model: BLIXTSNABB 78 cm 700 black

Brand: Generic

[Safety Information Instructions](#) [Product Overview Maintenance](#) [Setup & Installation Troubleshooting](#) [Operating Specifications](#) [Warranty & Support](#)

## 1. SAFETY INFORMATION

Please read all instructions carefully before using the BLIXTSNABB induction hob. Keep this manual for future reference.

- Electrical Safety:** Ensure the hob is installed by a qualified electrician and connected to a properly grounded outlet. Do not use extension cords.
- Child Safety:** Keep children away from the hob during operation and while it is cooling down. The surface can remain hot after use.
- Burn Hazard:** The cooking zones become hot during use. Always use oven mitts or pot holders when handling hot cookware.
- Induction Cookware:** Only use cookware suitable for induction hobs (magnetic base). Non-induction cookware will not heat.
- Ventilation:** Ensure adequate ventilation around the hob as specified in the installation instructions.
- Cleaning:** Disconnect power before cleaning. Use only recommended cleaning agents and methods.
- Flammable Materials:** Do not store flammable materials near or on the hob.

## 2. PRODUCT OVERVIEW

The BLIXTSNABB induction hob offers efficient and precise cooking with multiple cooking zones and advanced features. Its sleek black design integrates seamlessly into modern kitchens.

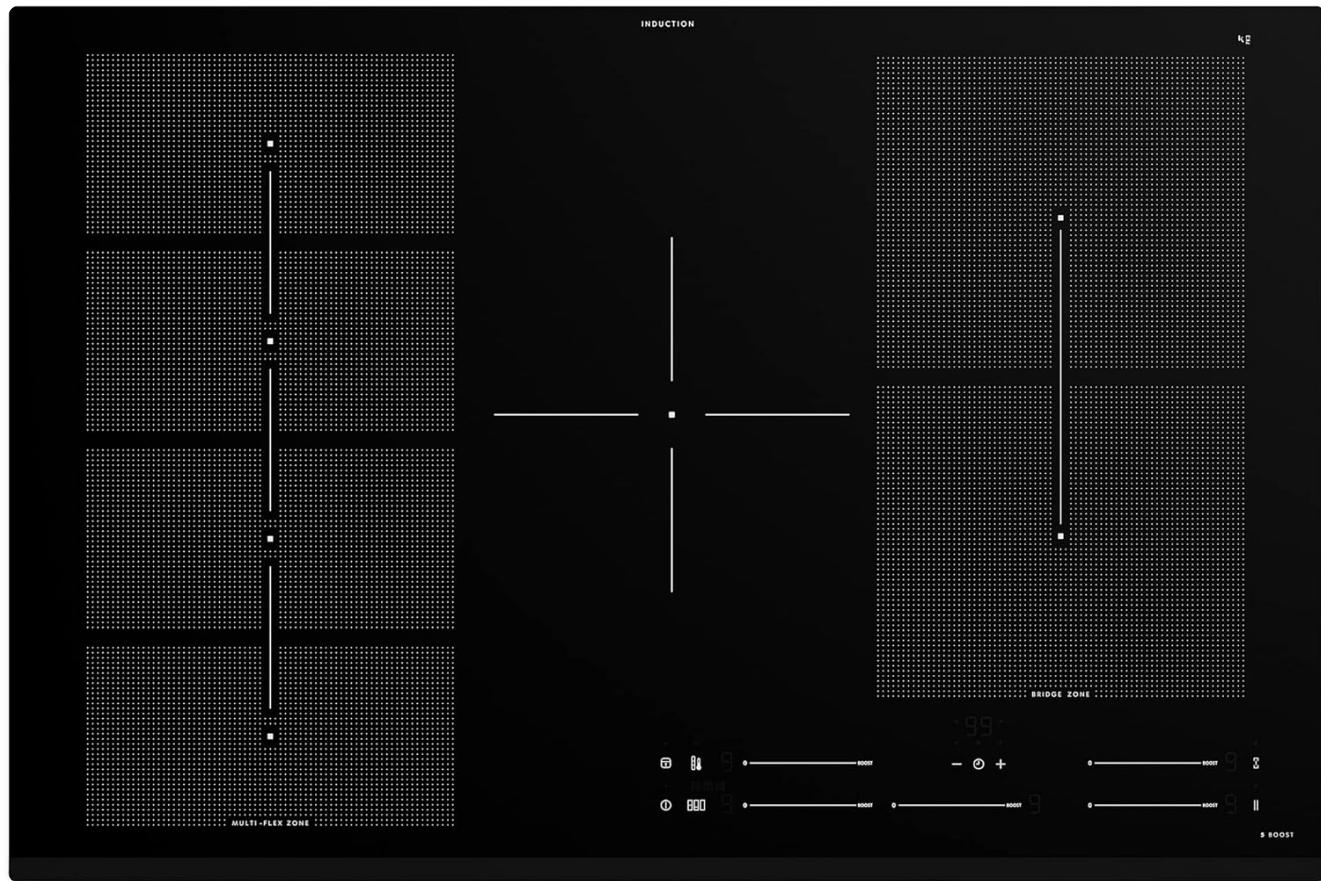


Figure 2.1: BLIXTSNABB Induction Hob - Top View. This image shows the overall layout of the hob, including the four main cooking zones, the central control panel, and the 'BRIDGE ZONE' and 'MULTI-FLEX ZONE' indicators.



Figure 2.2: BLIXTSNABB Induction Hob in a Kitchen Setting. This image illustrates the hob integrated into a kitchen countertop, demonstrating its aesthetic appeal and how it appears during use with cookware.

### 3. SETUP & INSTALLATION

---

Proper installation is crucial for the safe and efficient operation of your induction hob. It is recommended that installation be performed by a certified professional.

#### 3.1 Unpacking

- Carefully remove the hob from its packaging.
- Inspect for any damage during transit. If damaged, do not install and contact your supplier.
- Retain packaging materials for potential future transport or service.

#### 3.2 Countertop Preparation

Ensure your countertop is suitable for the hob's dimensions and weight. The hob requires a cut-out in the countertop. Refer to the diagram below for precise measurements.

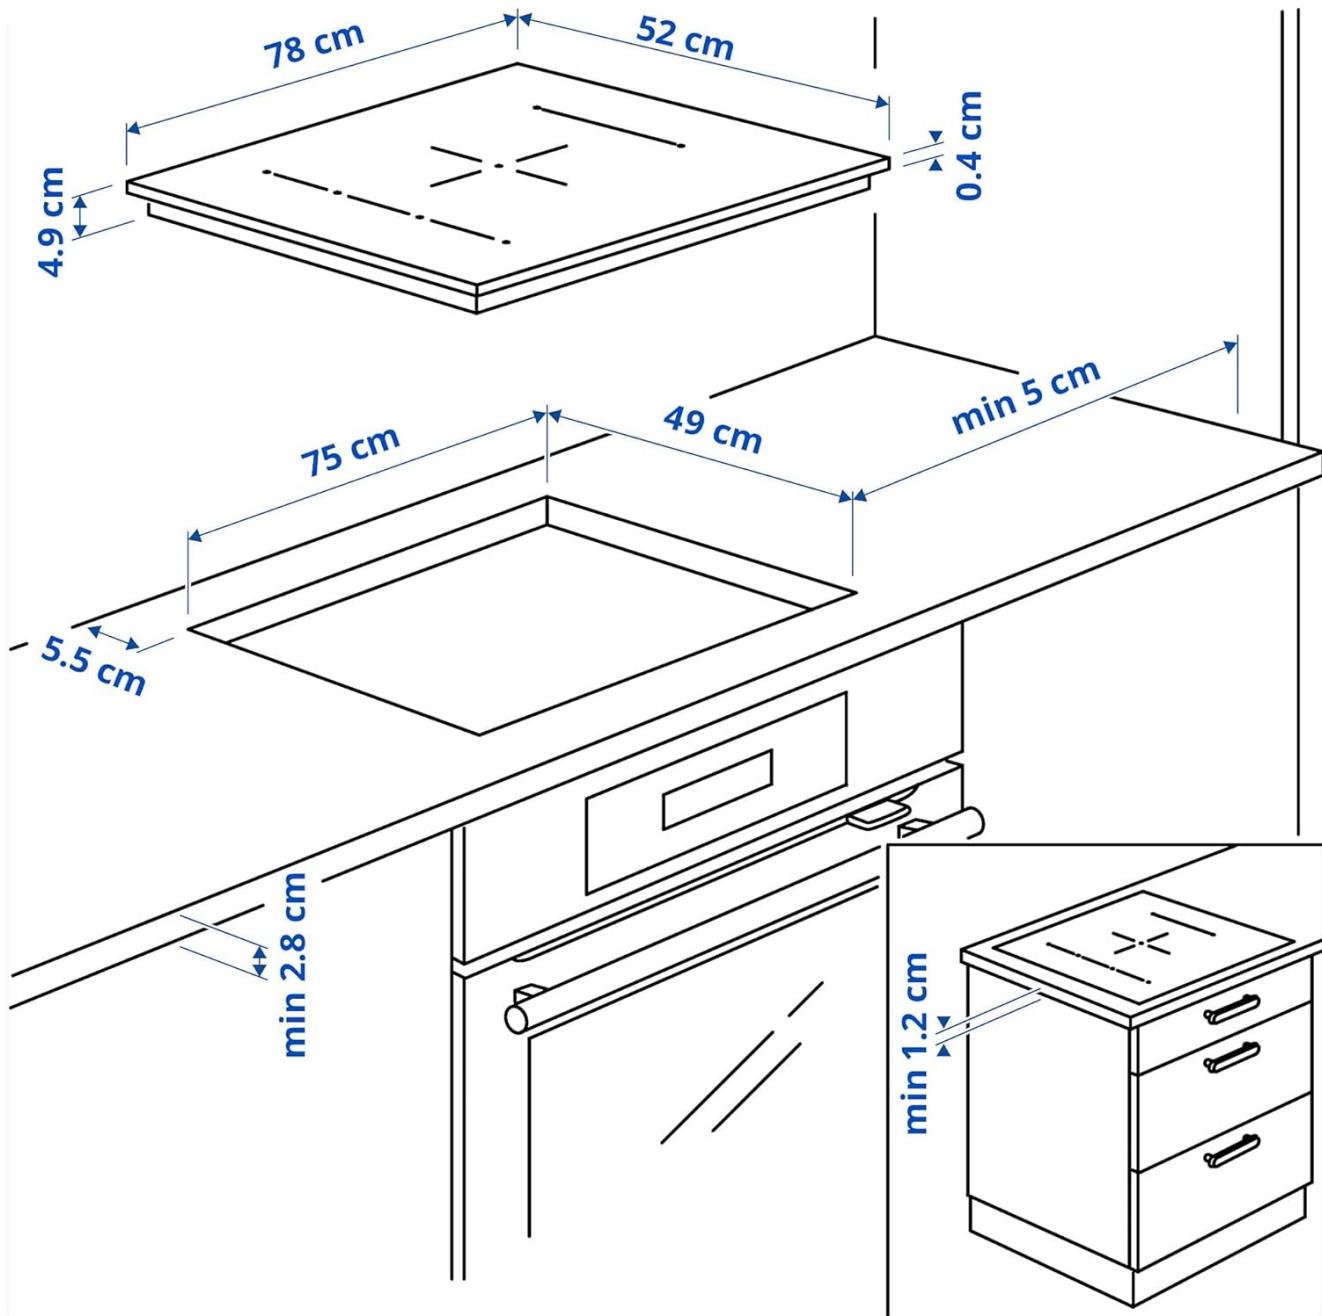


Figure 3.1: Installation Dimensions. This diagram provides critical measurements for the hob's width (78 cm), depth (52 cm), height (4.9 cm), and the required cut-out width (75 cm) and depth (49 cm) for proper installation into a kitchen counter.

**Table 3.1: Hob and Cut-out Dimensions**

Measurement	Value
Hob Width	78.0 cm
Hob Depth	52.0 cm
Hob Height	4.9 cm
Hob Weight	14.78 kg
Cut-out Width	75.0 cm
Cut-out Depth	49.0 cm
Minimum distance from rear wall	min 5 cm

Measurement	Value
Minimum distance from side cabinet	min 1.2 cm
Minimum distance from front edge	min 5.5 cm

### 3.3 Electrical Connection

- Ensure the main power supply is disconnected before making any electrical connections.
- Connect the hob to a dedicated electrical circuit with appropriate voltage (230V) and current rating as per local electrical codes.
- The hob must be properly grounded.

## 4. OPERATING INSTRUCTIONS

---

The BLIXTSNABB induction hob features intuitive touch controls and flexible cooking zones for versatile cooking.

### 4.1 Control Panel Overview



Figure 4.1: Control Panel Detail. This image highlights the touch-sensitive controls, including individual power sliders for each zone, the boost function, and the timer controls.

- **Power On/Off:** Touch the power symbol to turn the hob on or off.
- **Cooking Zone Selection:** Select a cooking zone by touching its corresponding control area.
- **Power Level Adjustment:** Use the slider or +/- buttons to adjust the power level from 1 (low) to 9 (high).
- **Boost Function:** Touch the 'Boost' symbol for maximum power for rapid heating. This function is time-limited.
- **Timer:** Set a cooking timer for individual zones or a general timer for the hob.

## 4.2 Cooking Zones

The BLIXTSNABB hob features multiple cooking zones, including flexible zones for larger cookware.

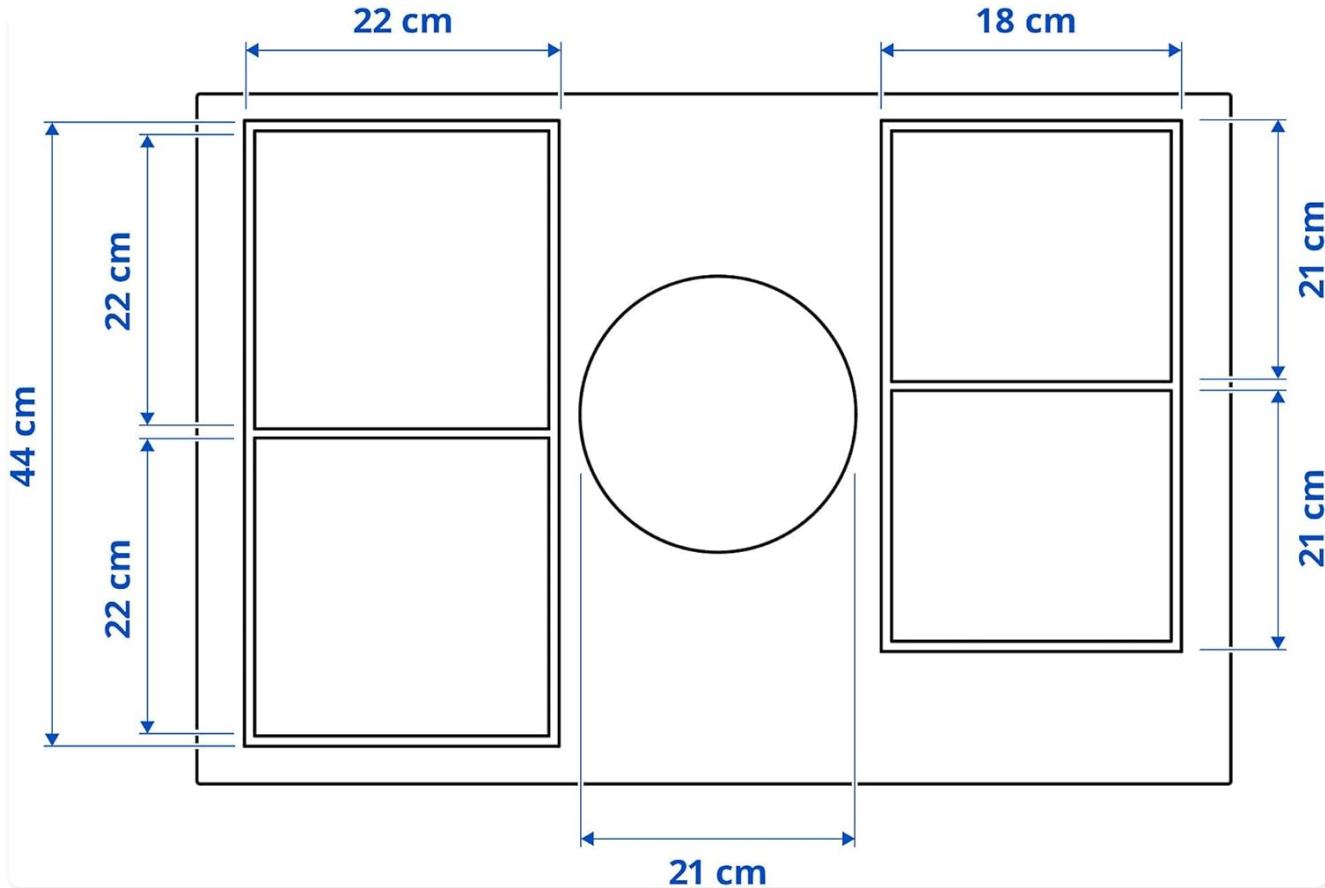


Figure 4.2: Cooking Zone Layout. This diagram illustrates the arrangement of the cooking zones, including the two 22x22 cm multi-flex zones on the left, and two 18x21 cm zones on the right, along with a central circular zone.

- **Multi-Flex Zone:** The left side of the hob features two rectangular zones (22 cm x 22 cm each) that can be combined to form a larger cooking area for griddles or large pots.
- **Bridge Zone:** The right side of the hob also has two zones (18 cm x 21 cm each) that can be linked to accommodate oblong cookware.
- **Central Zone:** A circular zone is available for standard round pots and pans.



Figure 4.3: Single Pot Operation. This image demonstrates the hob in use with a single pot, highlighting the active cooking zone.



Figure 4.4: Multiple Pot Operation. This image shows the hob accommodating two different sized pots on separate cooking zones, illustrating its flexibility.

### 4.3 Using the Hob

1. Place suitable induction cookware centrally on the desired cooking zone.
2. Touch the power button to turn on the hob.
3. Select the cooking zone you wish to activate.
4. Adjust the power level using the slider or +/- controls.
5. To use the Boost function, select the zone and then touch the 'Boost' symbol.
6. To combine zones, select the 'Multi-Flex' or 'Bridge' function for the respective areas.
7. After cooking, turn off the individual zone or the entire hob using the power button. The residual heat indicator will remain lit until the zone is cool.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your BLIXTSNABB induction hob.

- Daily Cleaning:** After each use, wipe the hob surface with a damp cloth and mild detergent. Dry thoroughly with a clean cloth.
- Stubborn Stains:** For burnt-on food or stubborn stains, use a ceramic hob scraper (ensure it is suitable for induction surfaces) and a specialized ceramic hob cleaner. Follow the product instructions.
- Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- Spills:** Clean up spills immediately, especially sugary liquids, as they can cause permanent damage if left to cool on the surface.
- Control Panel:** Wipe the control panel gently with a soft, damp cloth. Ensure it is dry before operating the hob.
- Ventilation:** Periodically check that the ventilation openings underneath the hob are not obstructed.

## 6. TROUBLESHOOTING

If you encounter issues with your BLIXTSNABB induction hob, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Hob does not turn on	No power supply; Hob locked; Overheating protection activated.	Check power connection; Unlock control panel (refer to specific lock function in manual); Allow hob to cool down.
Cooking zone not heating	Cookware not suitable for induction; Cookware not centered; Incorrect zone selected.	Use induction-compatible cookware; Center cookware on zone; Select correct zone.
Display shows an error code (e.g., E0, F1)	Specific internal fault; Overheating; Voltage issue.	Refer to the full error code list in the comprehensive manual (if available); Turn off and restart hob; If persistent, contact service.
Hob makes a buzzing/humming noise	Normal operation of induction technology; Cookware material/construction.	This is normal and not a fault. Some cookware may produce more noise than others.
Hob turns off unexpectedly	Overheating; Spill on control panel; Cookware removed.	Allow hob to cool; Clean control panel; Place cookware back on zone.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

Detailed technical specifications for the BLIXTSNABB induction hob.

Feature	Detail
Model	BLIXTSNABB 78 cm 700 black

Feature	Detail
Brand	Generic
Manufacturer	ProTuning
Manufacturer Reference	IK.604.678.30
ASIN	B0D1CSBGKH
Type	Induction Hob
Assembled Width	78.0 cm
Assembled Depth	52.0 cm
Assembled Height	4.9 cm
Weight	14.78 kg
Cut-out Width	75.0 cm
Cut-out Depth	49.0 cm
Voltage	230 Volts
Cooking Zones	Multi-flex zones, Bridge zones, Central circular zone

## 8. WARRANTY & SUPPORT

Your BLIXTSNABB induction hob comes with a **5-year guarantee**, covering defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

### 8.1 Warranty Terms

For detailed terms and conditions of the guarantee, please refer to the separate guarantee brochure provided with your purchase or visit the manufacturer's official website.

### 8.2 Customer Support

If you require technical assistance, have questions about your product, or need to make a warranty claim, please contact our customer support team:

- Online Support:** Visit the Generic brand support page (search online for 'Generic appliance support').
- Phone Support:** Refer to the contact information provided in your purchase documentation.
- When contacting support, please have your model number (BLIXTSNABB 78 cm 700 black) and ASIN (B0D1CSBGKH) ready.

