

IK.104.756.20

LAGAN Integrated Dishwasher, 45 cm - User Manual

Model: IK.104.756.20

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your LAGAN integrated dishwasher, 45 cm. Please read it thoroughly before using the appliance and keep it for future reference.





Figure 1: LAGAN Integrated Dishwasher, 45 cm

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the dishwasher.
- Do not touch the heating element during or immediately after use.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Keep children away from the dishwasher, especially when the door is open.
- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it has a damaged power cord or plug.
- Only qualified personnel should perform installation and repairs.

SETUP AND INSTALLATION

The LAGAN integrated dishwasher is designed for built-in installation. Proper installation is crucial for optimal performance and safety.

Dimensions and Placement

Before installation, ensure the designated space meets the following dimensions:

Width: 44.8 cm

Depth: 55.0 cm

Height: 83.5 cm (Min. installation height: 84.0 cm, Max. installation height: 88.0 cm)

Cord length: 1.5 m

Weight: 32 kg

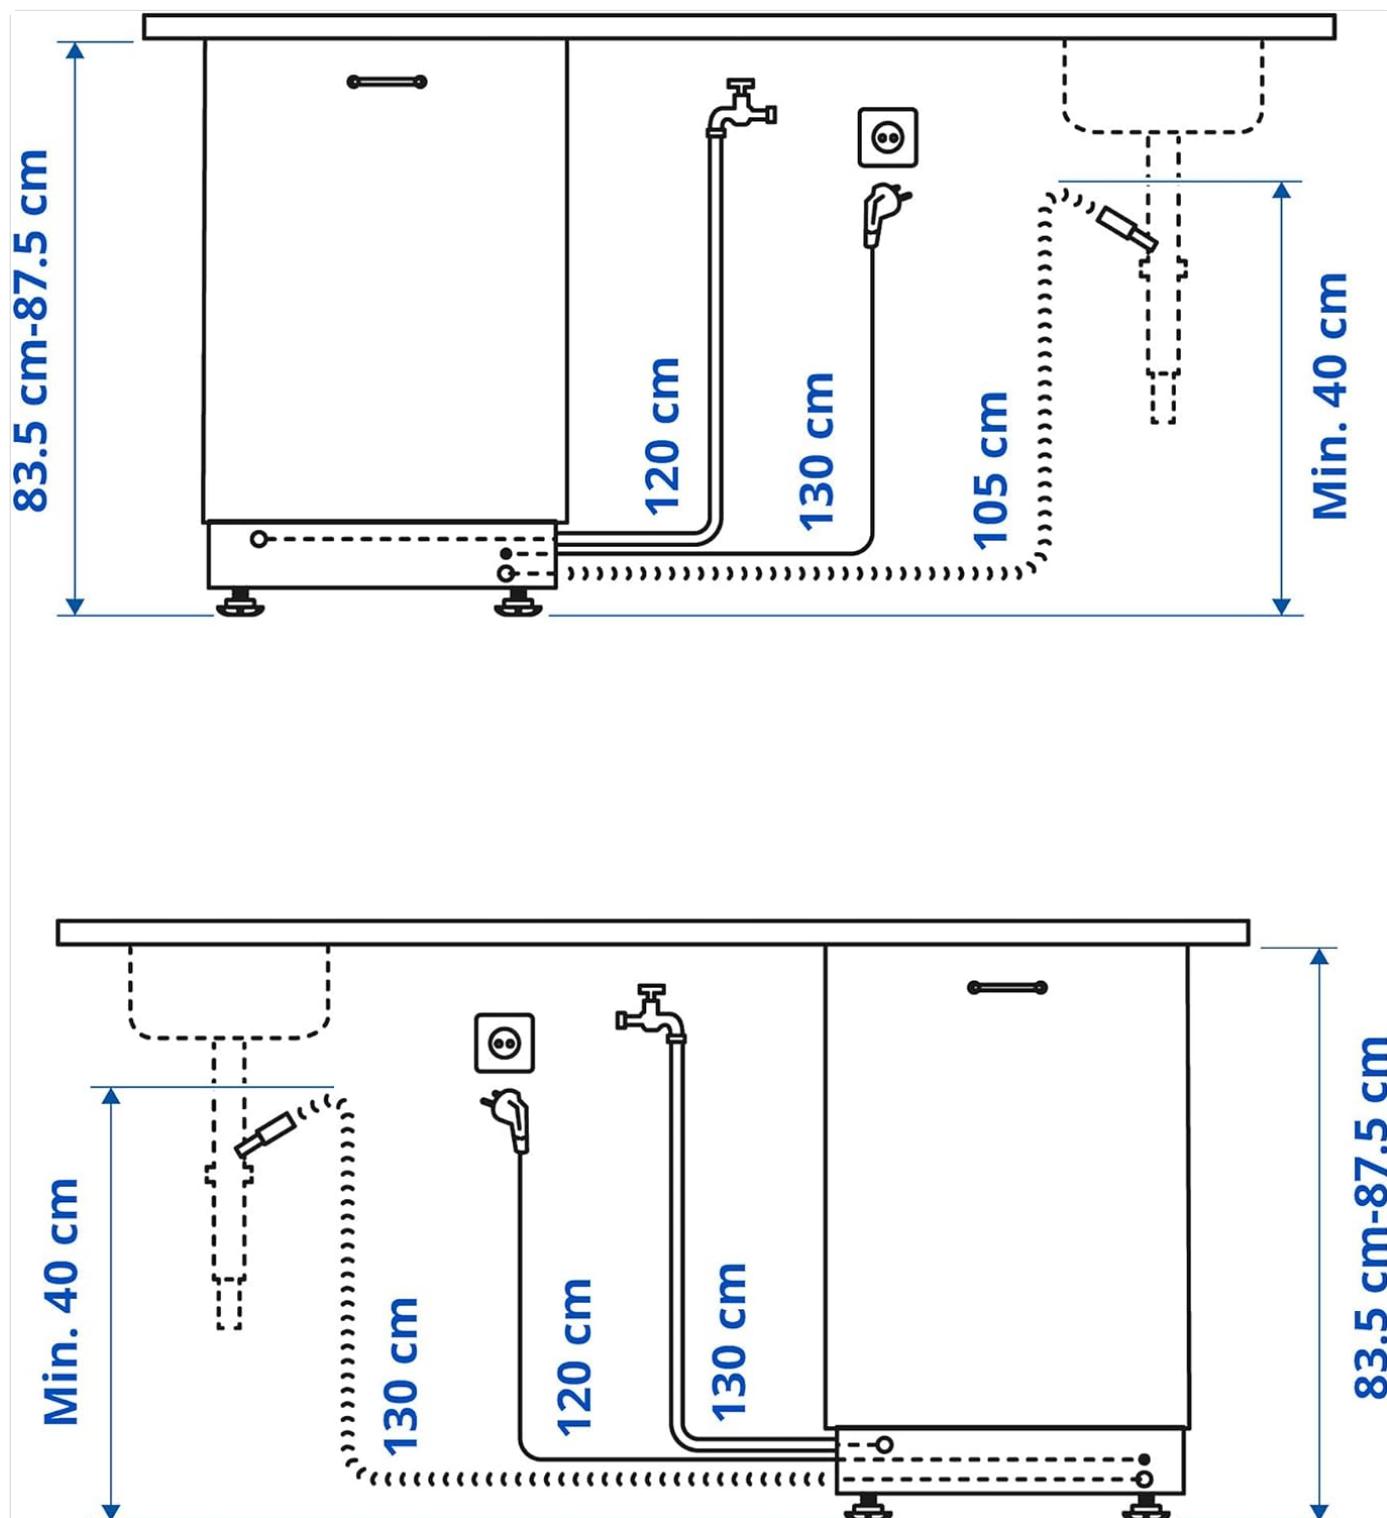


Figure 2: Installation Dimensions and Connection Points

This diagram illustrates the required space and typical connection points for water supply, drainage, and electrical power. Ensure adequate clearance and access for maintenance.

Initial Checks

- Unpack the dishwasher carefully and check for any transit damage.
- Ensure all accessories, including the user manual, are present.
- Verify that the electrical supply, water inlet, and drain connections are readily accessible and meet local regulations.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and loading procedures for efficient dishwashing.

Control Panel Overview



Figure 3: Dishwasher Control Panel

The control panel features a digital display and various buttons for program selection, delay start, and power.

Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes.

- Scrape off large food particles before loading.
- Place larger items in the lower rack and smaller items, glasses, and cups in the upper rack.
- Ensure items do not block the spray arms.
- Use the dedicated cutlery basket for forks, spoons, and knives.



Figure 4: Fully Loaded Dishwasher Racks

This image demonstrates a typical loading configuration for various dishware.

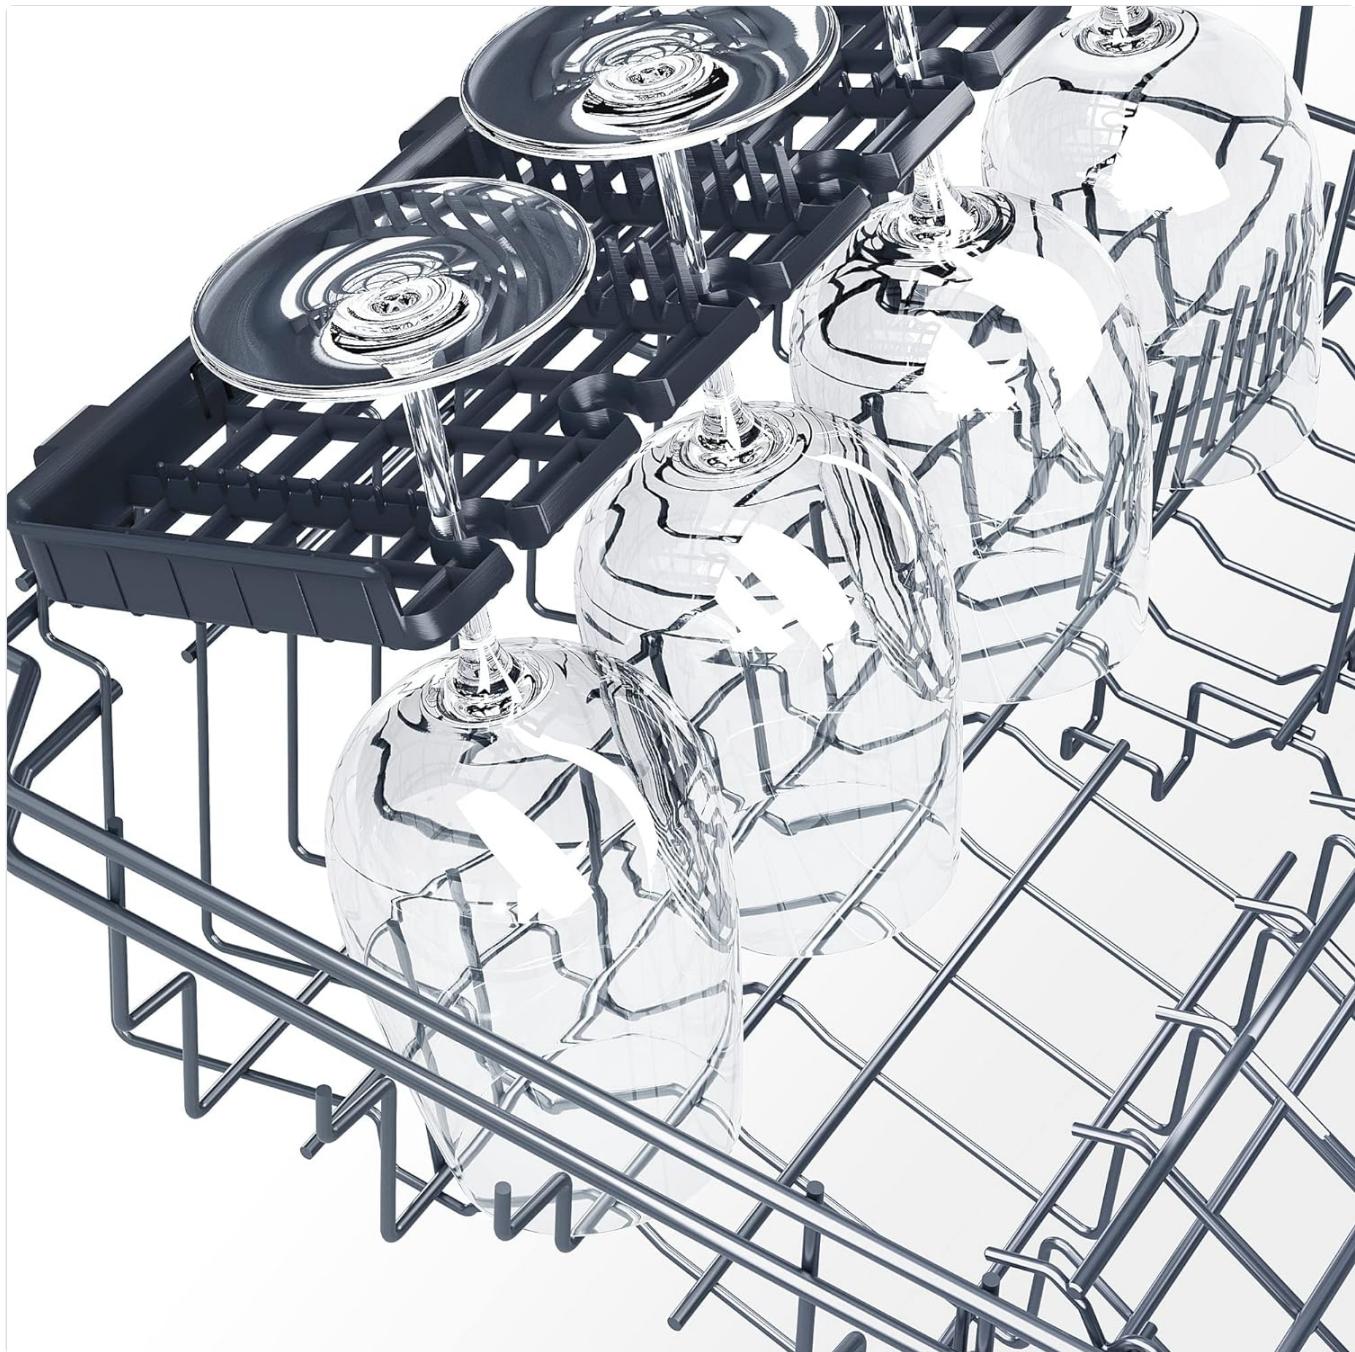


Figure 5: Cutlery Basket Usage

Proper placement of cutlery ensures thorough cleaning and prevents damage.

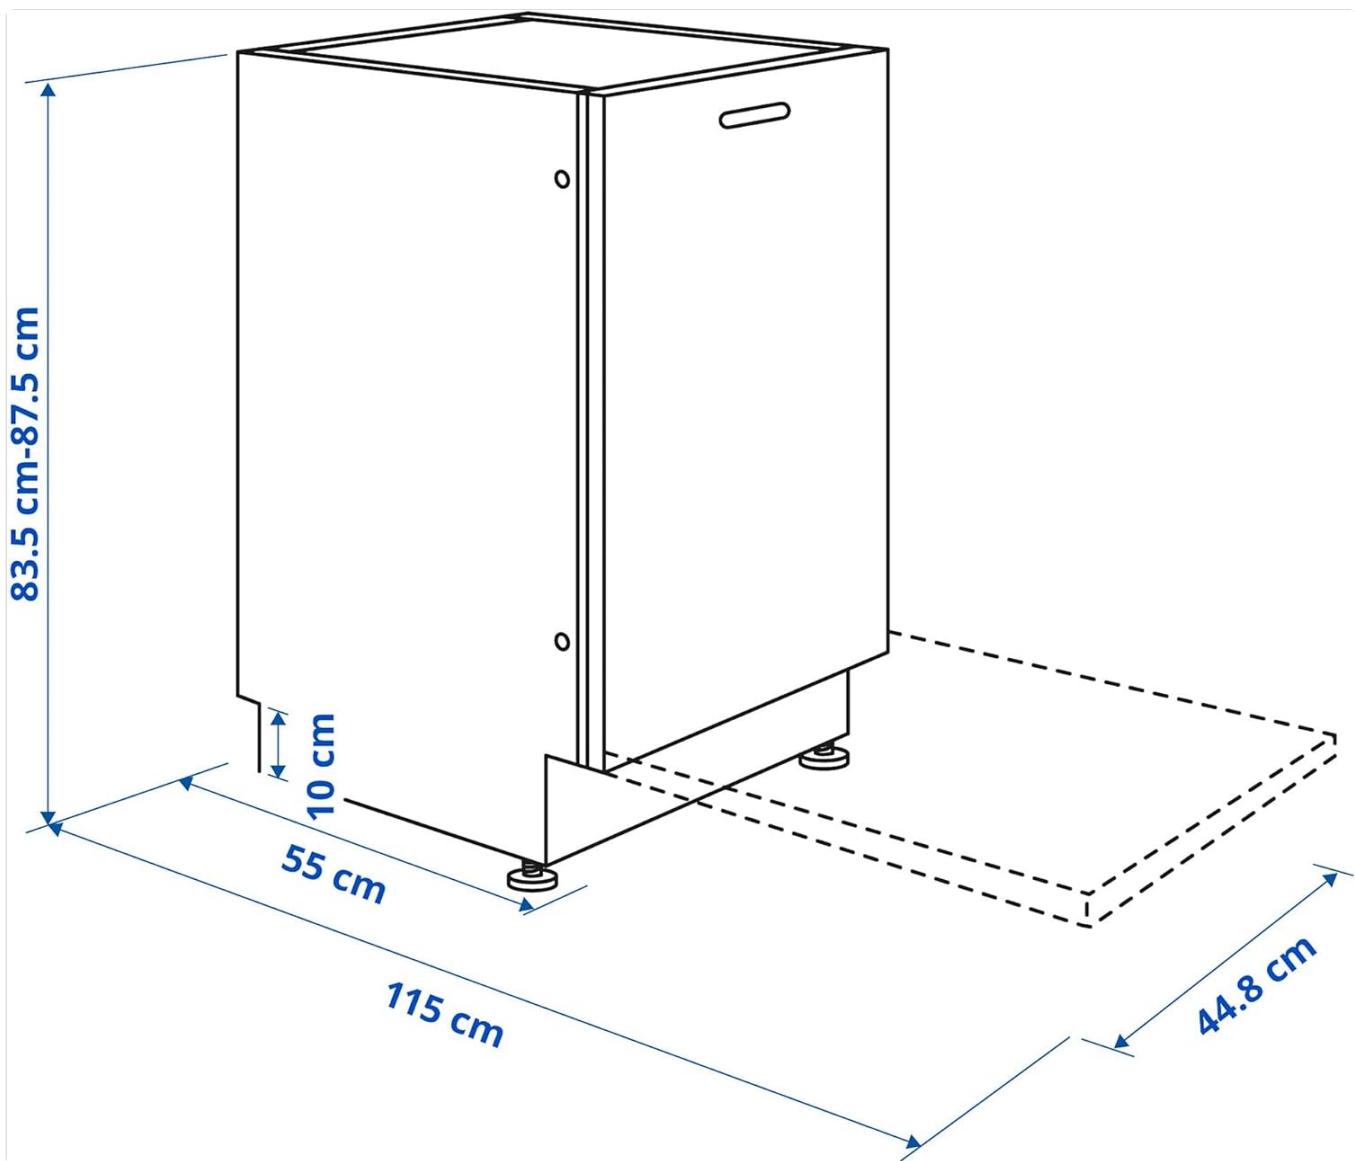


Figure 6: Glassware Placement

Securely place delicate glassware to prevent breakage during the wash cycle.

Selecting a Wash Cycle

The dishwasher offers 3 option cycles and 6 settings for various washing needs. The main cycle options include:

- **Normal:** For everyday dishware and glassware with typical soil.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Rinse:** A quick rinse cycle for dishes that will be washed later.

Refer to the control panel for specific program indicators and select the appropriate cycle based on the load's soil level and type of dishes.

CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your dishwasher and ensure optimal performance.

- **Cleaning the Filters:** Regularly check and clean the filter system at the bottom of the dishwasher to remove food particles.
- **Cleaning the Spray Arms:** Ensure the holes in the spray arms are not clogged. Remove and rinse them if necessary.

- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior Cleaning:** Periodically run an empty cycle with a dishwasher cleaner to remove grease and limescale buildup.
- **Salt and Rinse Aid:** Check and refill the salt and rinse aid dispensers as indicated by the control panel.

TROUBLESHOOTING

Before contacting service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arms and filters, use adequate detergent, select appropriate program.
Water not draining	Clogged drain filter or hose, kinked drain hose.	Clean drain filter, check drain hose for obstructions or kinks.
Excessive noise	Dishes rattling, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	IK.104.756.20
Installation Type	Built-In
Width	44.8 cm
Depth	55.0 cm
Height	83.5 cm
Min. Installation Height	84.0 cm
Max. Installation Height	88.0 cm
Cord Length	1.5 m
Weight	32 kg
Voltage	230 Volts (AC)
Number of Settings	6
Cycle Options	Normal, Intensive, Rinse

Feature	Detail
Material	Polypropylene (PP)
Included Components	User Manual
Special Features	Integrated, Extended Warranty

WARRANTY AND SUPPORT

This LAGAN integrated dishwasher comes with a **2-year guarantee**. Please refer to the guarantee brochure included with your purchase for full terms and conditions.

For technical support, spare parts, or warranty claims, please contact the retailer or manufacturer's customer service.

Ensure you have your model number (IK.104.756.20) and purchase details ready.

© 2024 Generic. All rights reserved.

Related Documents - IK.104.756.20

LAGAN  <small>IKEA INTEGRATED DISHWASHER</small>	<p>IKEA LAGAN Integrated Dishwasher Installation Manual</p> <p>This document provides installation instructions and safety information for the IKEA LAGAN integrated dishwasher. It includes a parts list and step-by-step assembly guidance.</p>
HYGIENISK RENODLAD LAGAN  <small>IKEA</small>	<p>IKEA HYGIENISK RENODLAD LAGAN Integrated Dishwasher Installation Manual</p> <p>Step-by-step installation guide for the IKEA HYGIENISK RENODLAD LAGAN integrated dishwasher. Includes parts list, dimensions, safety warnings, and assembly instructions for fitting the unit into kitchen cabinetry.</p>
FINPUTSAD <small>®</small>  <small>IKEA</small>	<p>IKEA FINPUTSAD Dishwasher User Manual and Installation Guide</p> <p>This comprehensive user manual from IKEA provides essential guidance for the FINPUTSAD dishwasher, covering safety, product details, operation, cleaning, installation, troubleshooting, and warranty.</p>

	<p>Miele Fully Integrated Dishwasher Installation Guide</p> <p>Comprehensive installation instructions for Miele fully integrated dishwashers, covering dimensions, fittings, and safety precautions for a seamless setup.</p>
FINPUTSAD 	<p>FINPUTSAD Integrated Dishwasher User Manual IKEA</p> <p>Comprehensive user manual for the IKEA FINPUTSAD integrated dishwasher. Includes safety instructions, product description, installation guide, daily use, cleaning, maintenance, troubleshooting, technical data, and warranty information.</p>
MEDELSTOR  	<p>MEDELSTOR Dishwasher: User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the IKEA MEDELSTOR dishwasher, covering safety, installation, operation, care, cleaning, and warranty information.</p>