

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [eKids](#) /

› **eKids Barbie Wireless Earbuds (Model Mi-B18BE) Instruction Manual**

eKids Mi-B18BE

eKids Barbie Wireless Earbuds with Microphone

Model: Mi-B18BE

INTRODUCTION

Thank you for purchasing the eKids Barbie Wireless Earbuds. These earbuds are designed to provide high-quality stereo sound for entertainment and educational purposes, featuring a built-in microphone for communication and a portable charging case. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Image: Overview of eKids Barbie Wireless Earbuds, showcasing comfortable fit, portability, rechargeable battery, and 22 hours of total music playtime.

WHAT'S IN THE BOX

- eKids Barbie Wireless Earbuds (Left and Right)

- Barbie Charging Case
- USB-C Charging Cable
- Rubber Ear Cushions (Small, Medium, Large)



Image: Detailed view of the eKids Barbie Wireless Earbuds, charging case, USB-C charging cable, and three sizes of ear cushions.

SETUP

1. Charging the Earbuds and Case

1. Place the earbuds into the charging case. Ensure they are properly seated in their respective slots.
2. Connect the provided USB-C charging cable to the charging port on the case and plug the other end into a USB power source (e.g., computer, wall adapter).
3. The indicator light on the charging case will show the charging status. A full charge provides up to 22 hours of total music playtime with the case.



Image: The Barbie charging case open, revealing the earbuds nestled inside, ready for charging.

2. Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices and select "eKids Barbie Earbuds" (or similar name).
5. Once connected, you will hear an audio confirmation, and the earbuds will be ready for use.

The earbuds utilize Bluetooth Version 5.2 for a stable and efficient wireless connection.

Video: An official eKids video demonstrating the features and usage of the Barbie True Wireless Earbuds, including pairing and controls.

OPERATING INSTRUCTIONS

Touch Controls

The eKids Barbie Wireless Earbuds feature intuitive touch controls for easy management of your audio and calls.

- **Play/Pause Music:** Tap once on either earbud.
- **Answer/End Calls:** Tap once on either earbud during an incoming call or active call.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Activate Voice Assistant:** Triple-tap either earbud.

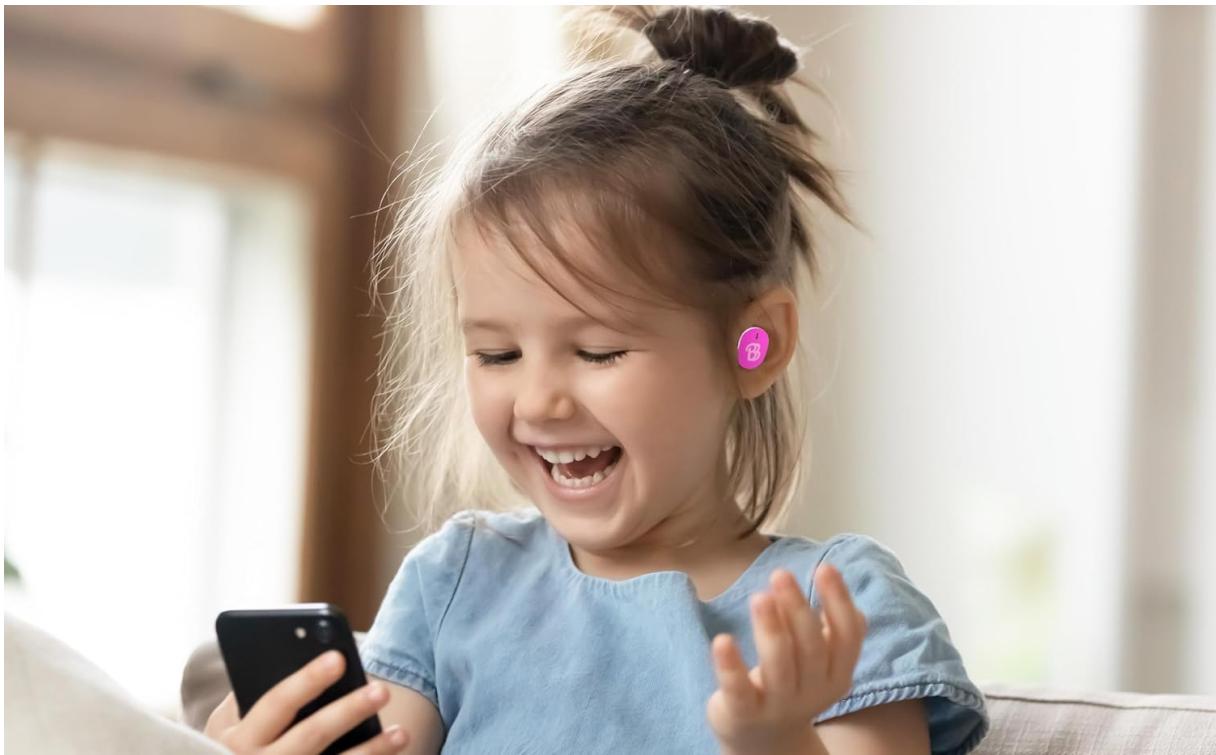


Image: A young user wearing the eKids Barbie Wireless Earbuds, illustrating the ergonomic design and comfortable fit.

MAINTENANCE

Cleaning

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Ensure no moisture enters any openings.

Storage

- Always store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are in the charging case, then open the lid to re-enter pairing mode. Check your device's Bluetooth settings to ensure it's discoverable and try re-selecting the earbuds.
- **No sound:** Check the volume level on both your device and the earbuds. Ensure the earbuds are properly connected to your device via Bluetooth.
- **Charging issues:** Verify the USB-C cable is securely connected to both the case and the power source. Try a different USB-C cable or power adapter. Ensure the charging contacts on the earbuds and inside the case are clean.
- **Uncomfortable fit:** Experiment with the different sizes of rubber ear cushions included to find the most comfortable and secure fit for your ears.

SPECIFICATIONS

Model Name	Mi-B18BE
Connectivity Technology	Wireless (Bluetooth)

Bluetooth Version	5.2
Battery Life (Earbuds)	Up to 22 hours (with charging case)
Control Type	Touch, Media Control
Special Features	Lightweight, Microphone Included, Rechargeable Battery
Ear Placement	In Ear
Material	Plastic
Item Weight	2.08 ounces (0.06 Kilograms)
Manufacturer	KIDdesigns

SAFETY INFORMATION

- Volume Control:** To prevent hearing damage, do not use earbuds at high volume for extended periods.
- Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age.
- Water Resistance:** These earbuds are not water resistant. Avoid exposure to water or moisture.
- Battery Safety:** Do not attempt to replace the battery yourself. Do not expose the product to extreme heat or fire.
- Driving Safety:** Do not use earbuds while driving or operating machinery where the inability to hear ambient sounds could be dangerous.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included in your product packaging or visit the official eKids website. You may also contact the seller, Trusted Kids Products, for assistance.