



Manuals.plus /

› Amazon /

› Amazon Fire HD 8 Kids Tablet User Manual

Amazon Fire HD 8 Kids

Amazon Fire HD 8 Kids Tablet User Manual

Model: Fire HD 8 Kids (2024 Release)

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Amazon Fire HD 8 Kids tablet. Designed for children aged 3-7, this tablet offers a vibrant 8-inch HD screen, robust parental controls, and access to a wide range of age-appropriate content through Amazon Kids+.

fire HD 8 kids

If it breaks, we will replace it



Front view of the Amazon Fire HD 8 Kids tablet in its red Kid-Proof Case, displaying the Amazon Kids+ interface.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- Amazon Fire HD 8 Kids tablet (2024 release)
- Amazon Kid-Proof Case with stand/handle
- USB-C (2.0) charging cable
- 5W power adapter
- Quick Start Guide



Rear view of the Amazon Fire HD 8 Kids tablet in its Disney Pixar Cars themed Kid-Proof Case, showing the integrated stand.

3. SETUP

3.1 Initial Charge

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's port and the 5W power adapter to a wall outlet. A full charge typically takes under 5 hours.

3.2 Power On and Wi-Fi Connection

1. Press and hold the power button until the Amazon logo appears.
2. Follow the on-screen instructions to select your language and connect to a Wi-Fi network. You will need your Wi-Fi password.

3.3 Amazon Account Setup


Register your tablet to an Amazon account. If you do not have one, you will be prompted to create one. This account is used to manage content, settings, and parental controls.

3.4 Setting Up Amazon Kids+ and Parental Controls

The Fire HD 8 Kids tablet includes a subscription to Amazon Kids+. Follow the prompts to create child profiles and configure parental controls. This allows you to:

- Set age filters for content.
- Establish daily time limits for tablet use.

- Prioritize educational content before entertainment.
- Approve or block specific apps and content.

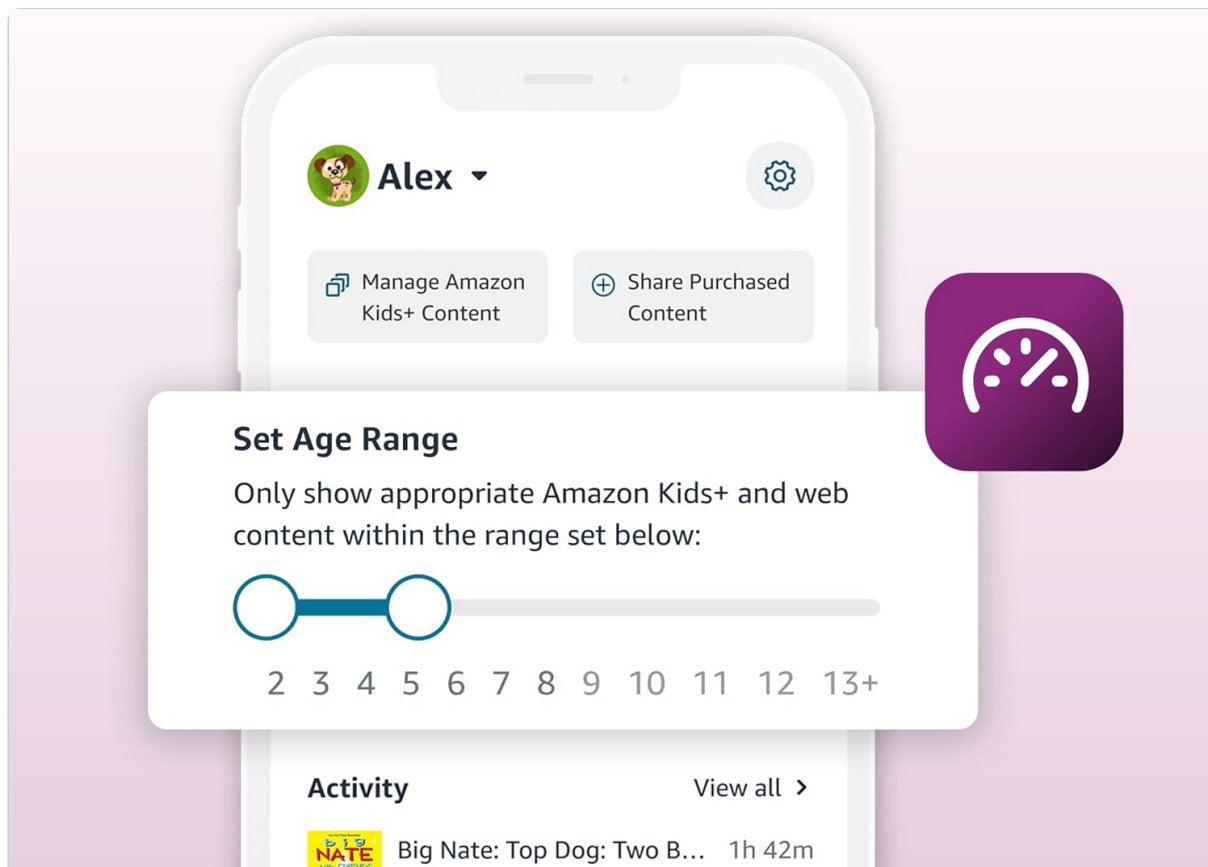

An app made just for parents to help customize their kids' digital experience.

Screenshot of the Amazon Parent Dashboard interface, illustrating options to manage Amazon Kids+ content, share purchased content, and set age ranges for content filtering.

4. OPERATING YOUR TABLET

4.1 Basic Navigation

The tablet uses a touchscreen interface. Swipe to navigate between screens, tap to open apps or select items, and use pinch-to-zoom for images and web pages.

4.2 Using Amazon Kids+

Amazon Kids+ provides access to thousands of ad-free books, interactive games, videos, and apps from trusted brands. Content is curated by age range and evolves with your child's interests.



Content is curated by age range so it evolves with kids' interests as they grow.

Grid display of various educational and entertainment apps available through Amazon Kids+, featuring logos from Bluey, Blippi's Treehouse, Disney, PBS Kids, and Sesame Street.



Select ad-free Disney episodes now included with Amazon Kids+

Screenshot showing various Disney Junior titles available on Amazon Kids+, including Mickey Mouse Mixed-Up Adventures, Mira Royal Detective, and Chip 'n Dale Rescue Rangers.

4.3 Battery Life and Charging

The tablet offers up to 13 hours of battery life for reading, browsing, watching videos, and listening to music. Battery performance varies based on usage and settings. For optimal charging, use the included USB-C cable and 5W power adapter.

4.4 Storage Management

The tablet comes with 32 GB or 64 GB of internal storage. To expand storage, a microSD card (up to 1 TB, sold separately) can be inserted into the microSD slot. Note that some apps may require installation on internal storage.



Learn and play at home and on-the-go

A child using the Amazon Fire HD 8 Kids tablet in a car seat, demonstrating its portability and use for on-the-go learning and entertainment.

5. MAINTENANCE

5.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and tablet body. Avoid abrasive cleaners or solvents. The Kid-Proof Case can be wiped clean with a damp cloth.

5.2 Software Updates

Ensure your tablet's software is up to date for optimal performance and security. Updates are typically downloaded and installed automatically when connected to Wi-Fi. You can manually check for updates in the tablet's settings.

5.3 Kid-Proof Case Care

The included Kid-Proof Case is designed for durability. While it protects against drops and bumps, avoid exposing it to extreme temperatures or harsh chemicals.

6. TROUBLESHOOTING

6.1 Tablet Not Turning On

- Ensure the tablet is fully charged. Connect it to the power adapter and wait a few minutes before attempting to power on.
- Perform a hard reset by holding the power button for 20-30 seconds.

6.2 Wi-Fi Connectivity Issues

- Verify your Wi-Fi password is correct.
- Restart your Wi-Fi router and the tablet.
- Ensure the tablet is within range of the Wi-Fi signal.

6.3 Apps Not Loading or Crashing

- Check for available software updates for the tablet and the specific app.
- Clear the app's cache or data in the tablet's settings.
- Ensure sufficient storage space is available.

6.4 Slow Performance

- Close unused applications running in the background.
- Free up storage space by deleting unnecessary files or moving them to a microSD card.
- Restart the tablet periodically.

For further assistance, refer to the Amazon support website or contact customer service.

7. SPECIFICATIONS

Feature	Description
Display	8" high-definition touchscreen; 1280 x 800 resolution at 189 ppi, HD video playback, with IPS technology
Size (Kid-Proof Case)	8.7" x 7.1" x 1.1" (222 mm x 180 mm x 27 mm)
Weight	18.3 ounces (518 grams)
CPU & RAM	Hexa-core 2.0 GHz with 3GB or 4GB of RAM
Storage	32 GB (25 GB available to user) or 64 GB (54 GB available to user) internal storage; microSD slot for up to 1 TB additional storage
Battery Life	Up to 13 hours of reading, browsing the web, watching videos, and listening to music
Charge Time	Under 5 hours with included 5W adapter; under 3 hours with 9W adapter (sold separately); under 2.5 hours with 15W adapter (sold separately)
Wi-Fi Connectivity	Dual-band Wi-Fi (802.11 a/b/g/n/ac)
Ports	USB-C (2.0) connector, microSD slot
Audio	3.5 mm stereo jack, integrated speaker
Cameras	2 MP front-facing, 5 MP rear-facing with 1080p HD video recording
Bluetooth	Built-in Bluetooth 5.2
Age Range	Ages 3+. WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.
Generation	12th generation - 2024 release

8. WARRANTY AND SUPPORT

8.1 2-Year Worry-Free Guarantee

Your Amazon Fire HD 8 Kids tablet is covered by a 2-year worry-free guarantee. If the tablet breaks, you can return it for a free replacement. This guarantee covers defects in materials and workmanship under normal use. For full details and terms, please refer to the official Amazon warranty information.

8.2 Customer Support

For additional support, troubleshooting, or warranty claims, please visit the Amazon support website or contact Amazon Customer Service. You can find device-specific information and manage your content and devices by visiting Manage Your Content and Devices.