

ADLER EUROPE AD 2839

ADLER EUROPE AD 2839 Hair Clipper User Manual

Model: AD 2839

INTRODUCTION

The ADLER EUROPE AD 2839 Hair Clipper is designed for precise hair cutting, combining advanced technology with user-friendly features. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device.

Key features include a durable titanium head with a ceramic blade, a powerful 2000 mAh battery for extended cordless operation, and an intuitive LED display. The clipper is also IPX6 water-resistant for easy cleaning and includes a turbo mode for enhanced cutting power.

SAFETY WARNINGS

- Avoid use by infants and young children.
- Keep the device away from water sources when not specifically cleaning it.
- Always follow recommended cleaning and maintenance procedures to ensure longevity and hygiene.
- Exercise caution to prevent hair entanglement during operation.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.

PRODUCT COMPONENTS

The ADLER EUROPE AD 2839 Hair Clipper package includes the following items:

- ADLER EUROPE AD 2839 Hair Clipper (main unit)
- Titanium head with ceramic blade (pre-installed)
- 6 comb attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- 3 shading attachments
- USB charging cable (1.2m)
- Cleaning brush

- Lubricating oil



Image: The ADLER EUROPE AD 2839 Hair Clipper displayed with its various comb and shading attachments, cleaning brush, and oil.

SETUP

1. Initial Charging

Before first use, fully charge the hair clipper. Connect the provided USB charging cable to the clipper's charging port and to a compatible USB power adapter (not included). The LED display will indicate the charging status. A full charge provides up to 180 minutes of cordless operation.



Image: A close-up view of the clipper's LED display, showing battery charge percentage and operational icons.

2. Attaching Comb Attachments

Select the desired comb attachment based on the hair length you wish to achieve. The clipper includes 6 comb attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) and 3 shading attachments. Align the attachment with the clipper head and push it firmly until it clicks into place. Ensure it is securely fastened before use.



Image: A detailed view of a comb attachment being fitted onto the clipper head.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button located on the front of the clipper to turn the device on. Press it again to turn the device off.

2. Adjusting Cutting Length

The cutting length is primarily determined by the comb attachment used. For fine adjustments or tapering, the clipper head itself may offer additional settings. Refer to the markings on the clipper for precise length control.

3. Using Turbo Mode

For thicker or more challenging hair, activate the Turbo mode. This increases the motor's power for a more efficient cut. The LED display will indicate when Turbo mode is active.

4. Hair Cutting Technique

Always start with a longer comb attachment if you are unsure of the desired length. Move the clipper against the direction of hair growth for an even cut. For best results, ensure hair is clean and dry unless using the clipper for wet trimming (refer to IPX6 rating for wet use).



Image: A hand demonstrating the ergonomic design of the ADLER EUROPE AD 2839 Hair Clipper during use.

MAINTENANCE AND CLEANING

1. Cleaning the Blades

After each use, turn off and unplug the clipper. Remove the comb attachment. Use the provided cleaning brush to remove any loose hair from the blades and the clipper head. For a more thorough cleaning, the IPX6 water resistance allows you to rinse the blade assembly under running water. Ensure the clipper is completely dry before storage or next use.

2. Lubricating the Blades

Periodically, apply a small drop of the included lubricating oil to the blades. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

3. Storage

Store the clipper and its accessories in a dry, cool place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

- **Clipper does not turn on:** Ensure the device is fully charged. Connect it to the USB charging cable and allow sufficient time for charging.
- **Reduced cutting performance:** Clean the blades thoroughly to remove any trapped hair or debris. Lubricate the blades with the provided oil. Ensure the comb attachment is correctly fitted.
- **Device feels warm during use:** This is normal during extended operation. If it becomes excessively hot, turn off the device and allow it to cool down before resuming use.
- **Unusual noise:** Check for any obstructions in the blade area. Clean and lubricate the blades. If the noise persists, discontinue use and contact customer support.

SPECIFICATIONS

Model Number	AD 2839
Brand	ADLER EUROPE
Power Source	Battery powered
Battery Capacity	2000 mAh
Operating Time	Up to 180 minutes (on a single charge)
Charging Method	USB cable (1.2m included)
Blade Material	Titanium head with ceramic blade
Water Resistance	IPX6
Special Features	LED display, Turbo mode, Ergonomic design, Charge indicator light
Dimensions (L x W x H)	20 x 6 x 20 cm
Weight	350 Grams

Included Combs

6 (3, 6, 9, 12, 15, 18 mm) + 3 shading attachments

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical assistance, please visit the official ADLER EUROPE website or contact their customer service department. Keep your purchase receipt as proof of purchase.
You can find more information on the [ADLER EUROPE Brand Store](#).