

[Manuals.plus](#) /

› [Canon](#) /

› Canon PIXMA TS3720 Wireless All-in-One Printer User Manual

Canon TS3720 (6671C022)

Canon PIXMA TS3720 Wireless All-in-One Printer User Manual

Model: TS3720 (6671C022)

1. PRODUCT OVERVIEW

The Canon PIXMA TS3720 is a compact, wireless all-in-one inkjet printer designed for home use. It offers printing, copying, and scanning functionalities. This printer utilizes a hybrid ink system for sharp black text and vivid color photos, supporting various media types and sizes.



Image 1.1: Front view of the Canon PIXMA TS3720 Wireless All-in-One Printer.

2. SAFETY INFORMATION

Please read all safety instructions before using the printer to ensure safe operation and prevent damage. Keep the printer away from water and excessive heat. Do not attempt to disassemble or repair the printer yourself. Use only recommended power sources and accessories.

- Ensure the printer is placed on a stable, level surface.
- Do not block ventilation openings.
- Keep out of reach of children.
- Unplug the printer from the power outlet before cleaning or if it will not be used for an extended period.

3. WHAT'S IN THE BOX

Upon opening the packaging, verify that all listed components are present:

- PIXMA TS3720 Wireless Home All-in-One Printer
- One Standard PG-275 Pigment Black Ink Cartridge
- One Standard CL-276 Color Ink Cartridge
- 4"x6" Photo Paper Sample Pack (3 Sheets of PP-301)
- Power Cord
- Documentation (including this manual)

WHAT'S IN THE BOX

- PIXMA TS3720 Wireless Home All-in-One Printer
- One Standard PG-275 Pigment Black and One Standard CL-276 Color Cartridge
- 4"x6" Photo Paper Sample Pack (3 Sheets of PP-301)
- Power Cord
- Documentation



Image 3.1: Illustration of the items included in the Canon PIXMA TS3720 product box.

4. SETUP GUIDE

4.1 Initial Setup and Power Connection

Place the printer in a suitable location with adequate space for paper loading and output. Connect the power cord to the printer and then to a wall outlet. Power on the printer using the power button.

4.2 Ink Cartridge Installation

The PIXMA TS3720 uses two easy-to-replace ink cartridges: one black (PG-275) and one color (CL-276). Open the front cover of the printer to access the cartridge installation area. The cartridge holder will move to the center. Gently press down on the empty cartridge to release it, then insert the new cartridge until it clicks into place. Close the front cover.

PIXMA TS3720 Wireless Home All-In-One Printer



WIRELESS



PRINT



COPY



SCAN



HYBRID FINE
INK SYSTEM



COMPACT
SIZE



Canon
PIXMA
PRINT PLAN

HIGHLIGHTED FEATURES

- COMPACT SIZE
- CHROMEBOOK COMPATIBLE
- RELIABLE DUAL BAND WIFI
- 60-SHEET REAR TRAY
- PRINT 5"x5" SQUARE PHOTO
- BORDERLESS PHOTO PRINTING UP TO 5"x7"
- PIXMA PRINT PLAN SUBSCRIPTION ELIGIBLE

CONNECTIVITY

PC + MOBILE DEVICE PRINTING

Compatible with Windows®, Mac, Chromebook, iOS®, and Android™.



WIRELESS



MOBILE PRINTING



Canon
PRINT App



COMPATIBLE INKS



Image 4.1: Steps for installing the PG-275 black and CL-276 color ink cartridges.

4.3 Paper Loading

Load paper into the rear paper tray. The tray can hold up to 60 sheets of plain paper. Adjust the paper guides to fit the paper size. The printer supports various paper types and sizes, including 4"x6", 5"x5" (Square), 5"x7", Letter (8.5"x11"), and Legal (8.5"x14").

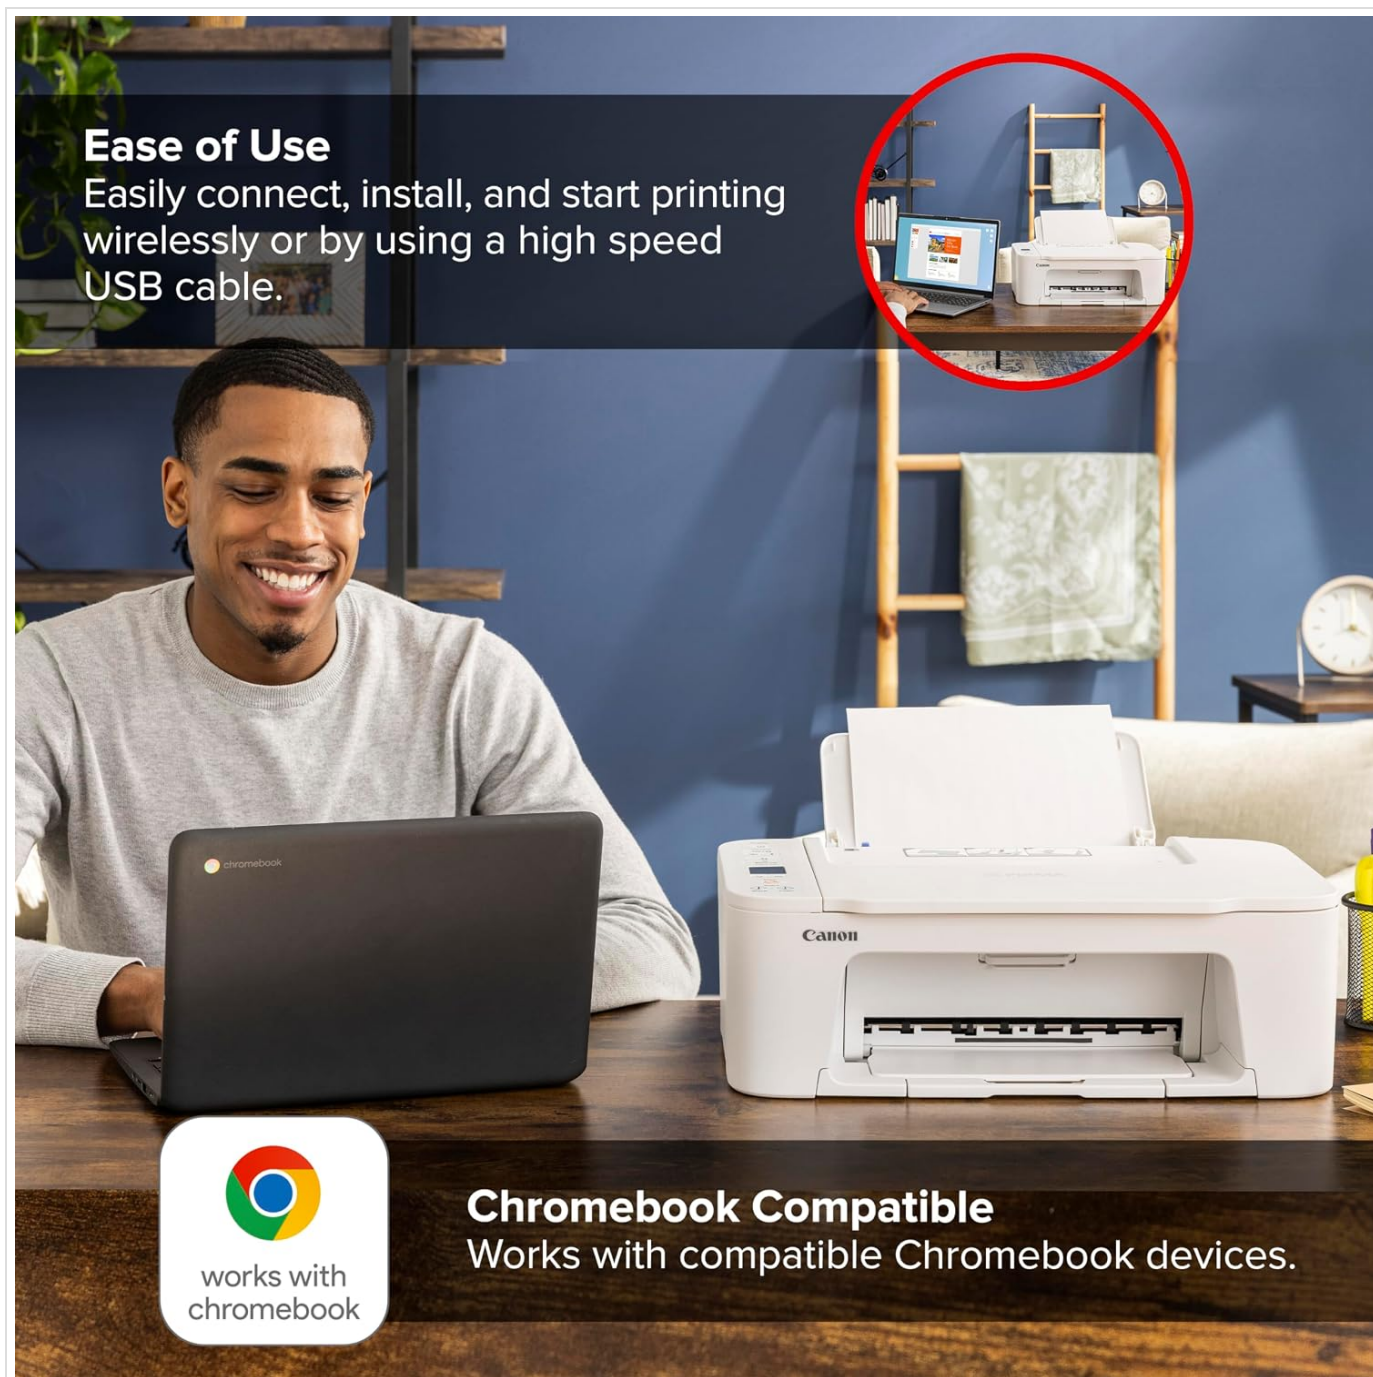


Image 4.2: Demonstrating how to load paper into the rear paper tray.

4.4 Wireless Connectivity

The PIXMA TS3720 offers easy Wi-Fi setup. You can connect to your wireless network without needing a computer. The printer supports Dual Band Wi-Fi (2.4GHz or 5GHz) for a stable connection. Refer to the on-screen instructions on the 1.5" LCD screen for guided setup.

Alternatively, you can connect the printer to your computer via a high-speed USB cable (not included).

5. OPERATING INSTRUCTIONS

5.1 Printing Documents and Photos

The printer offers fast print speeds of approximately 7.7 images per minute for black and white documents and 4 images per minute for color. It supports borderless photo printing up to 5"x7" and 5"x5" square photos.

PRINTER FEATURES



Image 5.1: Overview of printer features including print, copy, scan, and paper tray capacity.

5.2 Copying and Scanning

Utilize the flatbed scanner for copying and scanning documents. Place the document face down on the scanner glass. Use the control panel with the 1.5" LCD screen to select copy or scan functions and adjust settings as needed.

5.3 Mobile Device Printing

Print directly from your compatible mobile devices using various applications and services:

- **Canon PRINT app:** Free application available for iOS and Android devices.
- **Apple AirPrint:** For seamless printing from Apple devices.
- **Mopria Print Service:** For printing from Android devices.
- **Chromebook Compatibility:** The TS3720 works with Chromebooks for easy printing of schoolwork and other documents.

OPERATING COMPATIBILITY

Conveniently print from
your compatible mobile device.



Compatible with: Windows, Mac, Chromebook

Image 5.2: Demonstrating mobile printing capabilities with various operating systems and apps.



Image 5.3: A user operating the Canon PIXMA TS3720 with a Chromebook, highlighting ease of use.

5.4 Creative Printing with PosterArtist Online

Utilize PosterArtist Online, a free web-based software, to create professional posters, banners, and signage. This tool enhances the versatility of your PIXMA TS3720 for various creative projects.

6. MAINTENANCE

6.1 Replacing Ink Cartridges

When ink levels are low, the printer's display will indicate which cartridge needs replacement. Follow the steps outlined in Section 4.2 for safe and proper cartridge installation. Always use genuine Canon PG-275 (black) and CL-276 (color) ink cartridges for optimal performance and print quality.

6.2 Cleaning the Printer

Regularly clean the exterior of the printer with a soft, damp cloth. For internal cleaning, refer to the printer's on-screen

menu or the Canon PRINT app for maintenance options such as print head cleaning or nozzle check. This helps maintain print quality and prevent clogs.

7. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Canon PIXMA TS3720 printer. For more complex problems, refer to the official Canon support website or contact customer service.

Problem	Possible Cause / Solution
Printer not powering on	Ensure the power cord is securely connected to both the printer and a working electrical outlet.
Cannot connect to Wi-Fi	Verify your Wi-Fi network name and password. Ensure the printer is within range of your wireless router. Try restarting both the printer and the router.
Poor print quality (streaks, faded colors)	Check ink levels and replace cartridges if low. Perform a print head cleaning and nozzle check from the printer's maintenance menu or Canon PRINT app.
Paper jams	Remove any jammed paper carefully, following instructions in the full user guide. Ensure paper is loaded correctly and not overfilled in the tray.
Ink runs out quickly	Initial starter cartridges may have less ink. Consider purchasing standard or XL capacity replacement cartridges for longer use. Print settings (e.g., high quality) can also affect ink consumption.
Printer only prints on one side	The Canon PIXMA TS3720 supports single-sided printing only. Manual duplexing may be possible by re-feeding pages.

8. SPECIFICATIONS

Key technical specifications for the Canon PIXMA TS3720 Wireless All-in-One Printer:

Feature	Detail
Model Name	PIXMA TS3720
Item Model Number	6671C022
Functions	Print, Copy, Scan (All-in-One)
Printing Technology	Inkjet (FINE Hybrid Ink System)
Print Speed (Black)	Approx. 7.7 ipm
Print Speed (Color)	Approx. 4.0 ipm
Max Print Resolution	4800 x 1200 dpi (Color & Black/White)
Scanner Type	Flatbed
Max Scan Resolution	1200 x 1200 dpi
Max Input Sheet Capacity	60 sheets (Rear Paper Tray)

Feature	Detail
Supported Media Sizes	4"x6", 5"x5" (Square), 5"x7", Letter (8.5"x11"), Legal (8.5"x14")
Connectivity	Wi-Fi (Dual Band), USB
Display	1.5" Segment LCD
Compatible Operating Systems	Windows, Mac, Chromebook, iOS, Android
Product Dimensions (WxDxH)	17.2" x 12.9" x 5.8"
Item Weight	10.98 pounds

COMPACT DESIGN

Versatile and stylish to fit your workplace needs.

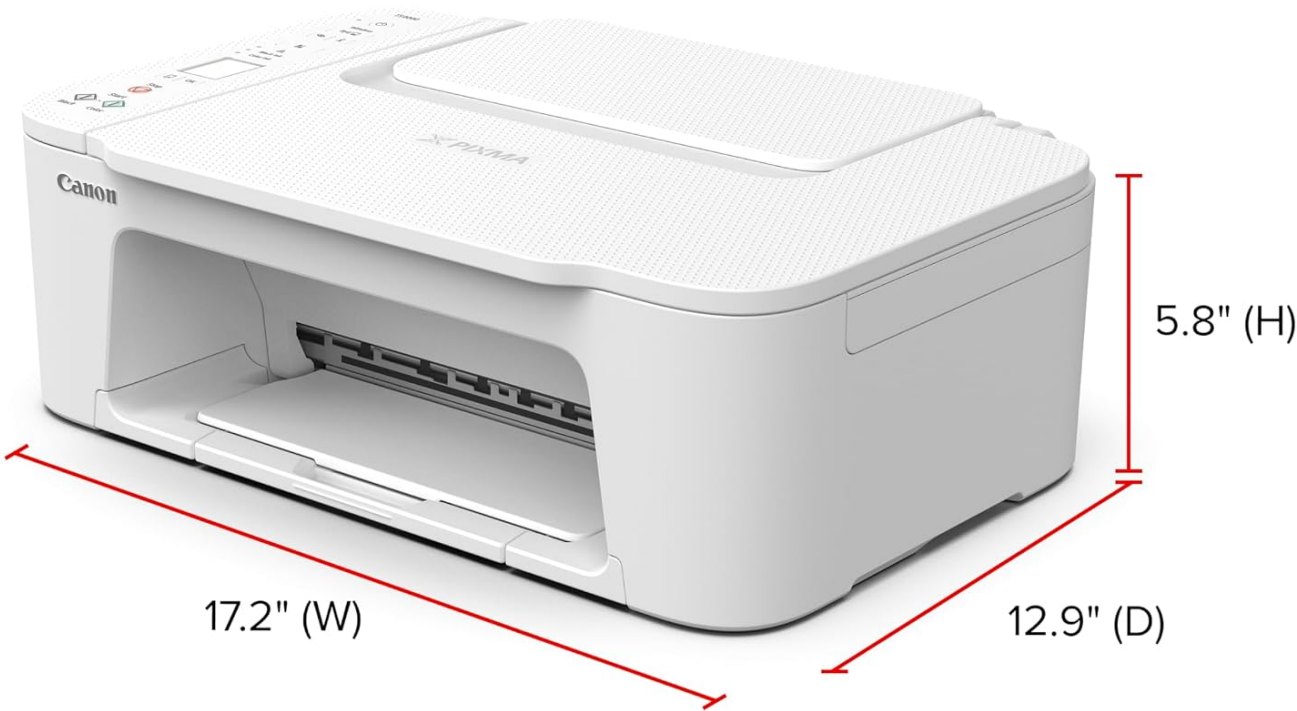


Image 8.1: Physical dimensions of the Canon PIXMA TS3720 printer.

9. WARRANTY AND SUPPORT

The Canon PIXMA TS3720 Wireless All-in-One Printer comes with a 1-year limited warranty. This warranty covers defects in materials and workmanship under normal use. For detailed warranty terms and conditions, please refer to the documentation included with your product or visit the official Canon support website. For technical assistance, troubleshooting, or service inquiries, you can access Canon's Service and Support network.

Online resources, including drivers, software, and FAQs, are available on the Canon website. Extended protection plans may also be available for purchase separately.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset an E24 error code on my Canon PIXMA TS3720 printer?

On Canon PIXMA printers like the TS3720, an E24 error code typically indicates that the protective material or tape was left inside the printer during setup, or there is an issue with the ink...

[Read full answer](#)