

UNERVER M12

User Manual: UNERVER M12 Auto Shut Electric Mason Jar Vacuum Sealer

Your guide to efficient and reliable food preservation.

1. INTRODUCTION

Thank you for choosing the UNERVER M12 Auto Shut Electric Mason Jar Vacuum Sealer. This innovative device is designed to extend the freshness of your food by creating an airtight vacuum seal in mason jars. With its automatic shut-off feature and compatibility with both regular and wide-mouth jars, it offers a convenient and effective solution for food preservation. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the vacuum sealer unit in water or other liquids. Clean with a damp cloth only.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Use only the provided USB-C cable for charging.
- Do not operate the appliance if it has been damaged in any way. Contact customer support for assistance.
- Ensure the mason jar and lid are clean and dry before sealing to achieve an effective vacuum.
- This device is intended for household use only.

3. WHAT'S INCLUDED

Your UNERVER M12 package includes the following components:

- UNERVER M12 Mason Jar Vacuum Sealer Unit
- USB-C Charging Cable
- Jar Lid Opener

- 12 Stickers for labeling
- 5 Regular Canning Lids
- 5 Wide Canning Lids
- 104 Counts Wide Mouth and Regular Mouth Canning Lids and Rings (additional set)
- 2 Pens for labeling lids
- User Manual (this document)



Image: All components included in the UNERVER M12 package, featuring the vacuum sealer, various lids, rings, charging cable, opener, and pens.

4. SETUP GUIDE

4.1 Charging the Device

Before first use, fully charge the UNERVER M12 vacuum sealer. Connect the provided USB-C cable to the charging port on the device and plug the other end into a compatible USB power adapter (not included). The display will indicate the

charging status.



Image: The UNERVER M12 vacuum sealer showing its working time display, start button, and Type-C charging port.

4.2 Component Identification

Familiarize yourself with the main components of the vacuum sealer:

- **Working Time Display / Battery Display:** Shows operational time and battery level.
- **Start Button / Automatic Stop:** Initiates the vacuuming process and automatically stops when sealing is complete.
- **Type-C Charging Port:** For connecting the USB-C charging cable.
- **Sealing Base:** The lower part that attaches to the jar.
- **Vacuum Head:** The upper part containing the motor and controls.



Image: The UNERVER M12 vacuum sealer unit disassembled, showing the main sealing unit and the base, alongside various accessories.

4.3 Jar Compatibility

The UNERVER M12 vacuum sealer features a split design, making it compatible with both regular mouth and wide mouth mason jars. Ensure you use the correct sealing base for your jar type.

- **Regular Mouth Jars:** Suitable for jars with a 2.75 inch (7 cm) opening.
- **Wide Mouth Jars:** Suitable for jars with a 3.4 inch (8.6 cm) opening.

Split Design

Suitable for various mason jars



Image: Diagram illustrating the split design of the UNERVER M12 sealer, showing how it adapts to both 2.75-inch regular mouth and 3.4-inch wide mouth mason jars.

5. OPERATING INSTRUCTIONS

5.1 Preparing Jars and Lids

For optimal sealing, ensure your mason jars and lids are clean and dry. Use new, undamaged canning lids for best results. The included lids have a thickened silicone ring for superior sealing performance.

Canning Lids with Rings Regular Mouth 100% Fit For Regular Mouth Mason Jars



Image: Regular mouth canning lids and rings, showing their dimensions and how they fit onto a mason jar.

Canning Lids with Rings Regular Mouth

100% Fit For Wide
Mouth Mason Jars

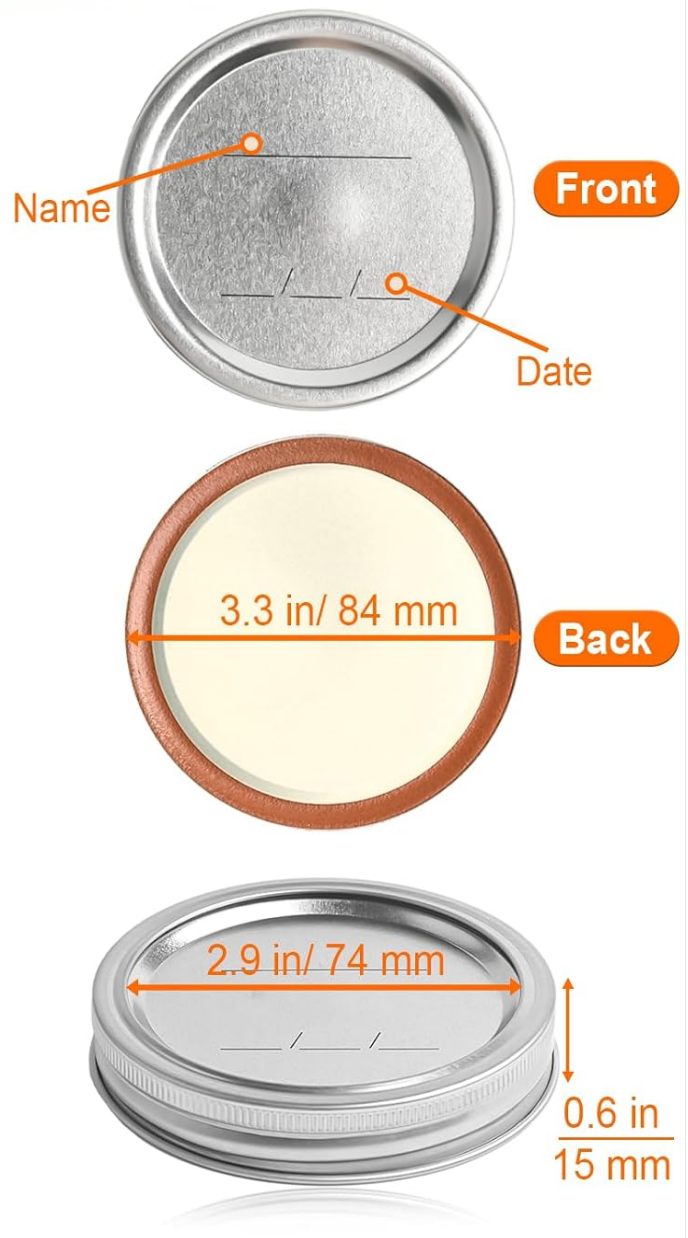


Image: Wide mouth canning lids and rings, detailing their dimensions and showing the front and back of the lid.

5.2 Vacuum Sealing Process

1. Place your food item into a clean, dry mason jar. Do not overfill; leave adequate headspace.
2. Place a new, clean canning lid onto the jar. Ensure the lid is centered and flat.
3. Select the appropriate sealing base (regular or wide mouth) for your jar and attach it to the main vacuum sealer unit if it's not already assembled.
4. Place the assembled vacuum sealer unit firmly onto the canning lid on the jar. Ensure it is seated securely and evenly.
5. Press the Start Button. The device will begin to vacuum the air out of the jar.
6. The vacuum sealer will automatically stop once the optimal vacuum level is achieved. This typically takes a few seconds.
7. Carefully remove the vacuum sealer from the jar. The lid should now be securely sealed and concave.
8. To open a sealed jar, use the provided jar lid opener to gently pry the lid.



Image: The UNERVER M12 vacuum sealer positioned on a mason jar, ready for the sealing process.

5.3 Automatic Shut-off Feature

The UNERVER M12 is equipped with an intelligent automatic shut-off feature. Once the internal sensor detects that a sufficient vacuum has been created within the jar, the device will automatically cease operation. This prevents over-vacuuming and ensures a consistent, reliable seal every time.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the exterior of the vacuum sealer unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water. Ensure the sealing ring on the base is clean and free of food debris.
- **Storage:** Store the vacuum sealer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** For long-term storage, it is recommended to charge the device periodically to maintain battery health.

7. TROUBLESHOOTING

If you encounter any issues with your UNERVER M12 vacuum sealer, please refer to the following table:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device using the provided USB-C cable.
Jar does not seal properly.	- Lid or jar rim is dirty/wet. - Lid is damaged or old. - Sealer not placed firmly on jar. - Food debris on jar rim.	- Ensure jar rim and lid are clean and dry. - Use a new, undamaged canning lid. - Press the sealer firmly and evenly onto the jar. - Clean any food residue from the jar rim.
Vacuuming takes too long or doesn't stop.	Leak in the seal or device malfunction.	Check for proper placement of the sealer. If problem persists, contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model	M12
Brand	UNERVER
Operation Mode	Automatic Vacuum Pumping System
Charging Port	USB-C
Jar Compatibility	Regular Mouth (2.75in) & Wide Mouth (3.4in) Mason Jars
Color	Red (as per product details, though images show blue/grey)

9. WARRANTY AND SUPPORT

UNERVER stands behind the quality of its products. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the warranty card included in your packaging or contact UNERVER customer support.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team. We are committed to providing you with the best service within 24 hours.

Customer Support: Please refer to the contact information provided on the product packaging or the official UNERVER website.

