

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Funistree](#) /

› [Funistree Portable Bluetooth Speaker with Phone Stand User Manual - Model FT-T-YXZJH77-BK-KLE-DE](#)

## Funistree FT-T-YXZJH77-BK-KLE-DE

# Funistree Portable Bluetooth Speaker with Phone Stand

Model: FT-T-YXZJH77-BK-KLE-DE

Brand: Funistree

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Funistree Portable Bluetooth Speaker with Phone Stand. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Bluetooth Speaker
- 1 x Detachable Phone Stand
- 1 x USB Charging Cable
- 1 x Lanyard
- 1 x User Manual

## 3. PRODUCT OVERVIEW

The Funistree Portable Bluetooth Speaker with Phone Stand is a versatile device combining audio playback with a convenient phone holder. It features a compact design, Bluetooth 5.0 connectivity, and a white noise function.

### 3.1 Components

The device consists of two main parts: the speaker unit and the detachable phone stand. The speaker unit has control buttons and a charging port.



Image: Main product view, illustrating the speaker with the phone stand attached and detached.

### 3.2 Control Buttons

The speaker unit features four control buttons on its front panel:

- **+ Button:** Volume Up / Next Track (in Bluetooth mode) / Next Sound (in White Noise mode)
- **- Button:** Volume Down / Previous Track (in Bluetooth mode) / Previous Sound (in White Noise mode)
- **Play/Pause Button ( ):** Play/Pause audio
- **M Button:** Mode Switch / Power On/Off



Le cadeau idéal  
pour les hommes  
papa, mari ou fils



Image: Detailed view of the speaker's control buttons.

## 4. SETUP

### 4.1 Initial Charging

1. Connect the provided USB charging cable to the USB-C port on the speaker unit.
2. Connect the other end of the cable to a 5V USB power adapter (not included).
3. A small red LED indicator will illuminate during charging. It will turn off once the battery is fully charged.
4. Allow approximately 3 hours for a full charge before first use.

### 4.2 Attaching the Phone Stand

The phone stand attaches magnetically to the top of the speaker unit. Align the stand with the magnetic area on the speaker until it securely clicks into place.



Image: Speaker with phone stand attached, demonstrating its use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

- **To Power On:** Press and hold the 'M' button for approximately 2 seconds. You will hear a voice prompt stating "Power-on Bluetooth Mode".
- **To Power Off:** Press and hold the 'M' button for approximately 2 seconds. You will hear a voice prompt stating "Power off".

### 5.2 Bluetooth Mode

1. After powering on, the speaker will automatically enter Bluetooth pairing mode. A voice prompt will say "pairing", and a blue LED ring will flash.
2. On your smartphone, tablet, or computer, enable Bluetooth and search for available devices. Select "H77" from the list.
3. Once successfully paired, a voice prompt will say "connected", and the blue LED ring will remain solid.
4. You can now play audio from your connected device through the speaker.
5. Use the '+' and '-' buttons to adjust volume. Press and hold '+' or '-' to skip to the next/previous track.
6. Press the Play/Pause button ( ) to pause or resume playback.

### 5.3 White Noise Mode

1. While the speaker is on, double-press the 'M' button to switch to White Noise Mode. A voice prompt will say "white noise mode".
2. The speaker will begin playing a soothing sound. There are 10 different white noise sounds available, including Ocean, Wind, Rain, Bird, Heartbeat, Campfire, Thunderstorm, Brook, Fan, and Piano.
3. Use the '+' and '-' buttons to cycle through the different white noise sounds.
4. Press the Play/Pause button ( ) to pause or resume the white noise playback.
5. The device features a timer function (15/30/60 minutes) and a memory function for your last selected sound. Refer to the included quick start guide for specific timer activation instructions.



## HAPPY HOURS WITH FRIENDS

Share Music With Friends Everywhere

Image: Overview of the 10 white noise sounds and timer features.

### 5.4 Phone Stand Usage

The detachable phone stand provides an adjustable viewing angle for your smartphone or tablet. It features non-slip silicone pads to secure your device.

- Place your device onto the stand.
- Adjust the angle of the stand to your preferred viewing position. The stand's hinges allow for flexible positioning.
- The non-slip pads help prevent your device from sliding.

Image: Demonstrating the adjustable angle and stability features of the phone stand.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the speaker and phone stand. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

## 7. TROUBLESHOOTING

If you encounter issues with your device, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on	Low battery	Charge the device for at least 3 hours.
Cannot pair via Bluetooth	Bluetooth not enabled on source device; speaker not in pairing mode; too far from speaker	Ensure Bluetooth is on and visible on your device. Power cycle the speaker to re-enter pairing mode. Keep devices within 10 meters.

Problem	Possible Cause	Solution
No sound	Volume too low; device not connected; incorrect mode	Increase volume on both speaker and source device. Verify Bluetooth connection. Ensure speaker is in Bluetooth mode for music playback.
Phone stand is unstable	Incorrect angle; heavy device; magnetic connection not secure	Adjust the stand to a more stable angle. Ensure the magnetic connection between the stand and speaker is firm. Use the stand on a flat, stable surface.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Funistree
Model Number	FT-T-YXZJH77-BK-KLE-DE
Color	Dark (Foncé)
Speaker Type	Bookshelf (Étagère)
Special Features	Flexible, Hands-free, Portable, Detachable Phone Stand, Magnetic Attachment, Breathing Light, White Noise Function
Connectivity	Bluetooth
Compatible Devices	Smartphones, Tablets, Laptops, Desktop Computers
Compatible Phone Models	iPhone 12, iPhone 11, iPhone X, Samsung Galaxy S21, Samsung Galaxy S20, Samsung Galaxy Note 20 (and similar sized devices)
Product Dimensions (L x W x H)	10 x 10 x 18 cm
Weight	460 grams
Battery Capacity	1500 mAh
Playback Time	Up to 7 hours
Material	Silicone (for non-slip pads)

## 9. SAFETY INFORMATION

- Do not disassemble, repair, or modify the device.
- Keep the device away from water, fire, high temperatures, and corrosive substances.
- Do not expose the device to direct sunlight for prolonged periods.
- Dispose of the device and its battery responsibly according to local regulations.
- Keep out of reach of children.

## 10. WARRANTY AND SUPPORT

---

This product is covered by a standard manufacturer's warranty. For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please retain your proof of purchase for warranty purposes.