

EUGAD 1078BY-6

EUGAD Bar Stool Instruction Manual

Model: 1078BY-6

1. INTRODUCTION

Thank you for purchasing the EUGAD Bar Stool. This manual provides essential information for the safe assembly, operation, and maintenance of your new bar stools. Please read these instructions carefully before assembly and retain them for future reference.

Safety Information

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or faulty.
- Assemble the stools on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly, as this may damage the components.
- Keep children and pets away from the assembly area.
- The maximum weight capacity for each stool is 150 kg (330 lbs). Do not exceed this limit.
- Regularly check all fasteners to ensure they remain tight.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

Unique shell-shaped backrest



High elastic sponge cushion



Sturdy metal frame



Practical footrest



Anti-slip mats

Figure 2.1: Exploded view of bar stool components.

- Padded Seat with Backrest (A)
- Metal Leg Frame (B)
- Footrest Bar (C)
- Assembly Hardware (Screws, Washers, Allen Key) (D)
- Anti-slip Foot Pads (pre-attached or separate) (E)

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your EUGAD Bar Stool. It is recommended to have two people for easier assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, flat surface to prevent damage. Identify each component using the parts list in Section 2.
2. **Attach Leg Frame to Seat:** Align the top of the Metal Leg Frame (B) with the pre-drilled holes on the underside of the Padded Seat (A). Secure with the provided screws and washers (D). Hand-tighten initially.
3. **Install Footrest Bar:** Insert the Footrest Bar (C) into the designated slots on the Metal Leg Frame (B). Ensure it is properly seated and secure it with the remaining screws (D). Hand-tighten initially.
4. **Final Tightening:** Once all components are loosely assembled, place the stool upright on a level surface. Apply gentle pressure to ensure it is stable, then fully tighten all screws using the Allen key (D). Do not overtighten.

5. **Check Stability:** Before use, gently rock the stool to ensure all connections are secure and the stool is stable. If any wobbling occurs, re-check all screws.



Figure 3.1: Assembled bar stools in a typical setting.

4. OPERATING INSTRUCTIONS

The EUGAD Bar Stool is designed for comfortable and stable seating at bar-height counters or tables.

- **Proper Seating:** Sit centrally on the seat, ensuring your weight is evenly distributed. Use the footrest for added comfort and stability.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 150 kg (330 lbs) per stool.
- **Movement:** When moving the stool, lift it rather than dragging it to prevent damage to the floor and the stool's legs.
- **Ergonomic Design:** The shell-shaped backrest is designed to provide support to your lower back and waist. Utilize this feature for optimal comfort during prolonged sitting.

Ergonomic backrest



Figure 4.1: Ergonomic backrest design for lumbar support.

5. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your EUGAD Bar Stools.

- **Cleaning Velvet Upholstery:** For general cleaning, gently vacuum the velvet fabric using a soft brush attachment to remove dust and debris. For spills, blot immediately with a clean, dry cloth. Do not rub. For stubborn stains, use a mild upholstery cleaner following the product instructions, testing on an inconspicuous area first.
- **Cleaning Metal Legs:** Wipe metal legs with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Inspection:** Periodically check all screws and connections to ensure they are tight. Retighten as necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the velvet fabric to fade. Position stools away from direct sunlight when possible.
- **Avoid Sharp Objects:** Keep sharp objects away from the velvet upholstery to prevent tears or snags.

6. TROUBLESHOOTING

If you encounter any issues with your bar stools, refer to the following common problems and solutions.

- **Stool is Wobbly:**

Solution: Ensure all screws are fully tightened. If the issue persists, loosen all screws slightly, sit on the stool to settle the components, then retighten all screws evenly. Check that the floor surface is level.

- **Screws Loosen Over Time:**

Solution: This is normal with furniture use. Regularly check and retighten all screws every few months to maintain stability.

- **Scratches on Floor:**

Solution: Ensure the anti-slip foot pads are properly attached and intact. Replace worn pads if necessary. Avoid dragging the stools; lift them when moving.

7. PRODUCT SPECIFICATIONS

Detailed specifications for the EUGAD Bar Stool Model 1078BY-6.

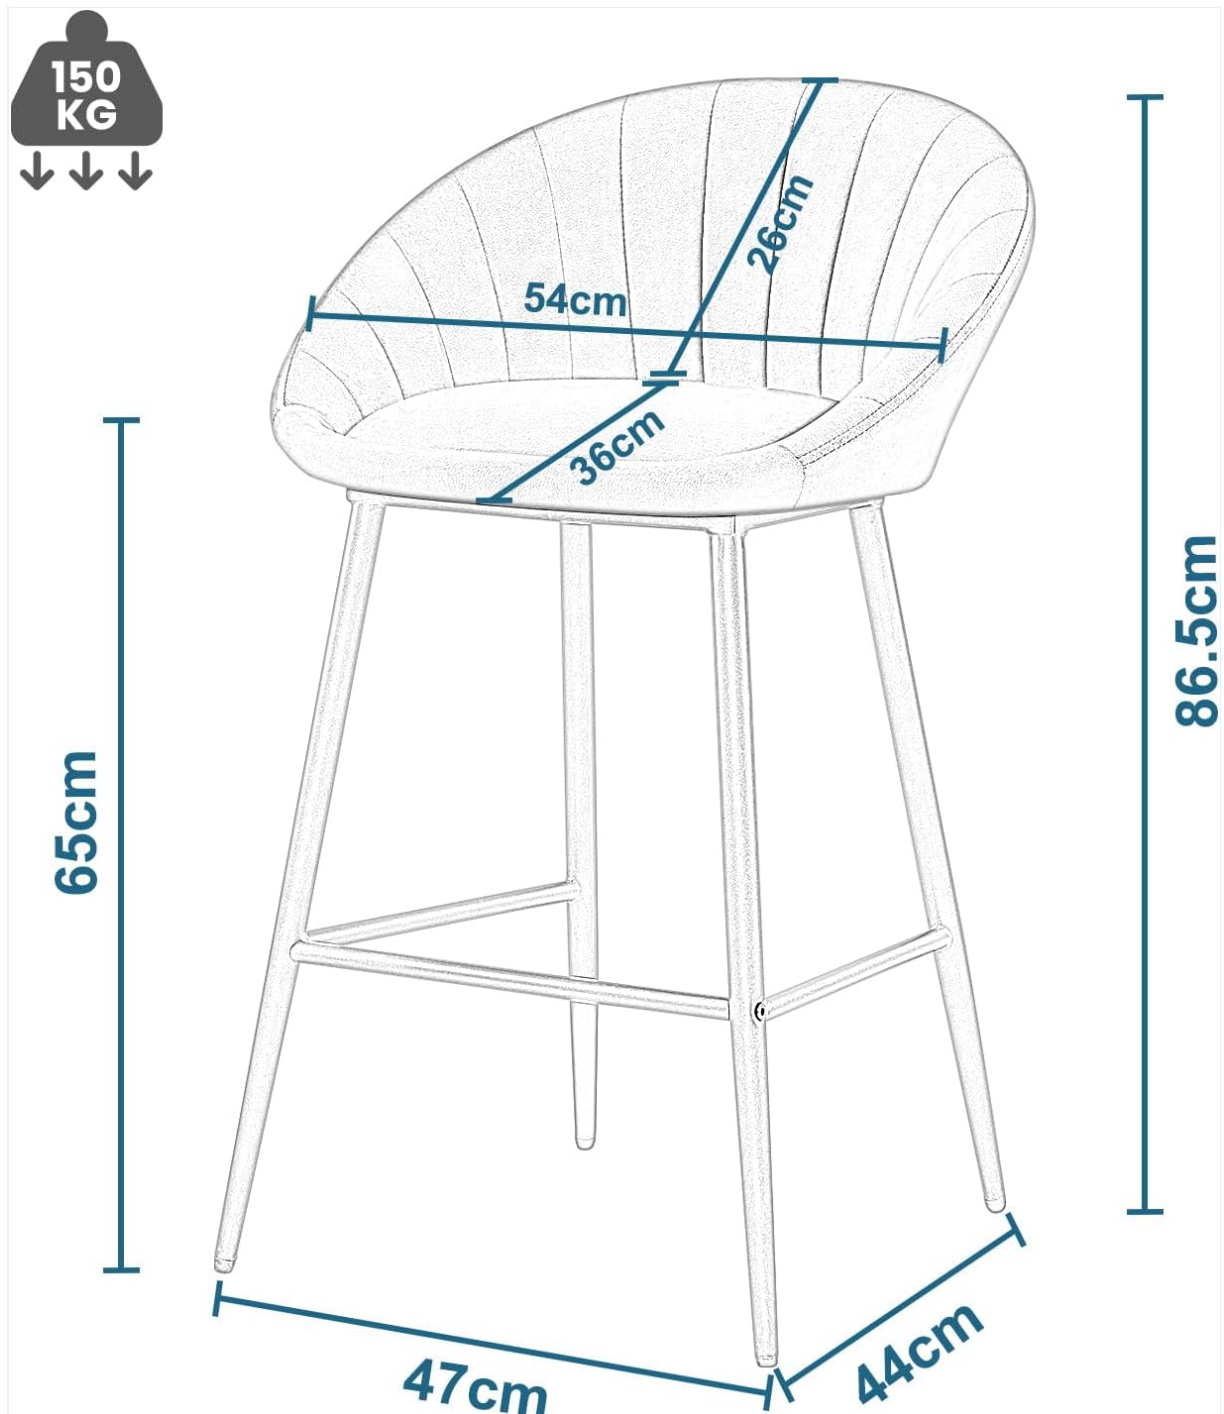


Figure 7.1: Bar stool dimensions.

Feature	Specification
Model Number	1078BY-6
Brand	EUGAD
Color	Black
Overall Dimensions (L x W x H)	49 x 54 x 86.5 cm (19.3 x 21.3 x 34.1 inches)
Seat Height	65 cm (25.6 inches)
Seat Material	Velvet (Chamois)
Frame Material	Metal
Weight Capacity	150 kg (330 lbs)
Item Weight (per stool)	Approx. 7 kg (15.4 lbs) - Total package weight 41.7 kg for 6 stools

8. WARRANTY AND CUSTOMER SUPPORT

EUGAD products are manufactured with quality and durability in mind. While specific warranty details may vary by region and retailer, we stand behind the quality of our products.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact your retailer or EUGAD customer support directly. Please have your model number (1078BY-6) and purchase information ready when contacting support.

For more information, visit the [EUGAD Brand Store](#).