

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SUPRENT](#) /

› [SUPRENT Professional Cordless Hair Clippers HC226BX Instruction Manual](#)

SUPRENT HC226BX

SUPRENT Professional Cordless Hair Clippers

Model: HC226BX | Brand: SUPRENT

PRODUCT OVERVIEW

The SUPRENT Professional Cordless Hair Clippers are designed for precision hair cutting and trimming. Featuring a heavy-duty motor and self-sharpening titanium blades, this kit provides a professional-grade grooming experience for both home and barber use. The cordless design, long-lasting battery, and LED display enhance convenience and usability.



Powerful Yet Lightweight for Comfortable Use

HEAVY-DUTY MOTOR & TITANIUM-COATED BLADES

Image: The SUPRENT hair clipper in action, demonstrating its powerful yet lightweight design with heavy-duty motor and titanium-coated blades for comfortable and efficient use.

SETUP

Charging the Clippers

Before first use, fully charge the hair clipper. The device features a convenient Type-C charging port. A full charge takes approximately 3 hours and provides up to 3 hours of cordless runtime. The LED display will indicate the battery level.

LONG-LASTING BATTERY & LARGE LED DISPLAY

Fast Charging with USB-C Cable

3 hrs Charging Time

180 mins Running Time

 Oil Reminder

 Charging Reminder



Image: Close-up of the SUPRENT hair clipper's LED display showing battery level and charging status, emphasizing its long-lasting battery and fast USB-C charging.

Attaching Guide Combs

Select the desired guide comb for your preferred hair length. The kit includes 6 clipper combs and 3 trimmer attachment combs. Align the comb with the clipper blade and push firmly until it clicks into place. Ensure the comb is securely attached before operation.

VERSATILITY IN HAIRCUTTING

Easily achieve your desired haircut

Adjustable Taper Lever

5 precise settings:

0.5 1 1.5 2 2.5mm



Professional Guide Combs



Image: Illustration of the SUPRENT hair clipper's adjustable taper lever and a selection of professional guide combs, demonstrating versatility in haircutting.

OPERATING INSTRUCTIONS

Power On/Off

To turn the clipper on, slide the power switch located on the side of the device. To turn it off, slide the switch back to its original position.

Adjusting Blade Length

The main clipper features an adjustable blade lever with 5 precise settings (0.5mm, 1mm, 1.5mm, 2mm, 2.5mm) for fine-tuning cutting length. Adjust the lever to achieve the desired closeness of cut.

Using the Trimmer for Precision

The T-blade trimmer is factory-calibrated for a zero-gapped design (close to 0.1mm), ideal for sharp lines, intricate fades, and beard shaping. Use gentle, controlled movements for best results.

FACTORY-CALIBRATED ZERO GAP

Fast Charging with USB-C Cable

Style, Sculpt, and Trim with Ease

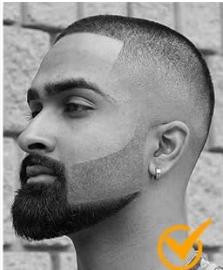


Image: The SUPRENT hair trimmer highlighting its factory-calibrated zero-gap design for precise styling and sculpting of various hairstyles and beard lines.

General Haircutting Tips

- Always start with clean, dry hair.
- Begin with a longer guide comb and gradually switch to shorter lengths if desired.
- Cut against the direction of hair growth for an even cut.
- Overlap strokes to avoid missed spots.

Your browser does not support the video tag.

Video: An official product video from SUPRENT-US DIRECT showcasing the SUPRENT Professional Hair Clipper Kit in use, demonstrating its features and cutting capabilities.

MAINTENANCE

Cleaning the Blades

After each use, turn off the clipper and remove the guide comb. Use the provided cleaning brush to remove

any loose hairs from the blades. For thorough cleaning, the blades can be carefully detached and rinsed under running water, ensuring they are completely dry before reattaching.

Oiling the Blades

Regular oiling of the blades is crucial for maintaining optimal cutting performance and extending the life of your clipper. Apply a few drops of the included blade oil to the teeth of the blades after cleaning. Turn the clipper on for a few seconds to distribute the oil evenly.

Storage

Store the clipper and all accessories in a dry, safe place away from direct sunlight and moisture. Ensure the blades are protected to prevent damage.

TROUBLESHOOTING

- Clipper not turning on:** Ensure the battery is charged. Connect the Type-C cable and charge for 3 hours.
- Poor cutting performance/pulling hair:** Clean the blades thoroughly to remove any trapped hair. Apply blade oil as per maintenance instructions. Ensure the blades are properly aligned.
- Battery not holding charge:** Ensure the charging cable is securely connected to both the clipper and the power source. If issues persist, contact customer support.

SPECIFICATIONS

Product Dimensions	8.7 x 5.9 x 3.1 inches
Item Model Number	HC226BX
Weight	2.03 Pounds
Manufacturer	SUPRENT
Motor Speed	6000rpm
Charging Time	3 Hours
Battery Type	Lithium-Ion
Included Components	Hair Clipper, T-blade Trimmer, Adjustable Blades, Attachment Combs, Clipper Combs

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included in your product packaging or contact SUPRENT customer service directly. Keep your purchase receipt as proof of purchase.

SAFETY INFORMATION

- Avoid use near water.

- Keep blades clean and dry.
- Supervise children when the device is in use or accessible.
