

[Manuals.plus](#) /

› [Greadio](#) /

› Greadio Portable CD Player User Manual

## Greadio CD318

# Greadio Portable CD Player User Manual

Model: CD318

### 1. PRODUCT OVERVIEW

The Greadio Portable CD Player (Model CD318) is a versatile audio device designed for both home and car use. It features dual built-in speakers, Bluetooth 5.3 connectivity, FM radio, USB and AUX input, and a rechargeable 2000mAh battery. The player supports various CD formats and includes anti-skip protection for uninterrupted playback.

# Multi-Function Portable CD Player

With dust cover and remote control



CD Player



Bluetooth 5.3



FM Radio



USB Port



AUX In Play



Earphone Jack



Sleep Timer



2000mAh Battery

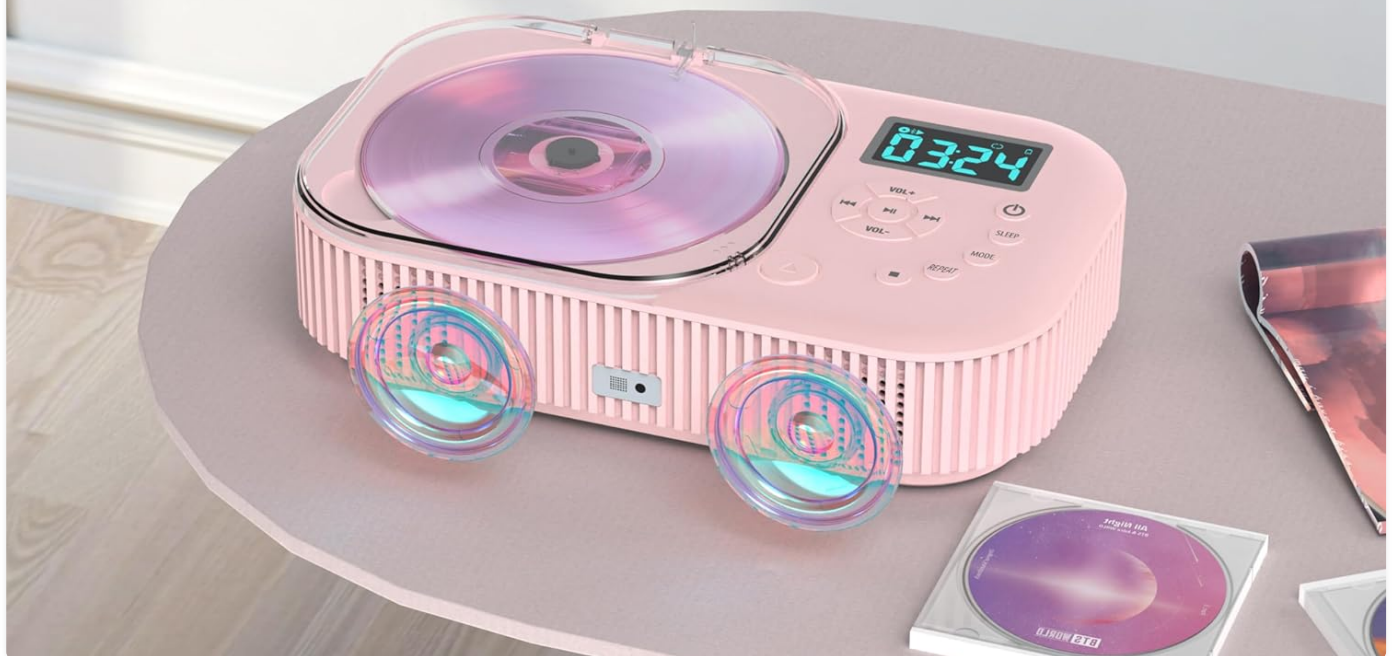


Figure 1: Multi-function Portable CD Player. This image highlights the various capabilities of the device, including CD playback, Bluetooth 5.3, FM Radio, USB Port, AUX In, Earphone Jack, Sleep Timer, and a 2000mAh battery.

## 2. WHAT'S IN THE BOX

- Portable CD Player (Model CD318) x 1
- Remote Control x 1
- Type-C Charging Cord x 1
- AUX Cable x 1
- User Manual x 1

### 3. SETUP

#### 3.1 Powering the Device

The CD player is equipped with a built-in 2000mAh rechargeable battery, allowing for portable use. Before first use, it is recommended to fully charge the device.

- Connect the provided Type-C charging cord to the charging port on the back of the CD player.
- Connect the other end of the Type-C charging cord to a compatible USB power source (e.g., wall charger, car charger, power bank). An adapter is not included.
- A full charge typically takes approximately 3 hours (with a 5V 2A adapter).



Figure 2: Built-in 2000mAh Battery. The image illustrates various charging methods for the portable CD player, including wall charger, car charger, and power bank, emphasizing its convenience for indoor and outdoor use.

#### 3.2 Initial Power On

Locate the ON/OFF switch on the back of the device and slide it to the "ON" position. The display will light up.

## 4. OPERATING INSTRUCTIONS

### 4.1 CD Playback

1. Ensure the CD player is powered on.
2. Press the **MODE** button until "CD" appears on the display.
3. Press the button near the CD cover to open it.
4. Carefully place a CD (CD, CD-R, CD-RW) onto the spindle with the label side facing up.
5. Close the CD cover firmly until it clicks. The player will begin reading the disc.
6. Press the **Play/Pause** button to start or pause playback.
7. Use the **Previous/Next** buttons to skip tracks. Long press these buttons to fast forward or rewind.

Your browser does not support the video tag.

Video 1: How to place and remove CDs correctly. This short video demonstrates the proper method for inserting and removing a CD from the player, ensuring smooth operation and preventing damage.



Figure 3: CD Player in operation. The image shows the portable CD player with a disc inserted, ready for playback, illustrating its compact design and user-friendly interface.

## 4.2 Bluetooth Mode

The CD player can function as a Bluetooth receiver, allowing you to stream audio wirelessly from your phone, tablet, or laptop.

1. Press the **MODE** button until "BT" appears on the display. The "BT" indicator will blink, indicating it's in pairing mode.
2. On your Bluetooth device (phone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "CD Player" from the list of devices to connect. Once connected, the "BT" indicator on the CD player will stop blinking and remain solid.
4. You can now play audio from your device through the CD player's speakers. Use the **Previous/Next** buttons on the CD player or remote to switch tracks.

Your browser does not support the video tag.

Video 2: Portable CD Player with Bluetooth 5.3. This video demonstrates how to connect a mobile device to the CD player via Bluetooth 5.3 for wireless audio streaming.

## 5.3 Bluetooth CD Player

Bluetooth receiving and transmitting, fast to connect



Figure 4: Bluetooth 5.3 CD Player. The image shows the CD player wirelessly connected to a smartphone, tablet, and laptop, illustrating its Bluetooth receiving and transmitting capabilities for fast connection.

### 4.3 FM Radio

1. Press the **MODE** button until "FM" appears on the display.
2. Use the **Previous/Next** buttons to tune to your desired FM frequency.
3. To preset a station, press the **REPEAT** button to enter preset settings. Use **Previous/Next** to select a storage location (P01-P99), then press **REPEAT** again to confirm.

# Enjoy FM Radio Time

Listen to all kinds of information at any time



Figure 5: Enjoy FM Radio Time. The image depicts the CD player in an indoor setting, highlighting its FM radio function for listening to various types of information like weather, traffic, news, music, and sports.

## 4.4 USB Playback

1. Insert a USB flash drive into the USB port on the back of the CD player.
2. Press the **MODE** button until "USB" appears on the display.
3. The player will automatically detect and play audio files from the USB drive.

## 4.5 AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX input port on the back of the CD player using the provided AUX cable.
2. Press the **MODE** button until "AUX" appears on the display.
3. Audio from your external device will now play through the CD player's speakers.

## AUX Connection



## USB Playback



Figure 6: AUX Connection and USB Playback. This image illustrates how to connect external devices via AUX cable and play music from a USB drive, showcasing the player's versatile input options.

### 4.6 Remote Control Operation

The included remote control allows for convenient operation from a distance of up to 33 feet.

- **Power:** Turn the device on/off.
- **Mode:** Switch between CD, Bluetooth, FM, USB, and AUX modes.
- **Volume +/-:** Adjust the volume level.
- **Previous/Next:** Skip tracks or tune FM stations.
- **Play/Pause:** Start or pause playback.
- **Repeat:** Cycle through repeat modes (Repeat All, Repeat One, Random).
- **EQ:** Select different equalizer modes (Pop, Rock, Jazz, Classic, Flat).
- **Sleep:** Set the sleep timer.

# CD Player with Remote Control

Supported formats: CD\CD-R\CD-RW



Program



Repeat All



 
Random



In Order



Repeat  
a track



A-B  
Repeat



Figure 7: CD Player with Remote Control. This image displays the portable CD player alongside its remote control, highlighting supported playback formats and remote functionality for convenient use.

## 4.7 Sleep Timer

The sleep timer allows you to set the player to automatically turn off after a specified duration.

1. Short press the **SLEEP** button to enter the sleep timing settings.
2. Press the **SLEEP** button repeatedly to select the desired sleep time (10, 20, 30, 40, 50, 60, 70, 80, 90 minutes).
3. Wait for five seconds for the setting to confirm automatically. The player will turn off after the selected time.

# Supports 0-90mins timer shutdown

Supports 9 Timed Shutdown Settings Fall asleep with your favorite music

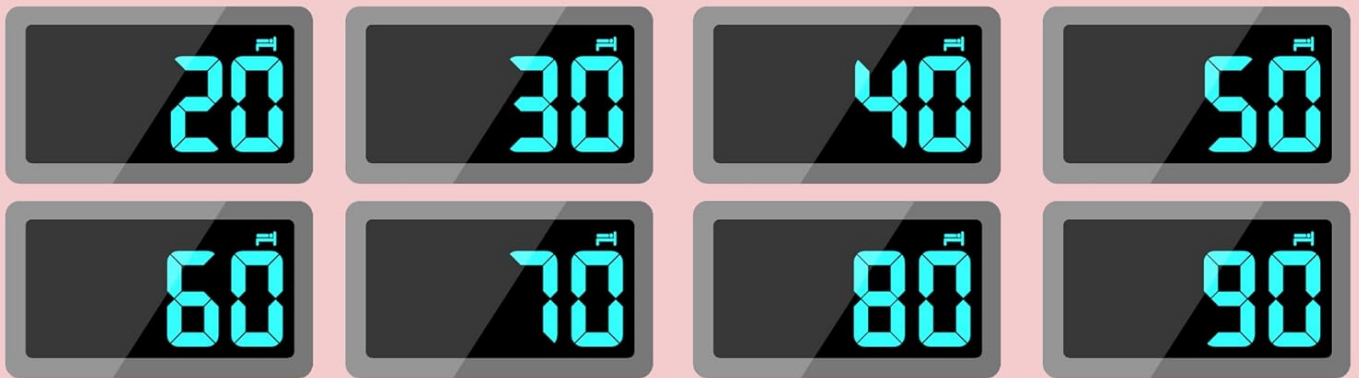


Figure 8: Supports 0-90 mins timer shutdown. This image illustrates the sleep timer function, allowing users to set the device to turn off automatically after a chosen duration, promoting energy saving and convenience.

## 5. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Do not expose the CD player to extreme temperatures, humidity, or direct sunlight.
- Handle CDs carefully by the edges to prevent scratches. Store them in their cases when not in use.
- If the lens needs cleaning, use a specialized CD lens cleaner disc.

## 6. TROUBLESHOOTING

| Problem                     | Possible Cause                                                                               | Solution                                                                                                          |
|-----------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Device does not power on.   | Battery is depleted; ON/OFF switch is off.                                                   | Charge the device fully. Ensure the ON/OFF switch on the back is in the "ON" position.                            |
| CD skips or does not play.  | CD is dirty, scratched, or inserted incorrectly; anti-skip buffer overwhelmed.               | Clean the CD. Ensure the CD is placed correctly. Avoid excessive vibration during playback.                       |
| No sound from speakers.     | Volume is too low; device is muted; incorrect mode selected.                                 | Increase volume. Check if the device is muted. Ensure the correct mode (CD, BT, FM, USB, AUX) is selected.        |
| Bluetooth pairing fails.    | Device is too far; Bluetooth is not enabled on external device; incorrect pairing procedure. | Ensure the CD player is in Bluetooth mode and within range. Enable Bluetooth on your external device and re-scan. |
| FM radio reception is poor. | Weak signal; interference.                                                                   | Adjust the position of the device. Try tuning to a stronger station.                                              |

## 7. SPECIFICATIONS

- **Model Number:** CD318
- **Brand:** Greadio
- **Connectivity Technology:** Bluetooth 5.3, Auxiliary, USB
- **Color:** Pink
- **Speaker Type:** Stereo
- **Power Source:** Battery Powered, Type-C Powered
- **Battery:** 1 Lithium Polymer battery (included), 2000mAh
- **Charging Time:** Approx. 3 hours (5V 2A)
- **CD Playback Time:** 6+ hours
- **Bluetooth Playback Time:** 8+ hours
- **USB Playback Time:** 7+ hours
- **Earphone Mode Playback Time:** 12+ hours
- **Anti-Skip Protection:** 40 seconds for CD, 120 seconds for MP3
- **Item Weight:** 1.26 pounds
- **Package Dimensions:** 10.08 x 7.4 x 2.48 inches
- **Country of Origin:** China

## 8. WARRANTY & SUPPORT

Greadio offers a 12-month warranty for this product. For any questions or support needs, please contact our U.S. based customer service team, available 24/7.

Contact information can typically be found on the product packaging or the official Greadio website.

© 2024 Greadio. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question