

OUTON B0D1G1PPL6

OUTON Boho Rattan Tripod Floor Lamp with Shelves

Model: B0D1G1PPL6

INTRODUCTION

Thank you for choosing the OUTON Boho Rattan Tripod Floor Lamp with Shelves. This versatile and stylish lamp is designed to enhance your living space with its unique aesthetic and customizable lighting features. Crafted from high-quality solid wood and featuring hand-woven rattan shades, it offers both decorative appeal and practical functionality with integrated shelving and smart control options. Please read this manual carefully before assembly and operation to ensure safe and optimal use of your new floor lamp.

SETUP INSTRUCTIONS

The OUTON Tripod Floor Lamp is designed for quick and easy assembly, typically taking around 6 minutes without requiring additional tools. Follow these steps for proper setup:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the packing list are present.
2. **Assemble the Lamp Base:** Attach the wooden legs to the central lamp pole using the provided screws. Ensure all connections are secure.
3. **Install Shelves:** Slide the circular shelves onto the lamp legs at the designated heights. Secure them in place according to the instructions.
4. **Assemble the Lampshade:** The lamp includes two shades: an inner fabric shade and an outer hand-woven rattan shade. First, assemble the inner white linen lampshade by attaching it to its frame. Then, fasten the rattan lampshade around the inner shade using the provided screws and cable ties.
5. **Attach Lampshade to Base:** Secure the assembled lampshade to the top of the lamp pole.
6. **Insert LED Bulb:** Screw the included 9-watt, 800-lumen LED bulb into the E26 bulb base.
7. **Connect Power:** Plug the power cord into a standard electrical outlet.



Figure 1: Assembly steps for the OUTON Tripod Floor Lamp.

Your browser does not support the video tag.

Video 1: Detailed assembly guide for the Boho Floor Lamp.

Your browser does not support the video tag.

Video 2: Assembly and feature overview of the OUTON Boho Rattan Tripod Floor Lamp.

OPERATING INSTRUCTIONS

Your OUTON Floor Lamp offers multiple ways to control its lighting to suit your preferences:

- **Remote Control:** Use the included remote control to power the lamp on/off, adjust brightness (stepless dimming from 5% to 100%), and change the color temperature (from warm white 3000K to cool white 6000K). The remote also features a memory function that saves your last preferred settings.
- **Pull Chain Control:** A traditional pull chain is available for basic on/off functionality.
- **Smart Home Integration:** When paired with a compatible smart outlet (sold separately), this lamp can be integrated with smart home systems such as Apple HomeKit, Google Home Assistant, and Alexa for voice control and advanced scheduling.
- **Timer Function:** The remote control includes a 1-hour timer function for convenience.

Ours ★★★★★	VS	★ Others
<ul style="list-style-type: none"> ✓ Double Shelf ✓ Offers More Storage Space 		<ul style="list-style-type: none"> ✗ Single Shelf ✗ Limited Storage Space
<ul style="list-style-type: none"> ✓ Thicker Leg ✓ More stability, no more wobbling 		<ul style="list-style-type: none"> ✗ Lamp Pole are too Thin ✗ Tip over Easily
<ul style="list-style-type: none"> ✓ Better Design and Protection against Impacts and Injuries 		<ul style="list-style-type: none"> ✗ Easy to Injure if Bumped
<ul style="list-style-type: none"> ✓ Double-layered Lampshade for Better Eye Protection 		<ul style="list-style-type: none"> ✗ Thin, Single-layer Lampshade Damages the Eyes

Figure 2: Dimmable brightness and 4 color temperature options.



Figure 3: Timer and memory functions for personalized lighting.

MAINTENANCE

To ensure the longevity and appearance of your OUTON Floor Lamp, follow these simple maintenance guidelines:

- **Cleaning the Wood Base:** Wipe the wooden tripod base and shelves with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Lampshade:** Gently dust the rattan and fabric lampshades with a soft brush or a vacuum cleaner with a brush attachment. Do not use wet cloths on the rattan.
- **Bulb Replacement:** The included LED bulb has a lifespan of up to 50,000 hours and typically does not require frequent replacement. If replacement is ever needed, ensure the lamp is unplugged and use an E26 base LED bulb of similar wattage (max 9W) to maintain optimal performance and safety.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, discontinue use and contact customer support.

TROUBLESHOOTING

If you encounter any issues with your OUTON Floor Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not properly plugged in; bulb loose or faulty; power outage.	Ensure the power cord is securely plugged into a working outlet. Check if the bulb is screwed in tightly. Test the outlet with another device. Replace the bulb if necessary.
Remote control not working.	Remote batteries are dead or incorrectly inserted; remote out of range; obstruction between remote and lamp.	Replace the remote control batteries (2x AAA, not included). Ensure batteries are inserted with correct polarity. Point the remote directly at the lamp. Reduce distance between remote and lamp.

Problem	Possible Cause	Solution
Light flickers or dims unexpectedly.	Loose bulb connection; unstable power supply; incompatible dimmer (if using a smart outlet).	Tighten the bulb. Check the power outlet for stability. If using a smart outlet, ensure it is compatible with dimmable LED lamps.
Lamp is unstable or wobbles.	Legs not fully tightened; uneven surface.	Ensure all screws connecting the legs to the lamp pole and shelves are fully tightened. Place the lamp on a flat, even surface.

If these solutions do not resolve the issue, please contact OUTON customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	OUTON
Model Number	B0D1G1PPL6
Product Dimensions	17.7"D x 17.7"W x 61"H
Item Weight	13 Pounds
Base Material	Wood
Shade Material	Rattan, Linen
Light Source Type	LED
Wattage	9 watts
Bulb Base	E26
Power Source	Corded Electric
Control Method	Remote, Touch, Pull Chain
Special Features	Adjustable Color Temperature, Dimmable, Memory Function, Timer, Wi-Fi Connectivity (via smart outlet)
Included Components	LED Bulb, Remote Control, Lampshade
Indoor/Outdoor Usage	Indoor

WARRANTY INFORMATION

OUTON products are built to last. We stand behind the quality of our products and offer reliable assistance.

For specific warranty details regarding your OUTON Boho Rattan Tripod Floor Lamp, please refer to the documentation included in your product packaging or contact our customer support team.

CUSTOMER SUPPORT

Should you have any questions, require assistance with assembly, operation, or troubleshooting, or need to inquire about warranty services, please do not hesitate to contact the OUTON customer support team. We are committed to providing friendly and prompt assistance.

Please visit the official OUTON website for contact information or refer to the contact details provided in your product packaging.